

Subject: U-Scan Exit Tray “Cash” Label

Problem

Exit Bill Tray has been mistaken as a trash bin.

Solution


Place “Cash” label to exit bill tray.

This change/ modification should be done on an As-Needed basis.

Part Number

11000677- “Cash” Label


This is a ‘Peel & Stick’ label that is also used elsewhere on the U-Scan. It contains both the Cash and Coupon label, though only the Cash portion is used for this modification.

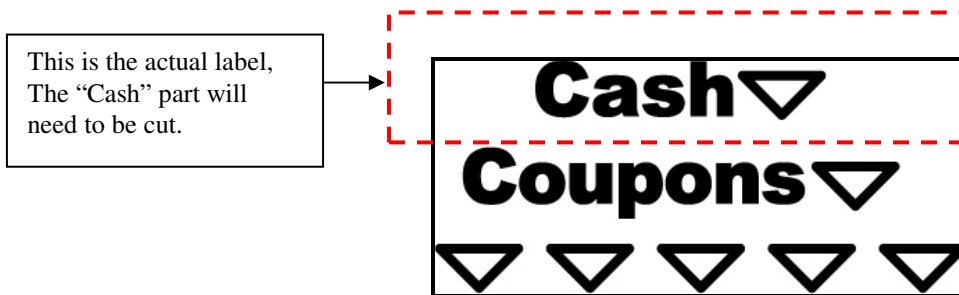

Instructions

1. Clean area with alcohol wipes. (See Picture below).
2. Cut “Cash” portion from the label.
3. Carefully Peel back the solid white non-sticky part of the label.
4. Center over tray about 1” above top of tray.
5. Stick label to tray and firmly rub back and forth with your finger a couple of times..
6. Slowly peel back the label. Done.

<u>INQUIRIES TO:</u>	DATE
Fujitsu Transaction Solutions Inc.	_____
Exchange: Sustaining Engineering	Sustaining Engineering _____
Mail: Fujitsu USA04, Sustaining Engineering	_____
FAX: 858-731-4781 (7888-4781)	Product Manager _____
Internet: SustainingEngineering@ftxs.fujitsu.com	_____
FTP: ftp://ftp.ftxs.fujitsu.com/	Author _____
Original signature copies maintained by Sustaining Engineering.	

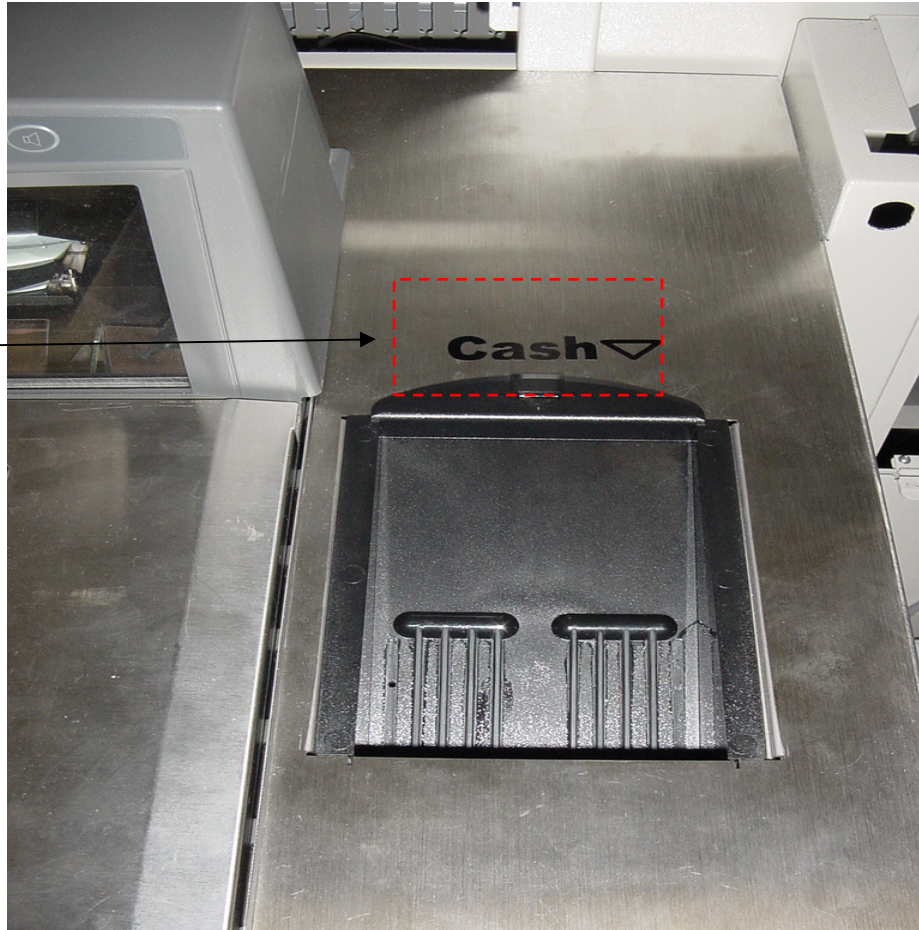

Clean Area with
alcohol wipes.