

**Subject: Removing the Stacked Monitor Stand from a TP3K Controller**

**Overview**


A revision has been made to the installation and removal instructions of Stacking Stand.

**Problem**

On occasions the removal of the stacking stand has been quite difficult causing extreme force to be applied and at times breaking off the brackets.

**Instructions:**

The LCD monitor has notches in the bottom of the stand that fit over the LCD brackets attached to the top of the controller. There are also latches in the bottom of the stand that provide additional security for the stacked stand. These are held in place with locking screws.

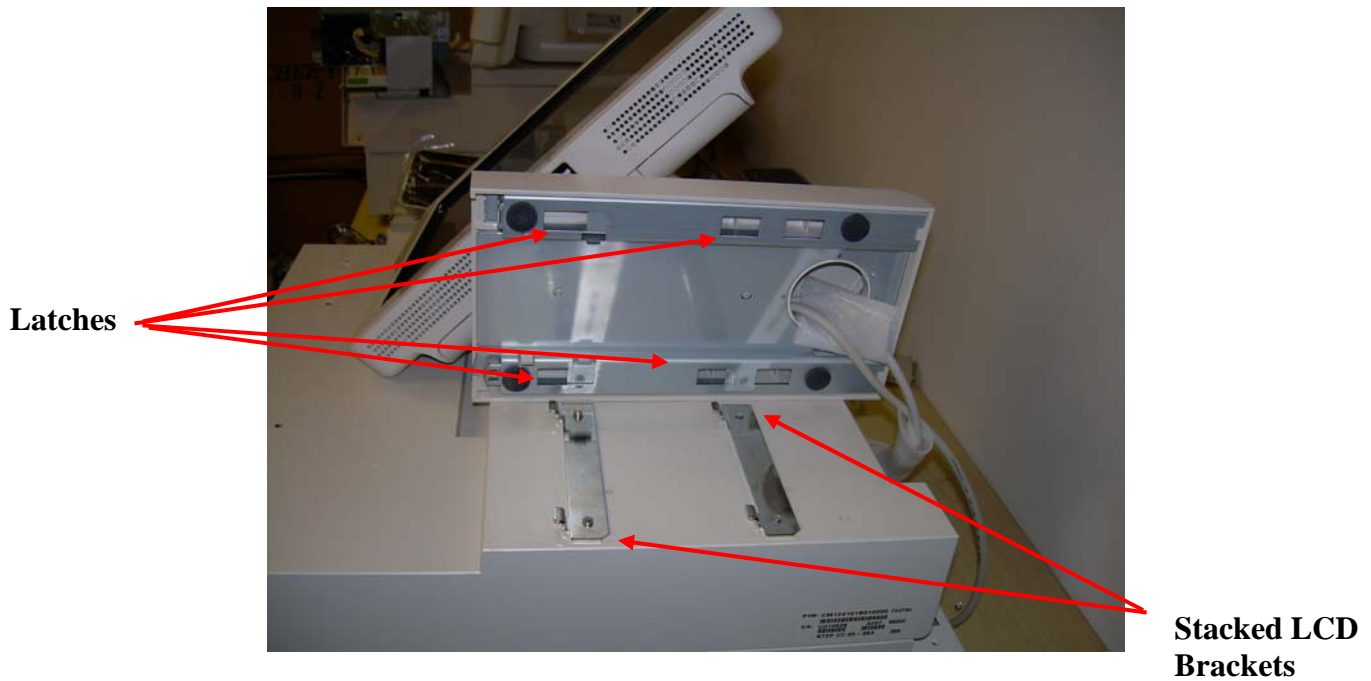

<u>INQUIRIES TO:</u>		DATE
Fujitsu Transaction Solutions Inc.		_____
Exchange:	Sustaining Engineering	Sustaining Engineering
Mail:	Fujitsu USA04, Sustaining Engineering	_____
FAX:	858-731-4781 (7888-4781)	Product Manager
Internet:	<a href="mailto:SustainingEngineering@ftvc.fujitsu.com">SustainingEngineering@ftvc.fujitsu.com</a>	

1. When removing the stand for maintenance, remove the cosmetic cover on the front of the stand.



2. Once the front cover is removed, there are two screws locking the latches in place. Loosen the screws to unlock the latches and ensure that the screws are fully loose enabling the latches to be pulled forward completely.



- When removing the stand for maintenance, ensure that the latches are pulled completely forward.



- While pulling the latches forward the entire monitor and stand need to be firmly lifted up as it is being pulled forward for the stand to clear the brackets.



*\*NOTE: It is important to make sure that the latches are completely pulled forward so that the stand will be able to clear its way from the brackets.*



**Latches**

**Brackets**

