

NCR Programming Bar Codes

This section contains the following bar code sequences:

- [Programming the NCR Scanner Scale](#) (page 22): Scan these bar codes as part of the troubleshooting Task List. Includes the sequence for enabling Code 128 bar codes.
- [Programming the NCR 7875z with Integrated EAS \(Meijer Stores\)](#) (page 43): Scan these bar codes as part of the sequence to program the NCR 7875z at Meijer stores.
- [Enabling Periodical Code Extensions 2 and 5](#) (page 53): Scan these bar codes to enable periodical code extensions 2 and 5. This allows the Scanner Scale to read special bar codes found on some books and magazines.
- [Enabling the Check Digit Setting for the NCR](#) (page 61): Scan these bar codes if you need to enable the Check Digit setting.
- [Disabling the Check Digit Setting for the NCR](#) (page 66): Scan these bar codes if you need to disable the Check Digit setting.
- [Converting the Scanner Scale to Metric](#) (page 72): Scan these bar codes to convert the Scanner Scale from Imperial to Metric.
- [Post-Calibration Bar Codes \(Metric ONLY\)](#) (page 76): Scan these bar codes after you calibrate a metric Scanner Scale.



You must disconnect and reconnect the Scanner Scale power cable before you scan the programming bar codes.

For Meijer stores with an integrated EAS device, scan the following sequences:

- [Program the NCR](#) (page 22)
- [Programming the NCR 7875z with Integrated EAS \(Meijer Stores\)](#) (page 43)
- [Enabling Periodical Code Extensions 2 and 5](#) (page 53)


Program the NCR

Programming the NCR Scanner Scale


NOTE: *If the Scanner Scale that you are working on or replacing is **Checkpoint Ready**, reconnect the Checkpoint cable. U-Scan technicians are not responsible for troubleshooting the Checkpoint system if the system is defective.*

Scan the bar codes on the following pages in order to program the NCR.


Programming Mode

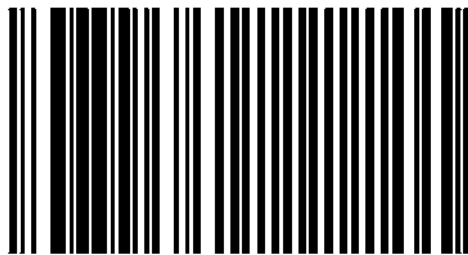


Hex 3

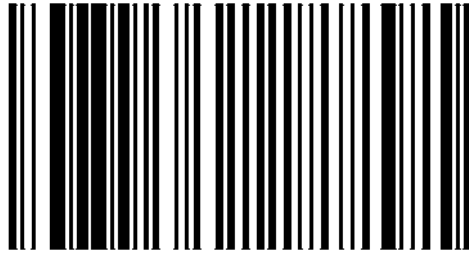


HEX 4 Tag

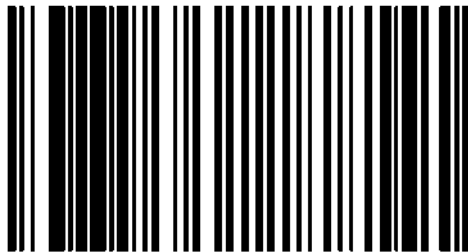


HEX 0 Tag

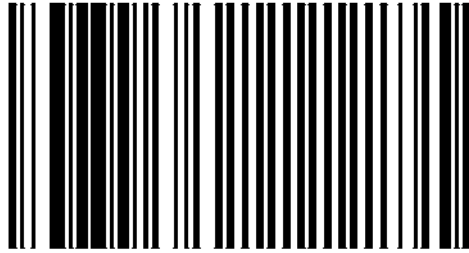


Save and Reset Tag

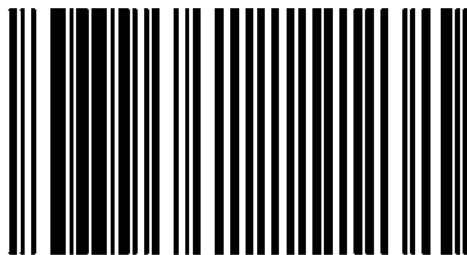


Default Tag

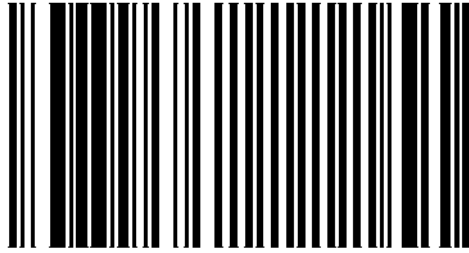


Programming Mode

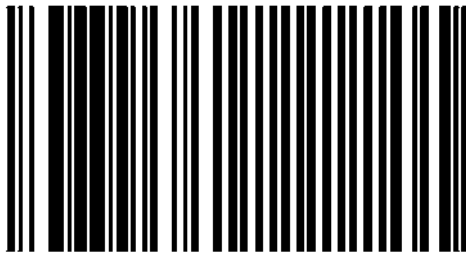


HEX 1 Tag

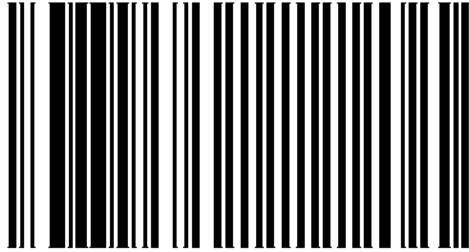


HEX 0 Tag

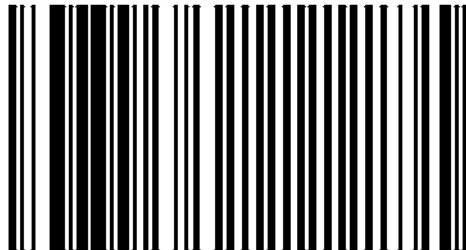


HEX 5 Tag

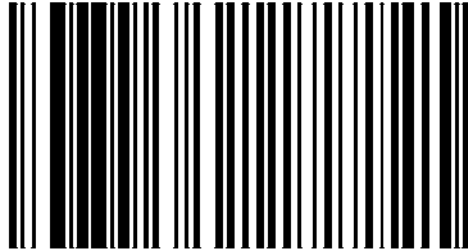


HEX 2 Tag

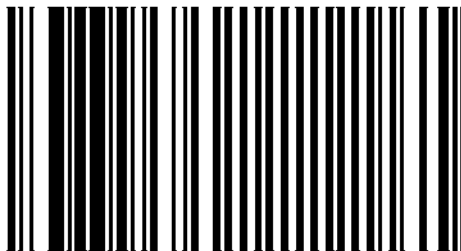


HEX 1 Tag

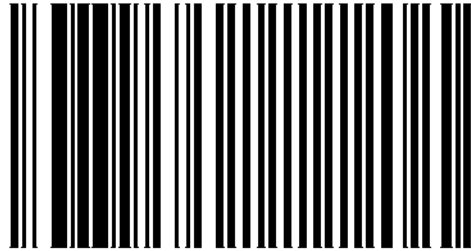


HEX C Tag

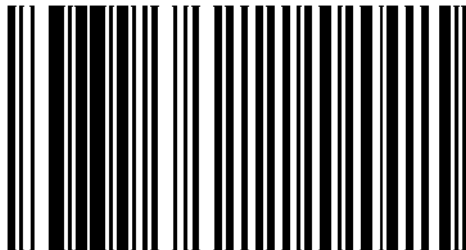

HEX 0 Tag

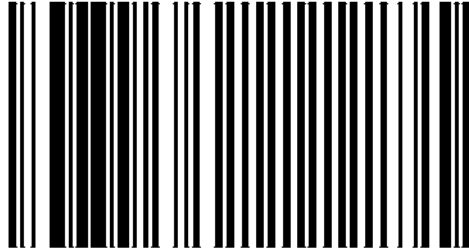


Save and Reset Tag

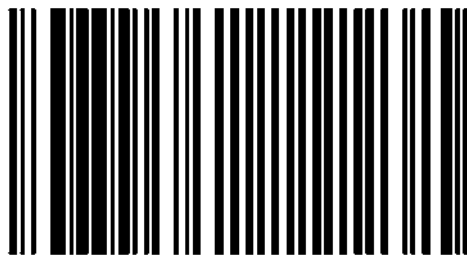


Enable Code 128


Programming Mode

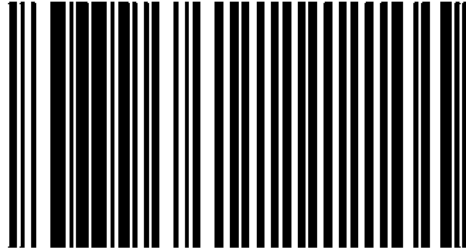


HEX 1 Tag

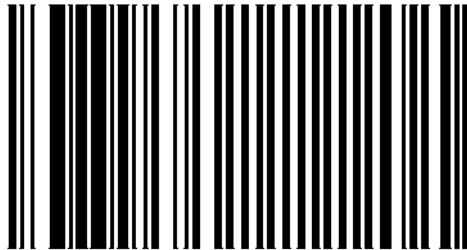


HEX 7 Tag

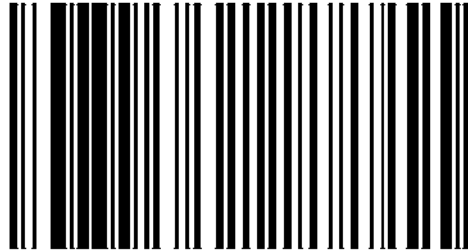


HEX A Tag

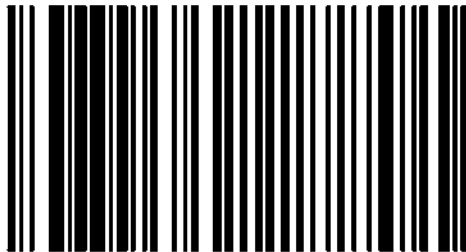

HEX 1 Tag

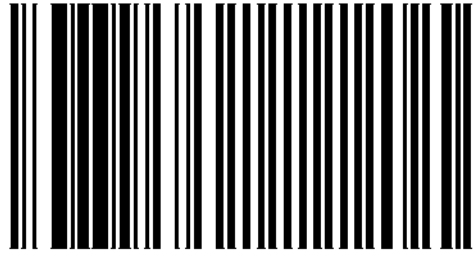


Save and Reset Tag

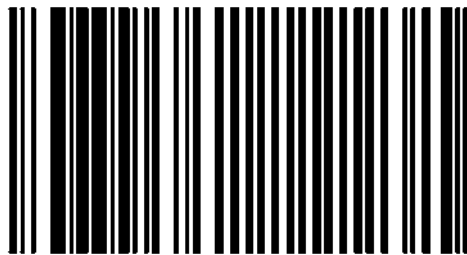

Programming the NCR 7875z with Integrated EAS (Meijer Stores)


Scan the following bar codes at Meijer stores that have NCR 7875z Scanner Scales with an integrated EAS device.

Programming Mode

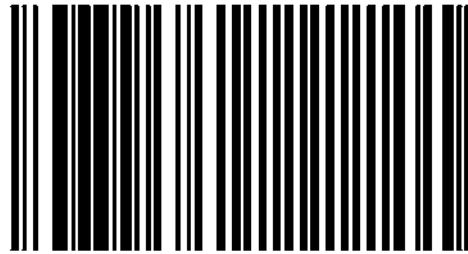


Enable Code 39


HEX 1 Tag

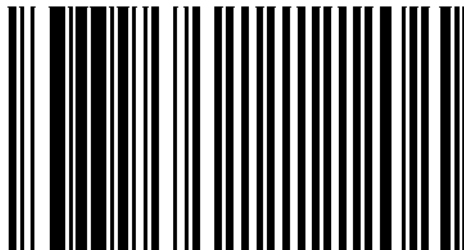


HEX 4 Tag

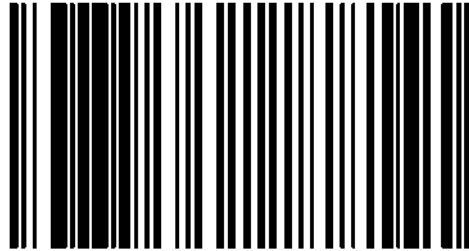

HEX A Tag

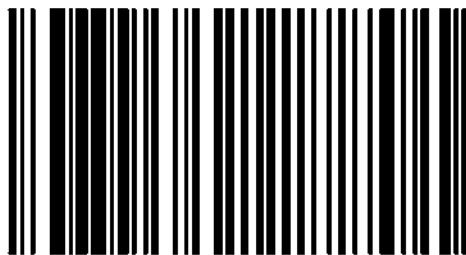


HEX 1 Tag

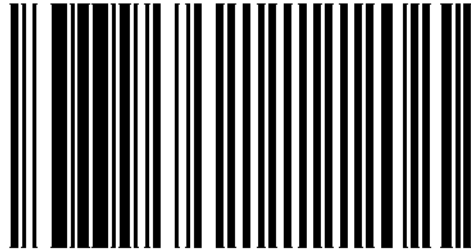


Enable Interleaved 2 of 5


HEX 1 Tag

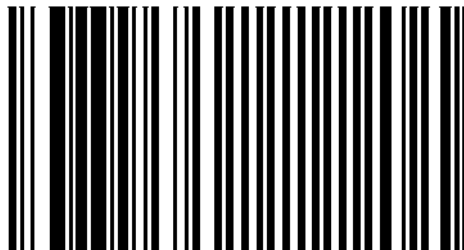


HEX 5 Tag

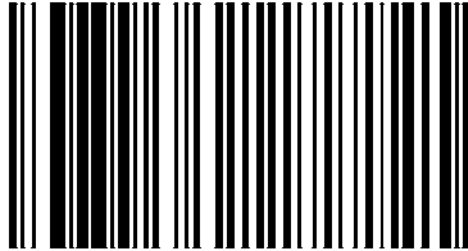


HEX A Tag

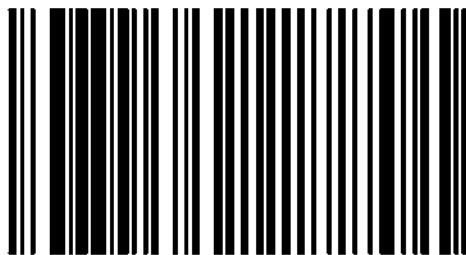

HEX 1 Tag

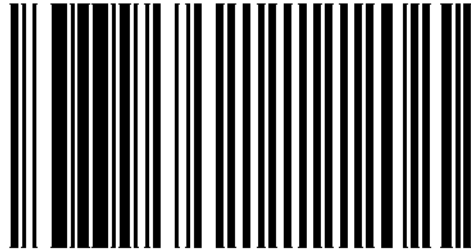


Save and Reset Tag

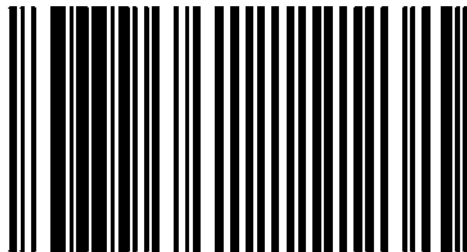


Enabling Periodical Code Extensions 2 and 5

Scan the following bar codes to allow the Scanner Scale to read periodical code extensions 2 and 5. Items such as books and magazines have this type of bar code.


Programming Mode

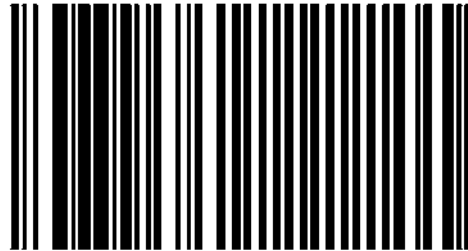


HEX 1 Tag

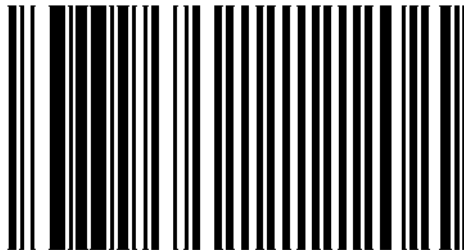


HEX 3 Tag

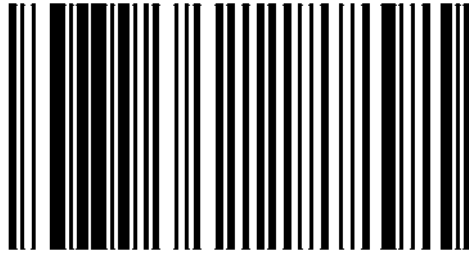


Hex E

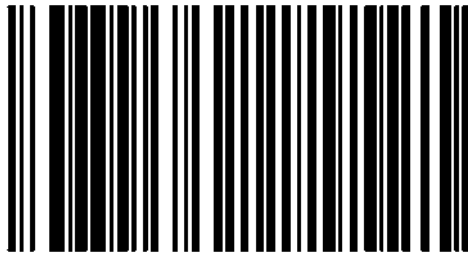


HEX 1 Tag

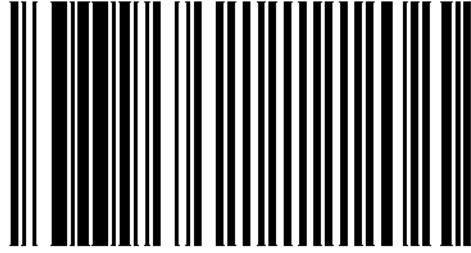


Hex 2 Tag

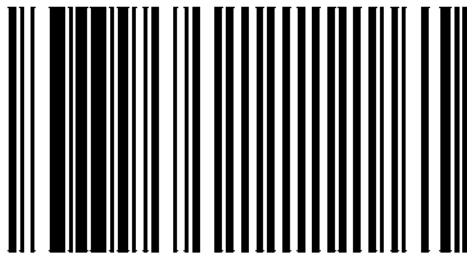

Hex 0 Tag

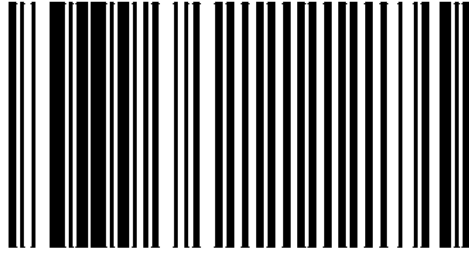


Save and Reset Tag

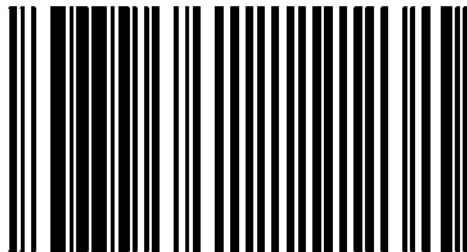


Enabling the Check Digit Setting for the NCR

- 1 Power off and then on the NCR to cycle the power.
- 2 Scan the bar codes on the following pages in this order:


Programming Mode Tag

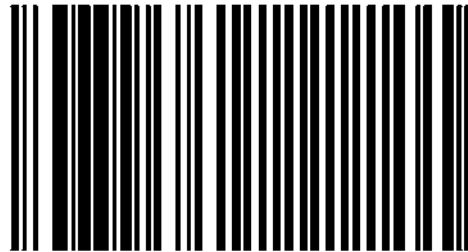


Hex 2 Tag

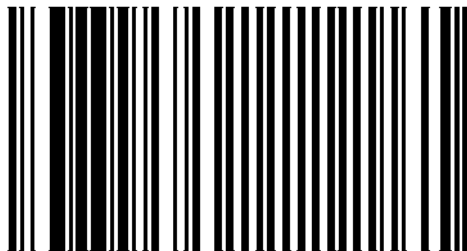


HEX 1 Tag

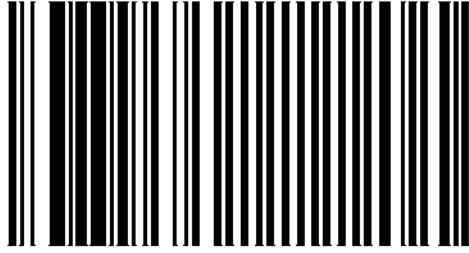

HEX C Tag

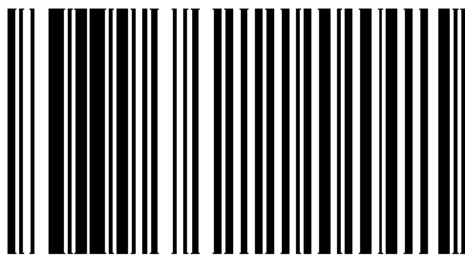

HEX 3 Tag

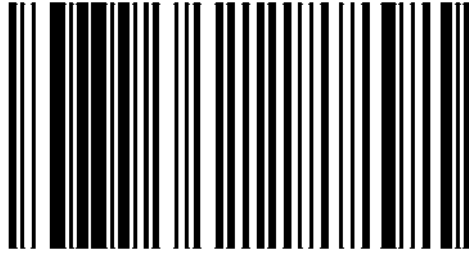


Disabling the Check Digit Setting for the NCR

- 1 Power off and then on the NCR to cycle the power.
- 2 Scan the bar codes on the following pages in this order:


List of bar codes to scan


- 1 Programming Mode Tag
- 2 HEX 2 Tag
- 3 HEX 1 Tag
- 4 HEX C Tag
- 5 HEX 0 Tag
- 6 Save and Reset Tag

Programming Mode Tag

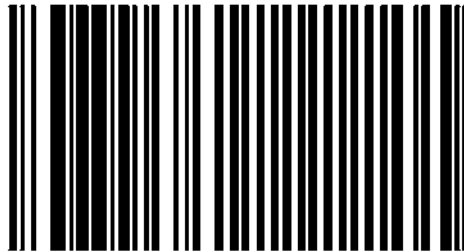


Hex 2 Tag

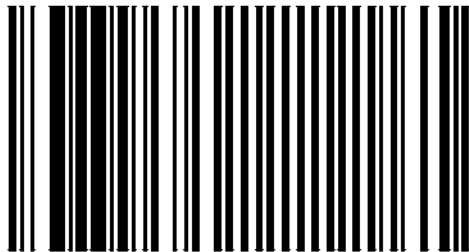


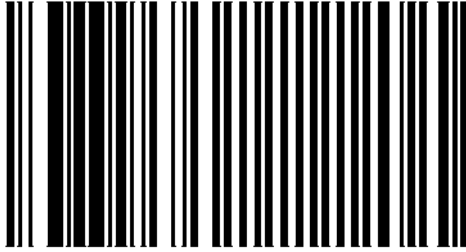

HEX 1 Tag


HEX C Tag

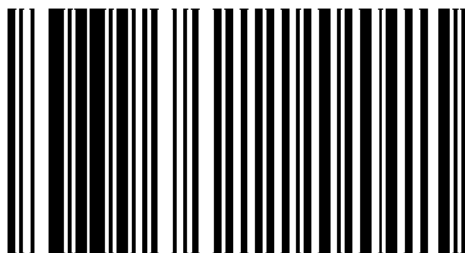

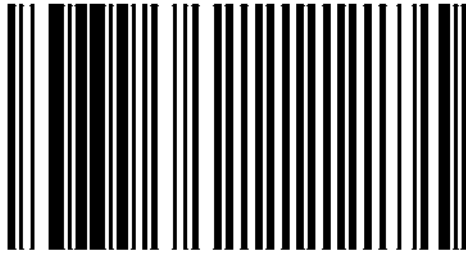

HEX 0 Tag


Save and Reset Tag

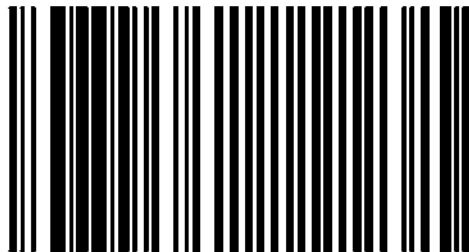


Converting the Scanner Scale to Metric

Scan the following bar codes as part of the procedure “[Converting the NCR 7875 Scanner Scale from Imperial to Metric.](#)”


Programming Mode Tag

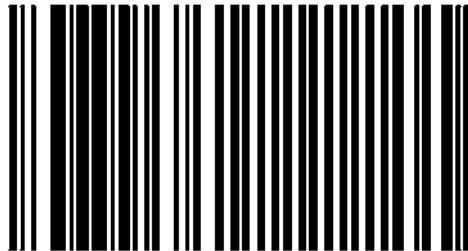


Hex 3

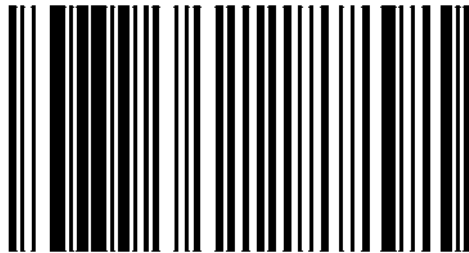

HEX 0 Tag

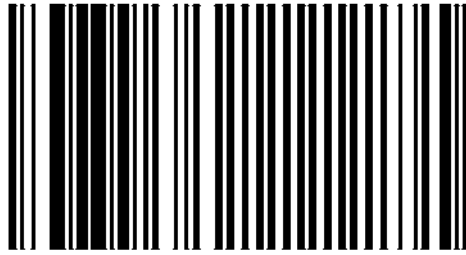


HEX 1 Tag

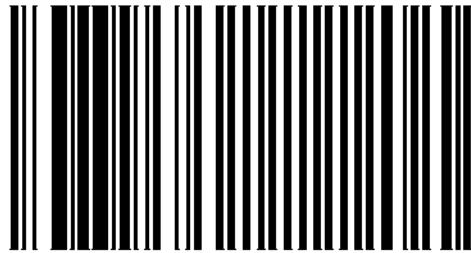


Post-Calibration Bar Codes (Metric ONLY)

Scan the following bar codes **after** you calibrate a Metric Scanner Scale.


Programming Mode Tag

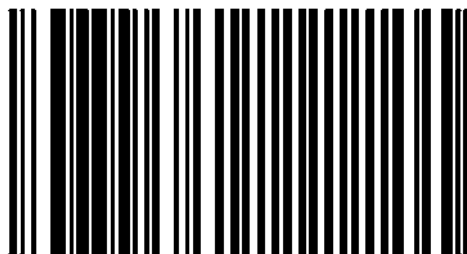


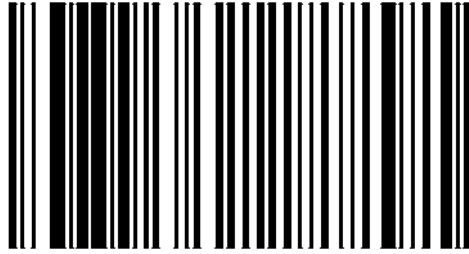

Hex 3

Hex 0

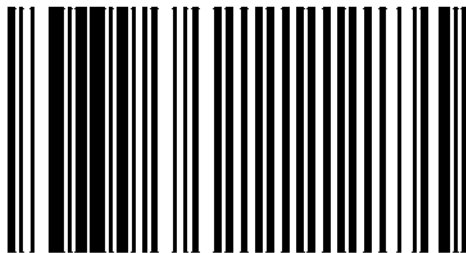

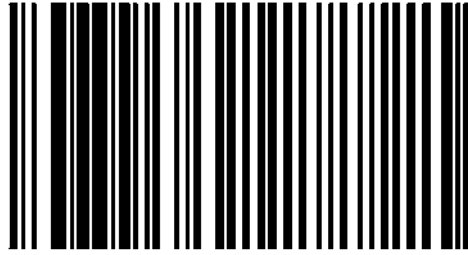

Hex B

Save and Reset Tag

