


## iPAD Controls and Switches

Mag-stripe Reader



Scanner

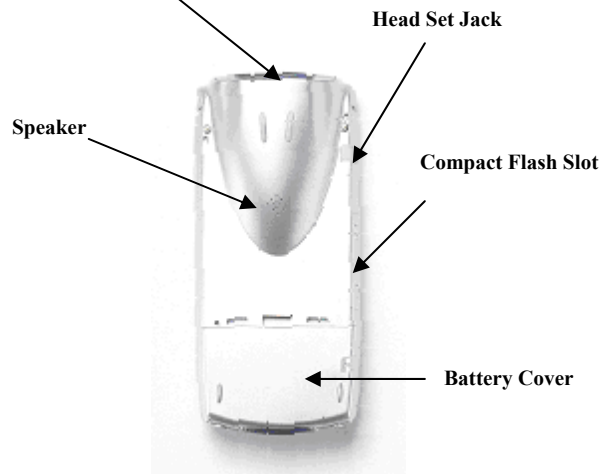

Thank you for purchasing the iPAD. This guide shows the major operator controls and their use, provides information on charging and replacing the main battery, lists some basic troubleshooting information, and offers procedures to be followed and actions to be avoided. We recommend that you keep this guide with the iPAD

For complete operating instructions and specific RF guidelines, reference the iPAD “Operations Guide” located on the Fujitsu FTP site: <ftp://ftp.ftxs.fujitsu.com>

Username: mobileuser


Password: mobileuser

### Attention: Before Using The iPAD

Before using the iPAD for the first time, the main battery must be fully charged. A new main battery will take approximately 2.5 hours to charge.

### Replacing / Installing the Main Battery

Replace the battery when its performance cycle begins to degrade substantially (approximately 500 cycles).

1. Make sure the backup battery has a sufficient charge to hold the contents of RAM.
2. Turn the unit off, press the power [  ] key.
3. Turn over the handheld.
4. On the rear side, slide the battery lock switches on both sides of the lower part to the outside.
5. Slide the cover down to remove it.
6. Pull the black ribbon to remove the battery.
7. Install a new battery, replace the cover and close both locks.

### Charging the Battery

As the battery charge falls below a certain level, a message prompting you to recharge the battery will appear on the screen. You can charge the battery by mounting the iPAD on the cradle with the main battery installed in the iPAD, connect the AC adapter to either of the cradle connection ports and plug the AC adapter into the wall outlet. The battery can also be charged by using the external battery pack charger.



## Charging Cradle

To mount and remove iPAD from cradle follow these steps:

1. To mount, place iPAD onto cradle and rock back until you hear a click.
2. To remove, lightly hold the iPAD with one hand. Using the other hand, press the Eject button in the center of the cradle. When the iPAD is released from the cradle, hold it lightly and lift it.

## Operator Controls

### Power Switch

Press the power [  ] key to turn the power on. Hold the switch down until green light (located top, center) turns on. To turn the unit off, press the power [  ] key.

### Adjusting the Volume

Press the [SFT] + [ENT] key to bring up the [System Information] window. Next tap [1. Volume and Brightness settings] or press the [1] key. Tap arrows [ < ] [ > ] within Volume box (or drag meter) to select volume.

### Adjusting Brightness of Frontlight

Press the [SFT] + [ENT] key to bring up the [System Information] window. Next tap [1. Volume and Brightness settings] or press the [1] key. Tap arrows [ < ] [ > ] within Front light box (or drag meter) to select brightness.

### Correcting the Coordinates on Touch Screen

Press the [SFT] + [ENT] key to bring up the [System Information] window. Next tap [2. Touch Screen Calibration] or press the [2] key. Follow instructions on screen to perform calibration. When “Calibration settings have been measured” is displayed, press the [ENT] key to save. To cancel operation press [SFT] + [CLR].

### Using the Screen Keyboard

Open and close the screen keyboard as follows:

1. To open the screen keyboard, press [SFT] + [0] key. The keyboard appears on the lower part of the screen.
2. To close the screen keyboard, press [SFT] + [0] key.  
To input a character, tap the input field to make it ready for input (the cursor is displayed). Then tap a character.

### Checking the Battery Status

Press the [SFT] + [ENT] key to bring up the [System Information] window. The System Information window will display the main and backup battery charge status.

## Bar Code Scanner

To use the bar code scanner, follow these steps:

1. Aim the bar code scanner of the iPAD at a bar code.
2. Press either of the trigger buttons on the two sides of the iPAD.
3. Run the scanning beam across the bar code.
4. The LED lights in green if the data has been read. The scanning beam automatically stops when reading is complete.
5. Release the trigger button.

Note: The LED and audio can be used by an application when a bar code is read correctly.

To clean the reading aperture use a dry cloth or a cloth moistened with water or diluted neutral detergent solution.

### Attention: RF Certification Information

Only authorized Fujitsu integrators are permitted to install and service the RF devices within the iPAD. The FCC I.D. label affixed to the iPAD is valid only for the RF card installed by Fujitsu or an authorized Fujitsu integrator.


### WARNING: FCC Exposure Guidelines

The radio module in this device has been evaluated under FCC Bulletin OET 65C and found compliant to the requirements as set forth in CFR Sections 2.1091, 2.1093, and 15.247(b)(4) addressing RF Exposure from radio frequency devices. The iPAD contains an internal low-power radio whose radiated output power is far below the FCC radio frequency exposure limits. Nevertheless, the iPAD shall be used in such a manner that the potential for human contact with the radio antenna during normal operation is minimized. The iPAD should be utilized/worn in accordance with the instructions for the device.

This device must not be collocated with any other antenna or transmitters.

### WARNING: Proposition 65 Guidelines

“**WARNING:** Handling the cord on this product or cords associated with accessories sold with this product, will expose you to lead, a chemical known to the state of California to cause birth defects or other reproductive harm. *Wash hands after handling.*”

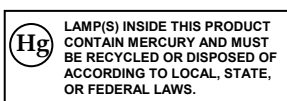

## Magnetic Card Reader

To use magnetic card reader, follow these steps:

1. After making sure of the orientation (direction of the arrow) insert a magnetic card (mag-stripe facing top of iPAD).

2. Slowly move the magnetic card from left to right.

Note: The LED and audio can be used by an application when a magnetic card is read correctly.

Clean the reader every month or whenever errors are frequent with the cleaning card supplied as follows:

1. Turn off iPAD.
2. Insert the cleaning card in the reader with the rough side facing up.
3. Slowly move from left to right.

## Troubleshooting

Symptom	User Response
Power does not come on.	Main battery has no charge. Charge main battery or replace it with a charged main battery. If the main battery is completely dead, all the data and information in memory may be lost. If data has been lost, reinstall the applications again.
	The service life of the main battery has expired or the battery is faulty. Install a new battery.
	The main battery may not be installed correctly. Install the main battery correctly.
	The battery lock switch may be unlocked. Lock it.
The screen appears for a moment, then turns black when you press the Power key to turn on the power.	The main battery may have no charge. Replace it with a charged main battery.
The speaker is silent.	The speaker may be set to “low”. Check the volume setting of the speaker.
The touch panel does not respond.	The coordinates on the touch panel may be misaligned. Perform touch panel calibration.
The front light is dark or turns black.	The main battery may have no charge. Replace it with a charged main battery.

**For all Customer Care and Warranty related issues, contact the Fujitsu Transaction Solutions “Customer Care Line” at (877) 609-3821**

# FUJITSU

iPAD

## Quick Reference Guide



**Fujitsu Transaction Solutions Inc.**

**Mobile Solutions Group**

[www.ftxs.fujitsu.com](http://www.ftxs.fujitsu.com)

Fujitsu Doc. # 90000609 – Rev 4.0