


Installing the Filler Plates in the NextGen Cashless Station

Follow the steps below to install the filler plates in the cash module on the NextGen Payment Station.

Overview

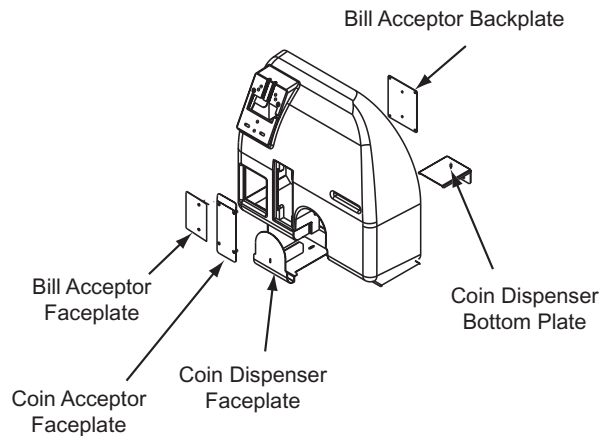


Requirements:

- Coin Acceptor cutout filler plate (11001749)
- Bill Acceptor cutout filler back and faceplates (11001750)
- Coin Dispenser cutout filler bottom and faceplates (11001751)
- Phillips screwdriver
- Nut driver

- 1 Remove the Coin Dispenser tray from the cash module. Unscrew the fastener on the underside of the shelf to remove the tray.
- 2 From the inside of the cash door, position the Bill Acceptor backplate in the Bill Acceptor cutout.
- 3 From the front of the cash door, align the two studs on the Bill Acceptor faceplate with the holes on the backplate.
- 4 From the inside of the cash door, fasten an 8-32 nut on both of the faceplate studs.
- 5 From the front of the cash door, position the Coin Acceptor faceplate in the Coin Acceptor cutout.
- 6 From the inside of the cash door, fasten four 8-32 screws to secure the faceplate over the Coin Acceptor cutout.

- 7 Remove the middle screw from the inside of the cash door.

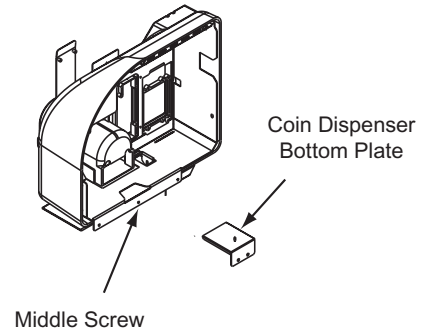

NOTE: *If the door stop strap interferes with installation, remove it and replace it after the procedure is complete.*

- 8 Secure the Coin Dispenser bottom plate to the inside of the door using the screw.
- 9 From the front of the cash door, slide the Coin Dispenser faceplate into position.
- 10 Secure the faceplate to the bottom plate with an 8-32 nut.