

Subject: Genesis Coin Bin Breaking Speaker Magnet

Issue

 
There have been some reports of the Speaker Magnet breaking off when closing or opening the Top Cover door on the Genesis. The Speaker Magnet can be caught if the Coin Bin is not fully inserted when closing or opening the Top Cover door.

Solution


To avoid breaking off the speaker's magnet, make sure the Coin Bin is fully pushed in to its closed position. Also make sure the rear clip that holds the Coin Bin in place is bent down enough to securely lock it in place when closed. If not, then bend the clip down enough to securely hold the Coin Bin in place while still allowing the operator to remove it.

See Illustrations below.

Genesis Front View

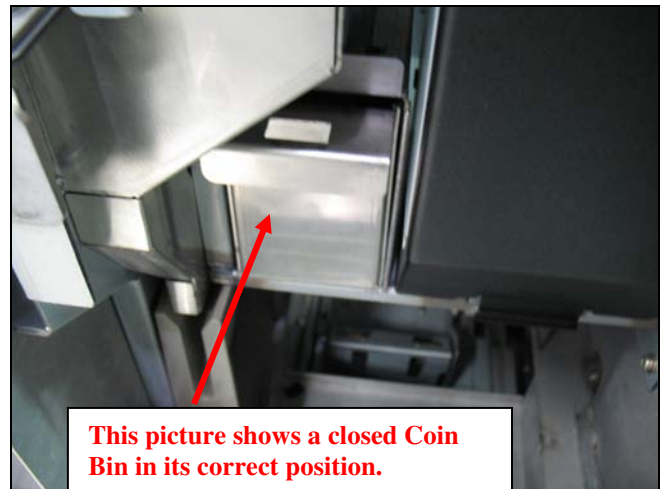

Genesis Rear View

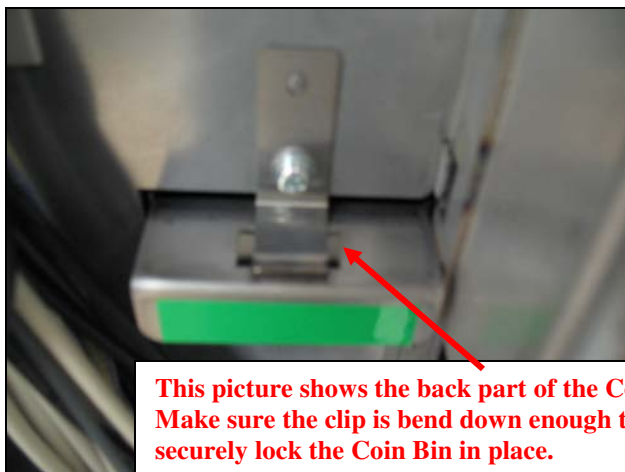 

INQUIRIES TO:

Fujitsu Transaction Solutions Inc.
Exchange: Sustaining Engineering
Mail: Fujitsu USA04, Sustaining Engineering
FAX: 858-731-4781 (7888-4781)
Internet: SustainingEngineering@ftxs.fujitsu.com
FTP: <ftp://ftp.ftxs.fujitsu.com/>

Sustaining Engineering

Product Manager

Author

DATE

Original signature copies maintained by Sustaining Engineering.