

**Subject: Genesis Coin Hopper Power Switch Accessibility**

**Issue**

There has been reports that when Genesis Coin Hoppers are located on Right, the Hopper Power Switch cannot be accessed. This is correct and is due to the space limitations within the Genesis SCO. To allow the Hoppers to be power cycled, a separate Power Pig-Tail cord (11002387) is added at the rear of the Hopper Assy during production.

**Right Side Mounted**

If the Coin Hoppers are on the right, slide Coin Hopper Tray outward and unplug the power from the Pig-Tail. The Power Pig-Tail cable is located in the rear of the Coin Tray. See pictures below.



**Slide the Coin Tray Outward.**




**Pull Pig-Tail apart to power off Coin Hopper.**

**Left Side Mounted**

If the Coin Hoppers are on the Left, the Hopper Power Switch is accessible on the Left side of the Hopper Assy. The separate Power Pig-Tail is not added. See Pictures Below.



**Slide the Coin Tray Outward.**

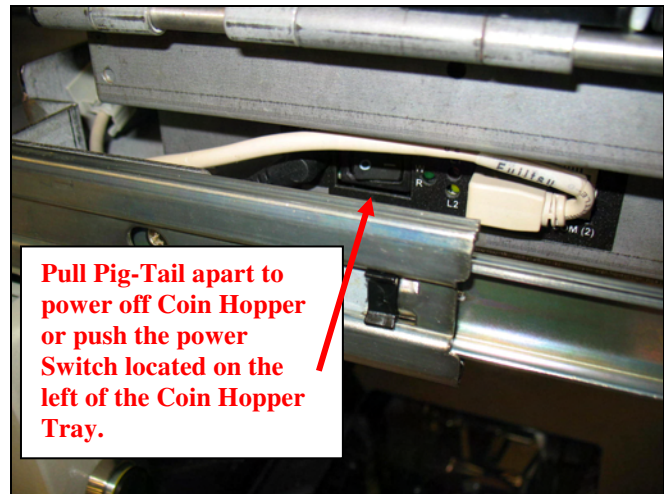

**Pull Pig-Tail apart to power off Coin Hopper or push the power switch located on the left of the Coin Hopper Tray.**

<b>INQUIRIES TO:</b>		DATE
Fujitsu Transaction Solutions Inc.		
Exchange:	Sustaining Engineering	_____
Mail:	Fujitsu USA04, Sustaining Engineering	_____
FAX:	858-731-4781 (7888-4781)	_____
Internet:	<a href="mailto:SustainingEngineering@ftxs.fujitsu.com">SustainingEngineering@ftxs.fujitsu.com</a>	_____
FTP:	<a href="ftp://ftp.ftxs.fujitsu.com/">ftp://ftp.ftxs.fujitsu.com/</a>	_____
		Author
Original signature copies maintained by Sustaining Engineering.		