

**Subject: Genesis Top Cover and Lower Door Rubber Cushions**


**Issue**

There have been reports that the Top Cover and Lower Door rubber cushions are loose or missing. If these cushions are missing it can cause the Top Cover and Lower Door to become misaligned. This can cause various issues ranging from door alignment, alignment issues with various internal devices, to customer esthetics.

**Solution**

The Cushions are now Spare Parts and can be ordered as needed.

**Top Cover Cushion**      **11002577**      **KD30335-Y223**  
**Lower Door Cushion**    **11002578**      **KD30335-Y222**

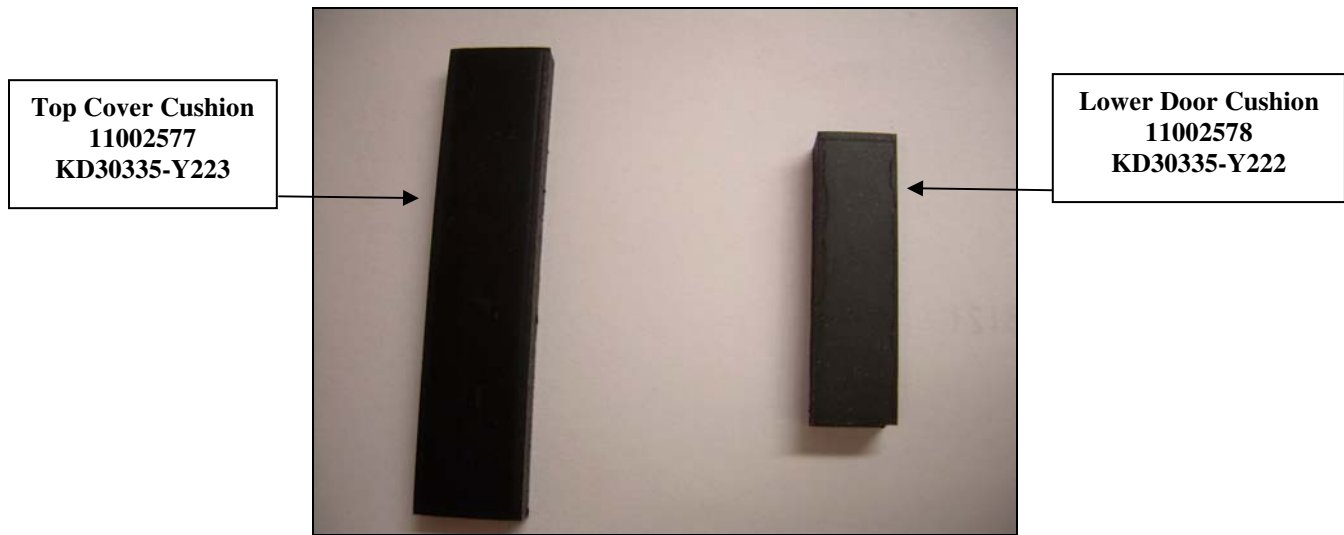

<b>INQUIRIES TO:</b>		DATE
Fujitsu Transaction Solutions Inc.		
Exchange:	Sustaining Engineering	_____
Mail:	Fujitsu USA04, Sustaining Engineering	_____
FAX:	858-731-4781 (7888-4781)	_____
Internet:	<a href="mailto:SustainingEngineering@ftxs.fujitsu.com">SustainingEngineering@ftxs.fujitsu.com</a>	_____
FTP:	<a href="ftp://ftp.ftxs.fujitsu.com/">ftp://ftp.ftxs.fujitsu.com/</a>	_____
	Author	
Original signature copies maintained by Sustaining Engineering.		

## Genesis Top and Lower Door Cushion Installation Instructions and locations

1. Clean Genesis surface with Isopropyl Alcohol or Acetone.
2. Allow surface to air dry for 2 minutes.
3. Peel and affix cushion to locations shown above.
4. Top Door Cushion: 11002577 KD30335-Y223
5. Lower Door Cushion: 11002578 KD30335-Y222

