

**Subject: New U-Scan Weights & Measures Labels**

**Issue**

New Labels will be applied to every U-Scan unit in the field and in production to conform with “Weights and Measures” requirements. **(US ONLY)**

**Equipment Affected**

U-Scan Self Checkout

Models: LT, Next Gen, and Genesis – U.S. Only.

This update will be managed via the Managed Services Project Management team. For those not directly involved with this project, this is for informational purposes only. A work order will be opened for all systems that need this new label applied. When the label is applied the work order will be closed with all appropriate information thus allowing Managed Services Project Management to track the label upgrade program so that Product Management can provide W&M a status. The following information is required:

Store Name, Number

Date of update

Person performing update


Serial Number of U-Scan (Existing Serial Number of the U-Scan Robot, not any specific component/device.)

Serial Number of new Label applied

This W&M label upgrade is not required on some of the older CFG systems that have not received SW changes. However, if one of these older CFG systems is later upgraded to new version of software, then the new W&M label will need to be applied.

**Label Part Numbers**

11002836	U-Scan Genesis
11001958	U-Scan LT and NextGen

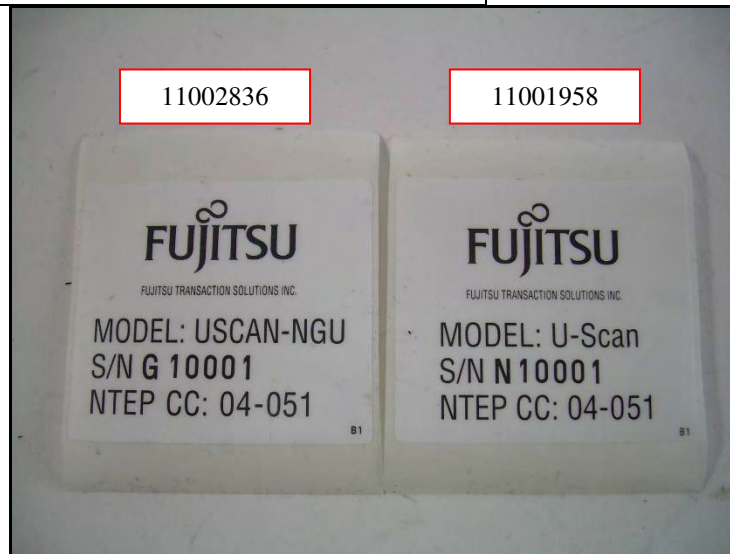

<u>INQUIRIES TO:</u>		DATE
Fujitsu Transaction Solutions Inc.		
Exchange:	Sustaining Engineering	_____
Mail:	Fujitsu USA04, Sustaining Engineering	_____
FAX:	858-731-4781 (7888-4781)	_____
Internet:	<a href="mailto:SustainingEngineering@ftxs.fujitsu.com">SustainingEngineering@ftxs.fujitsu.com</a>	_____
FTP:	<a href="ftp://ftp.ftxs.fujitsu.com/">ftp://ftp.ftxs.fujitsu.com/</a>	_____
	Author	_____
Original signature copies maintained by Sustaining Engineering.		

## Field Instructions

### Removing Old label

1. Remove the old label really slow by hand. On the **U-Scan LT**, **NextGen** or **Genesis** the Label is located below the monitor on the external bezel. If needed, really carefully use a "Putty" Knife to guide but be careful not to scratch the Bezel. See Picture below.

#### (U-Scan LT)



Remove Label

#### (NextGen)



Remove Label

#### (Genesis)



Remove Label

**Installing New Label**

2. See Pictures below for new Label location.
3. Make sure to clean the area with Alcohol or Acetone then apply the Label.


**U-Scan LT (Right)**

**U-Scan (3 bag system shown, other option is a carousel version)**




**U-Scan LT (Left)**

**U-Scan (3 bag system shown, other option is a carousel version)**

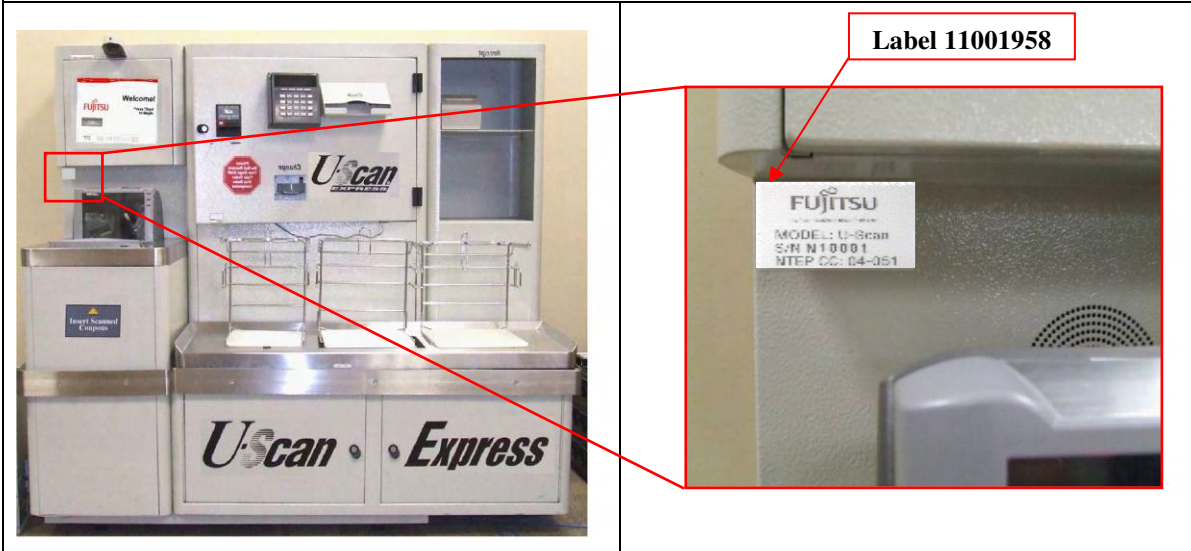


### U-Scan NextGen (Right)

U-Scan (3 bag system shown, other options include 1, 5 bag, carousel and belted versions)

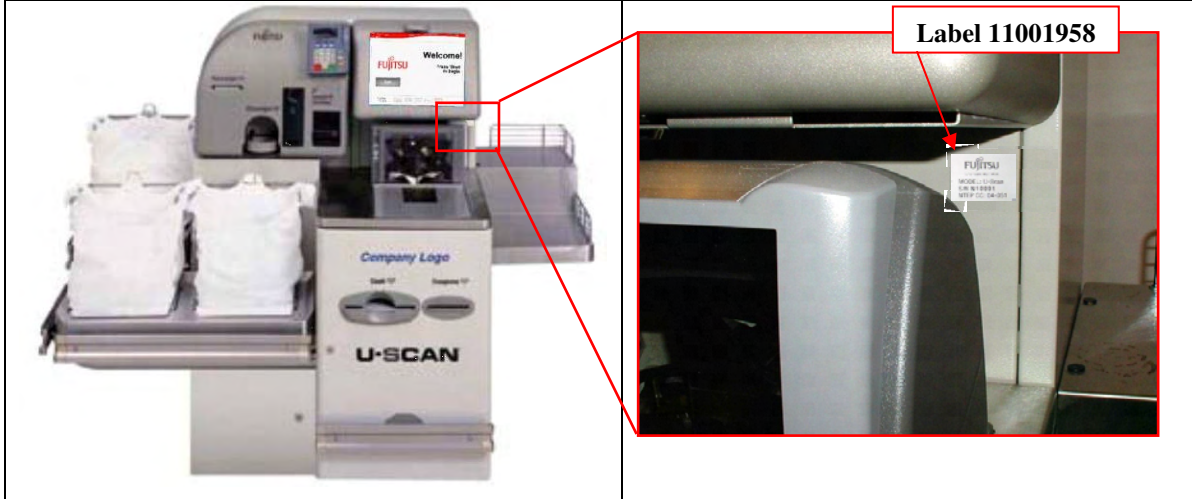

### U-Scan NextGen (Left)

U-Scan (3 bag system shown, other options include 1, 5 bag, carousel and belted versions)

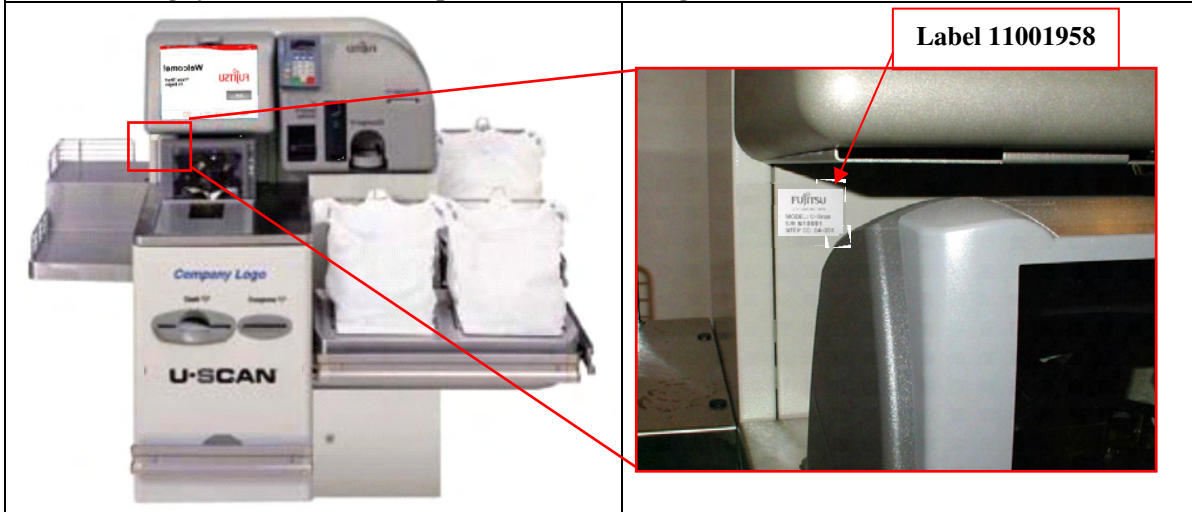

**U-Scan Genesis**

**USCAN-NGU (4 bag system shown, other options include 1, 2 bag, carousel, and belted versions)**

