



-  *TeamPoS 3000XL2 Setup*
-  *with ISS45*
- 
- 
- 

TeamPoS 3000XL2 Setup with ISS45

Date of Issue	Product Identification Number	Part Number	Brief Description
August 2010	45001/107	89000581	Initial Release

**©Copyright StoreNext Retail Technologies LLC 1995-2010
All rights reserved**

This publication is protected by federal copyright law. No part of this publication may be reproduced or transmitted into any human or computer language in any form or by any means, stored in a retrieval system, transmitted, redistributed, translated or disclosed to third parties, or de-compiled in any way including, but not limited to, photocopy, photograph, electronic, mechanical, magnetic or manual without the express written permission of StoreNext Retail Technologies LLC or its licensors, if any. This document, notwithstanding the above, may be distributed in electronic or printed form to personnel who are employed by either (1) a StoreNext customer of the subject system of this document or (2) personnel from an authorized StoreNext dealer of the subject system of this document. All copies, so distributed and/or so authorized, shall contain a full copy of this copyright notice.

StoreNext Retail Technologies LLC endeavors to ensure that the information in this document is correct and fairly stated but does not accept liability for any error or omission. StoreNext Retail Technologies LLC makes no representation or warranties with respect to the contents hereof, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose or non-infringement. No commitments by StoreNext or its suppliers are made from this documentation which is provided for information only.

Development of StoreNext products and documentation is continuous: StoreNext Retail Technologies LLC reserves the right to revise this publication and to make changes from time to time in the contents hereof or in the products herein described or discussed without notice and without any obligation of StoreNext Retail Technologies LLC to notify any person or organization of such revision or changes. Information published in this document will likely become obsolete over time and it is recommended that users regularly check for updates and newer versions.

StoreNext Retail Technologies LLC has prepared this manual for use by users, authorized third parties and personnel of StoreNext Retail Technologies LLC as a guide to the proper installation, operation, customization and/or maintenance of StoreNext Retail Technologies LLC equipment and software. The drawings and specifications contained herein are the property of StoreNext Retail Technologies LLC and/or its licensors.

Third-party products, services, or company names referenced in this document may be trademarked or copyrighted by their respective owners, and are for identification purposes only.

Copyrights, trademarks and license agreements shall be governed and construed in accordance with the laws of the State of Texas and the Federal Arbitration Act, and shall benefit Retailix, its successors, and assigns.

Address comments and corrections to:

StoreNext Retail Technologies LLC
Software Program Director
6100 Tennyson Parkway
Suite 130
Plano, Texas 75024

TABLE of CONTENTS

0.	Document Control.....	c
0.1.	Distribution List — As per manuals	c
0.2.	Changes Forecast.....	c
0.3.	Change History.....	c
1.	Peripheral Installation and Setup for the TeamPoS 3000XL2 and ISS45	2
1.1.	Load the Common Control Objects OposCCOs-1_12_000.exe	2
1.2.	D22 Display Touch Screen Driver.....	6
1.3.	D25 Display Touch Screen Driver.....	6
1.4.	92U USB Keyboard Driver Installation.....	6
1.5.	VF60 USB 2x20 Display Installation.....	7
1.6.	Epson 6000II USB or 6000III USB Printer Installation	11
1.7.	Epson 6000II RS232 or 6000III RS232 Printer Installation	30
1.8.	DataLogic USB OPOS driver installation for the USB connected DataLogic Scanner and Scanner / Scale (2500, 6500, 8200, 8300, 8400, 8500, 8500XT, 1000i and QD2130)	48
1.9.	TPG NATIVE USB Driver Installation	54
1.10.	TPG OPOS Installation for a TPG USB Connected Printer.....	54
1.11.	TPG OPOS Installation for a TPG RS232 Connected Printer.....	58
1.12.	Fujitsu Cash Drawer TeamPoS 3000XL2 Connected Installation	62
1.13.	D22_D25 Keyboard, MSR and Key lock Installation.....	62
1.14.	HyperCom 4100/4250 USB Installation	63
2.	Peripherals Notes	64
2.1.	Cash Drawer Connection	64
3.	ISS45 Installation on the TeamPoS 3000XL2.....	64
3.1.	Starting ISS45 WinPOS installation	64
4.	ISS45 Peripheral Setup for Connected Devices on the TP3000XL2.....	74
4.1.	92U USB Keyboard	74
4.1.1.	ISS45 V7 Configuration	74
4.1.2.	ISS45 V8 Configuration	74
4.2.	VF60 USB 2x20 Display.....	75
4.2.1.	ISS45 V7 Configuration	75
4.2.2.	ISS45 V8 Configuration	75
4.3.	Epson 6000II/6000III RS232 Printer or 6000IIU/6000IIIU USB Printer, MICR and optionally connected Cash Drawer	75
4.3.1.	ISS45 V7 Configuration (Prior to V7.1.3.0-050 release).....	75
4.3.2.	ISS45 V7 Configuration (V7.1.3.0-050 and above).....	76
4.3.3.	ISS45 V8 Configuration	78
4.4.	PSC/DataLogic 8200, 8300, 8400 , 8500or 8500XT USB Scanner and Scale configuration.....	79
4.4.1.	ISS45 V7 Configuration	79
4.4.2.	ISS45 V8 Configuration	80
4.5.	PSC 2500,6500, QD2130 Hand Held USB Scanner.....	81

4.5.1.	ISS45 V7 Configuration	81
4.5.2.	ISS45 V8 Configuration	81
4.6.	PSC 1000i Table USB Scanner	81
4.6.1.	ISS45 V7 Configuration	81
4.6.2.	ISS45 V8 Configuration	82
4.7.	Dual USB OPOS DataLogic Scanner Support (V8.1.3.2-050 and above)	82
4.7.1.	ISS45 V8.1.3.2-050 and Above Configuration	82
4.8.	TPG A776 or A794 USB Printer.....	83
4.8.1.	ISS45 V7 Configuration (Prior to V7.1.3.0-050)	83
4.8.2.	ISS45 V7 Configuration (V7.1.3.0-050 and above).....	83
4.8.3.	ISS45 V8 Configuration	84
4.9.	Fujitsu Cash Drawer Connected to TeamPoS 3000XL2.....	85
4.9.1.	ISS45 V7 Configuration (Prior to V7.1.3.0-050 release).....	85
4.9.2.	ISS45 V7 Configuration (V7.1.3.0-050 and above single and dual drawer)..	86
4.9.3.	ISS45 V8 Configuration (Single Drawer)	86
4.9.4.	ISS45 V8 Configuration (Dual Drawer V8.1.2.1-050 and above only).....	86
4.10.	D22_D25 MSR and Key Lock	87
4.10.1.	ISS45 V7 Configuration	87
4.10.2.	ISS45 V8 Configuration	87
4.11.	HyperCom 4100/4250 USB Pin Pad	87
4.11.1.	ISS45 V7 Configuration	88
4.11.2.	ISS45 V8 Configuration	88
5.	Further installation	88
5.1.	Scope of this document	88

0. Document Control

0.1. Distribution List — As per manuals

0.2. Changes Forecast

This document will be updated as new configurations and corrections are made available


0.3. Change History

Issue 1 This is the initial release of this document. This document will change as new configurations or updates are made available

- PRE-CHECKS

- Ensure that the jumpers to support COM3 are positioned correctly if using the Combo card for legacy support

Note: The 7 connector jumper block (PRT1-7) defines the printer interface being used. For Epson, Citizen, and TPG (Axiohm) printers the jumpers should be set to 2-3, 5-6, 8-9, 11-12, 14-15, 17-18, and 20-21.

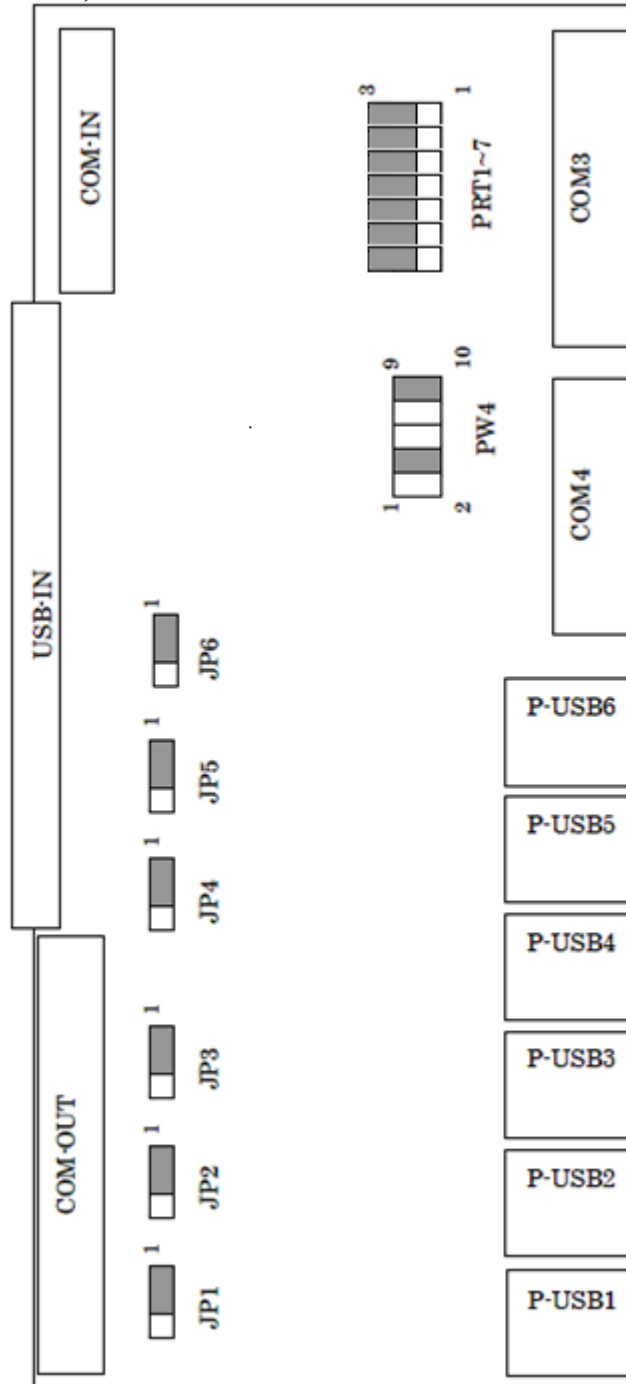


- The VIDEO must be setup with the final configuration and set using the Display_Select program
Refer to the document TeamPoS3000Video in the TeamPoS3000_Software_Support\Drivers\Mother Board\Extreme Graphics\Documentation folder
NOTE: The driver and Display_Select program are already loaded in the TeamPoS 3000 XL2 WePOS image.



1. Peripheral Installation and Setup for the TeamPoS 3000XL2 and ISS45

NOTE: The TeamPoS 3000XL2 is shipped preloaded with WePOS. The folder TeamPoS3000_Software_Support contains most of the drivers needed for peripheral installation.


1.1. Load the Common Control Objects OposCCOs-1_12_000.exe

- 1.1.1. Run OposCCOs-1_12_000.exe from the folder "
TeamPoS3000_Software_Support\Drivers\OPOS\Common Controls"

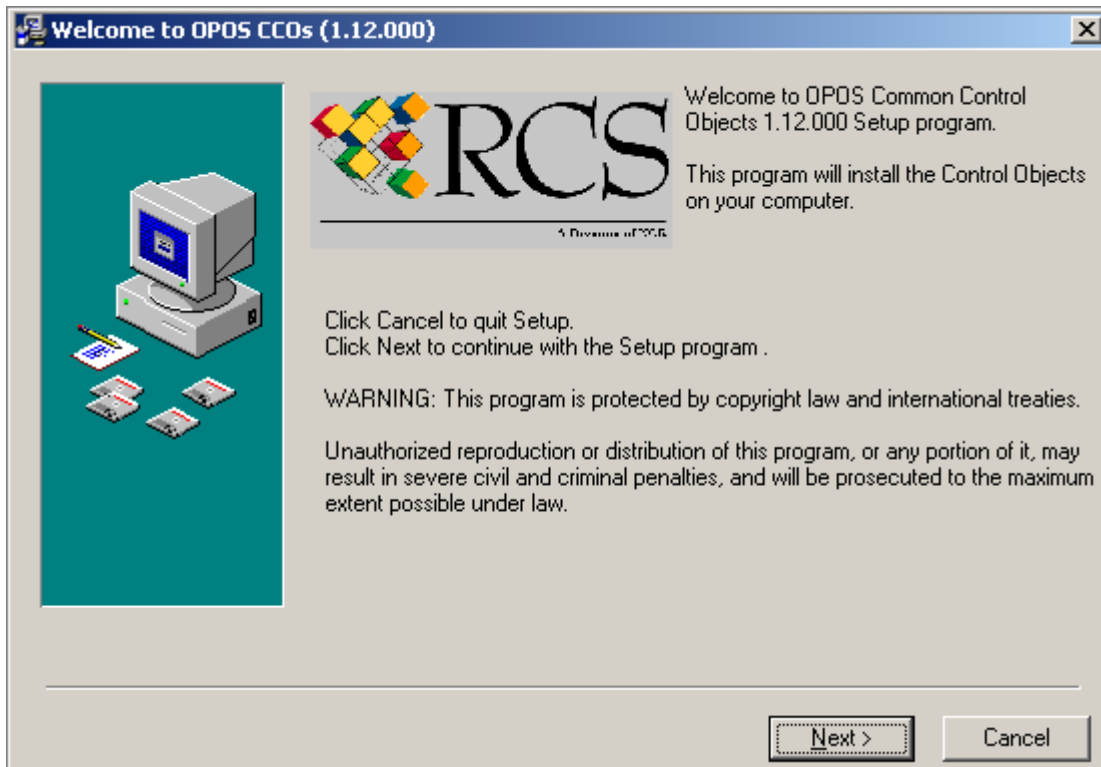

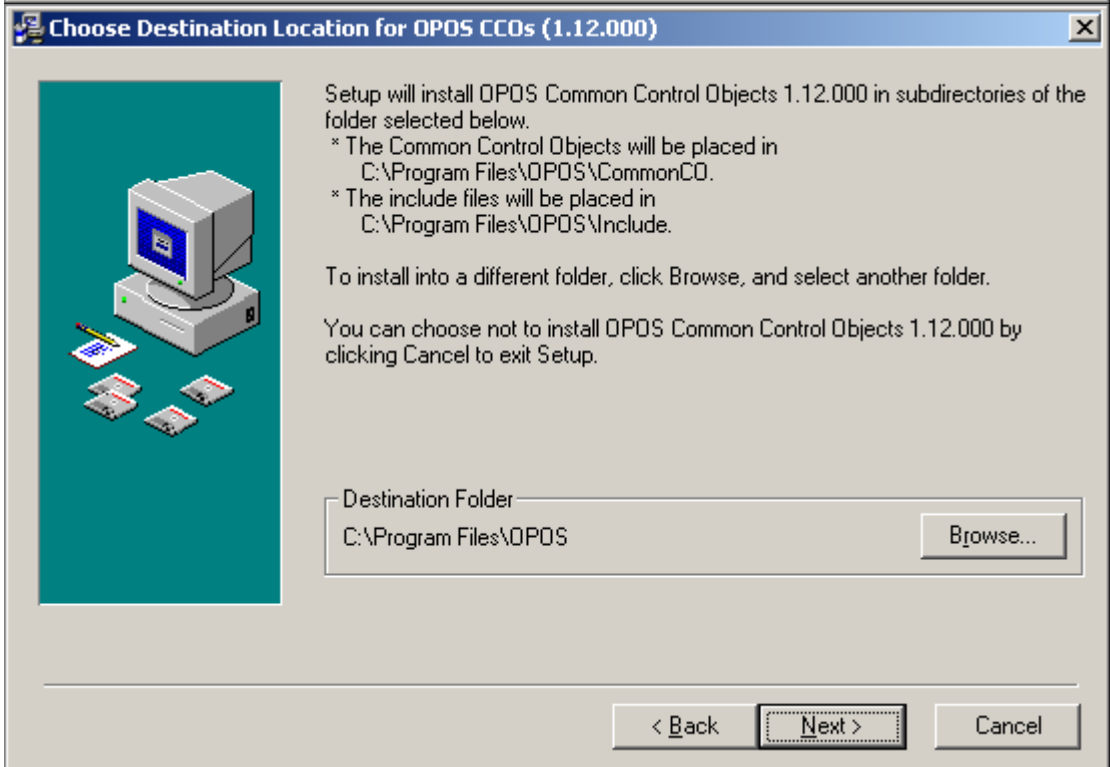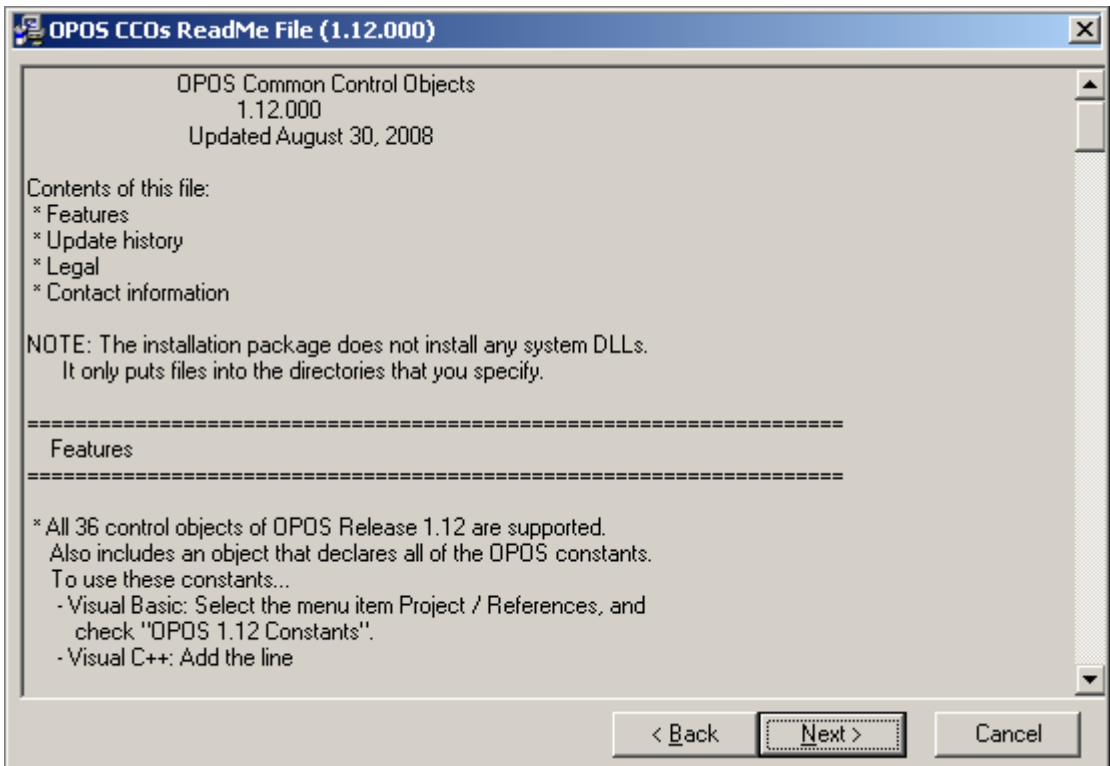

Backup Replaced OPOS CCO Files




This installation program can create backup copies of all files replaced during the installation. These files will be used when the software is uninstalled and a rollback is requested. If backup copies are not created, you will only be able to uninstall the software and not roll the system back to a previous state. Do you want to create backups of the replaced files?

Yes
 No

Please select the directory where the replaced files will be copied.

Backup File Destination Directory: C:\Program Files\OPOS\BACKUP Browse...

Select OPOS CCO Components (1.12.000)






In the options list below, select the checkboxes for the options that you would like to have installed. The disk space fields reflect the requirements of the options you have selected.

<input checked="" type="checkbox"/> Common Control Objects	4959 k
<input checked="" type="checkbox"/> OPOS Include Files	381 k

Disk Space Required: 5340 k

Disk Space Remaining: 12699191 k

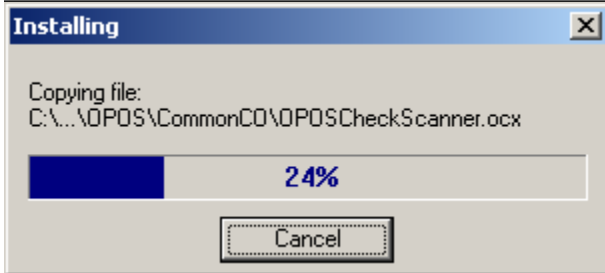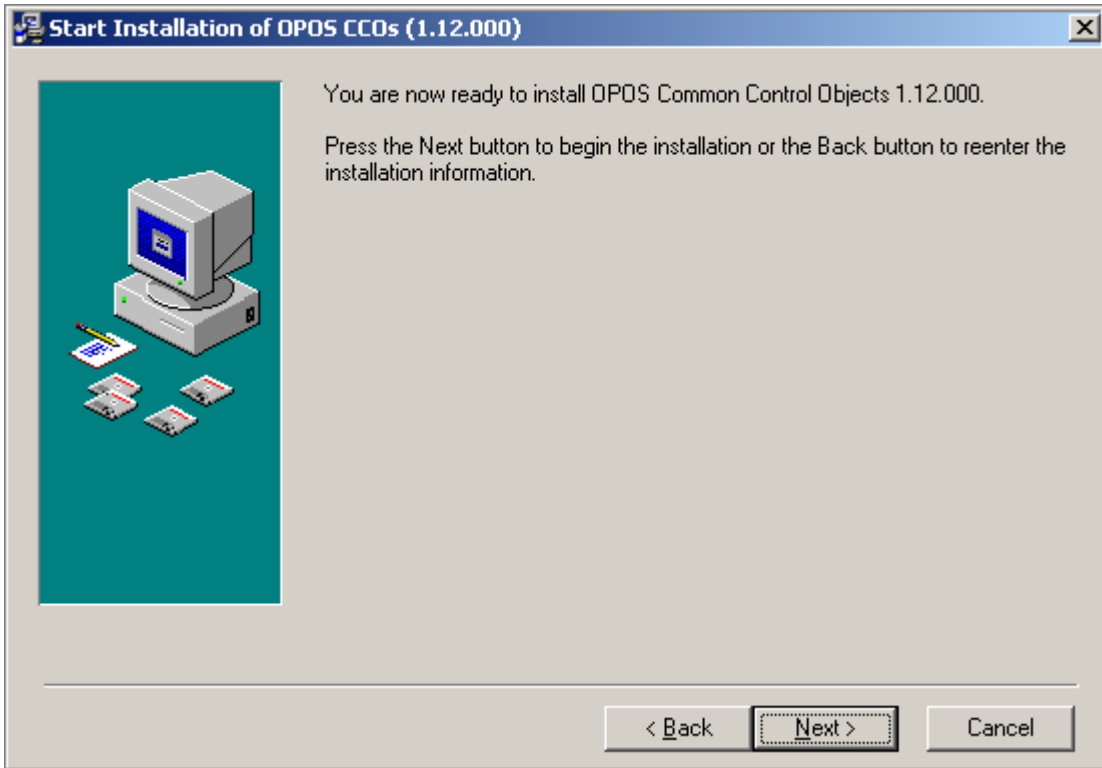

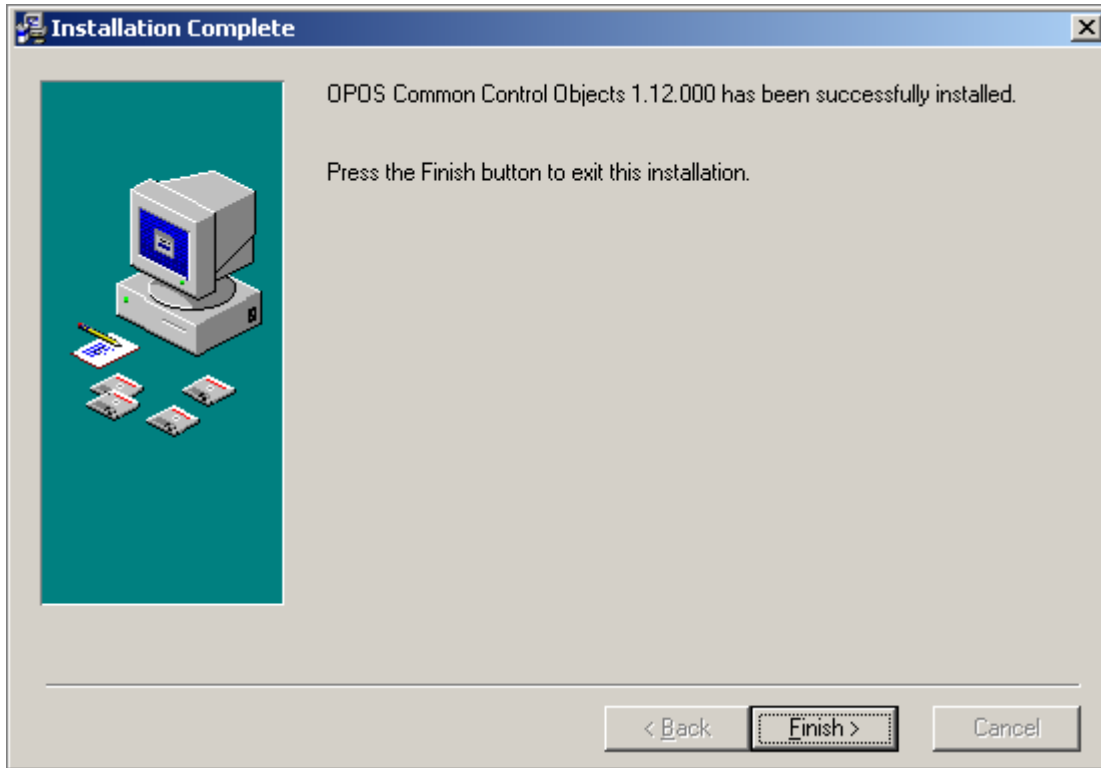

1.2. D22 Display Touch Screen Driver

- 1.2.1. The Elo touch driver for the D22 display and documentation is located in the folder " TeamPoS3000_Software_Support\Drivers\LCD Display Touch\TeamPoS 3000 D22-25"

1.3. D25 Display Touch Screen Driver

- 1.3.1. The Elo touch driver for the D25 display and documentation is located in the folder " TeamPoS3000_Software_Support\Drivers\LCD Display Touch\TeamPoS 3000 D22-25"


1.4. 92U USB Keyboard Driver Installation



- 1.4.1. Shutdown the TeamPoS 3000XL2 prior to plugging in the 92U keyboard.
- 1.4.2. Plug the 12v powered USB cable into an available powered USB port on the back of the TeamPoS 3000XL2.
- 1.4.3. Turn on the TeamPoS 3000XL2
- 1.4.4. The WePOS operating system will discover the new 92U keyboard and start the installation wizard.
- 1.4.5. The driver you want to install is located in the folder "TeamPoS3000_Software_Support\Drivers\Keyboards\92U\Driver"



- 1.4.6. Once the driver for the 92U keyboard is installed you will be prompted by the installation wizard for a USB Serial Port driver
- 1.4.7. The driver you want to install is located in the folder
"TeamPoS3000_Software_Support\Drivers\Keyboards\92U\Driver"
- 1.4.8. Once the driver is loaded, the 92U keyboard will be installed and maps to COM6 on the TeamPoS 3000XL2
- 1.4.9. Use device manager in windows and remap the 92U keyboard COM6 to COM7
- 1.4.10. The 92U keyboard does not require OPOS to be installed to work with ISS45


1.5. VF60 USB 2x20 Display Installation


- 1.5.1. Shutdown the TeamPoS 3000XL2 prior to plugging in the VF60U display
- 1.5.2. Plug the 12v powered USB cable into an available powered USB port on the back of the TeamPoS 3000XL2
- 1.5.3. Turn on the TeamPoS 3000XL2
- 1.5.4. The driver for the VF60U has already been loaded in the WePOS image and the VF60U maps to COM46
- 1.5.5. Load OPOS for the VF60U by running the file FTXSOPOS_1_10_4.exe located in the folder
"TeamPoS3000_Software_Support\Drivers\OPOS\FTXSOPOS"

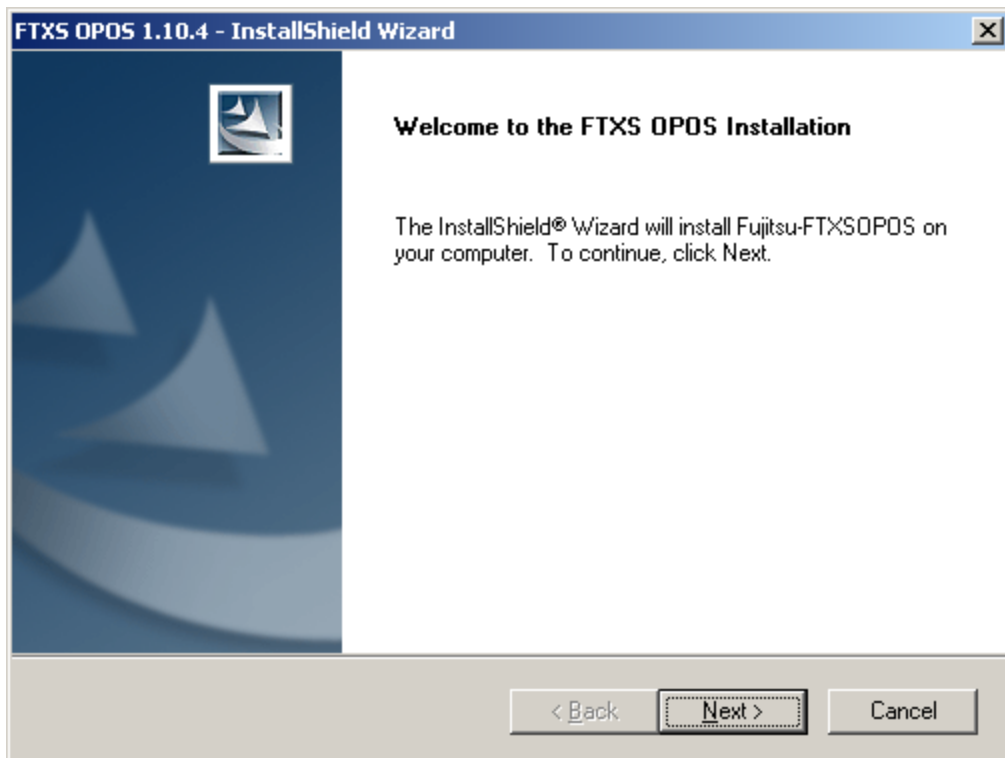

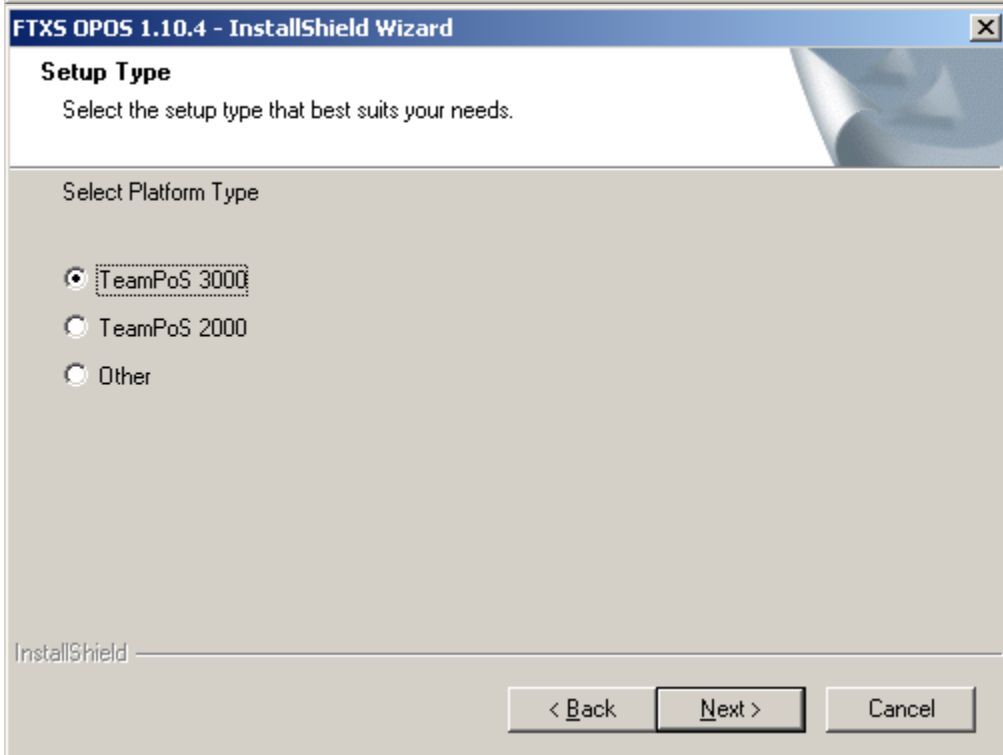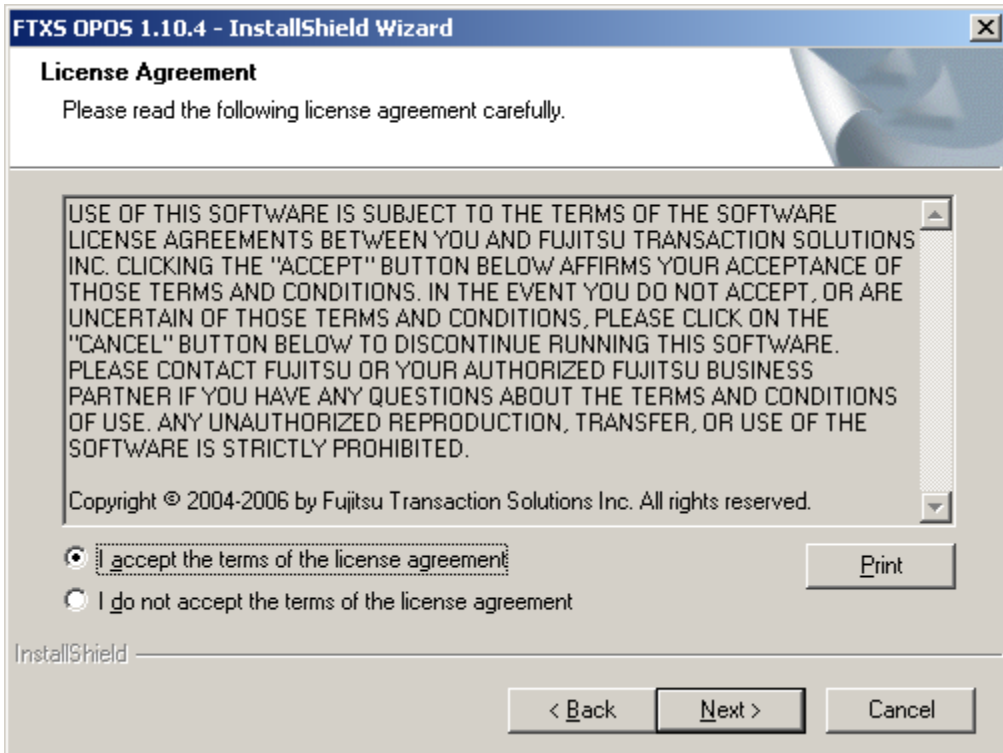

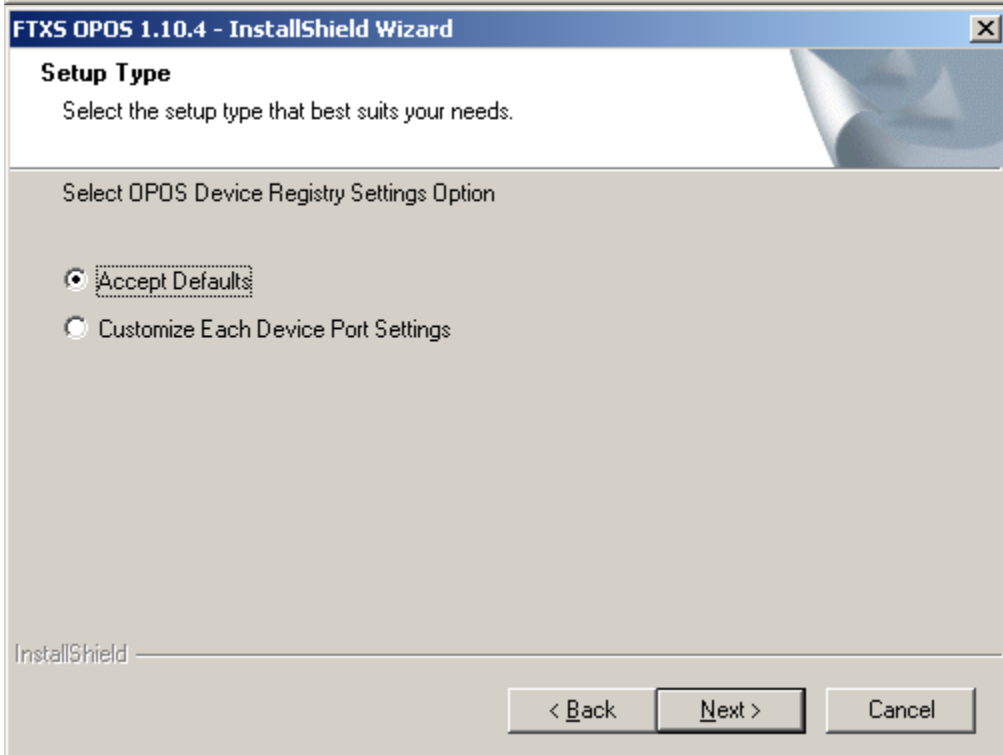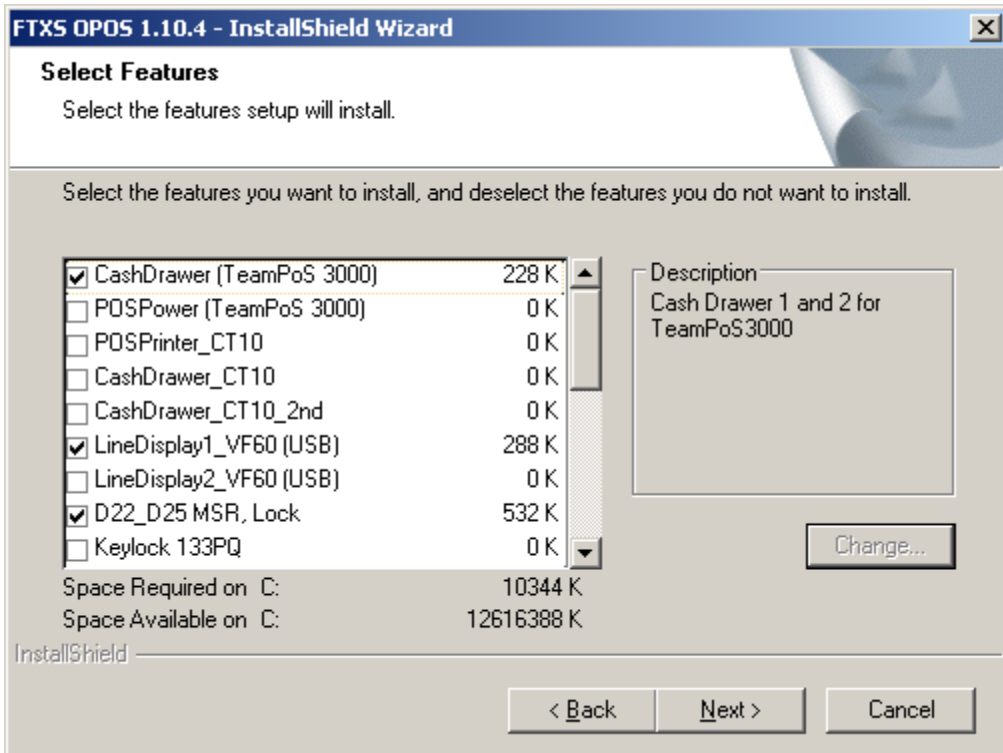



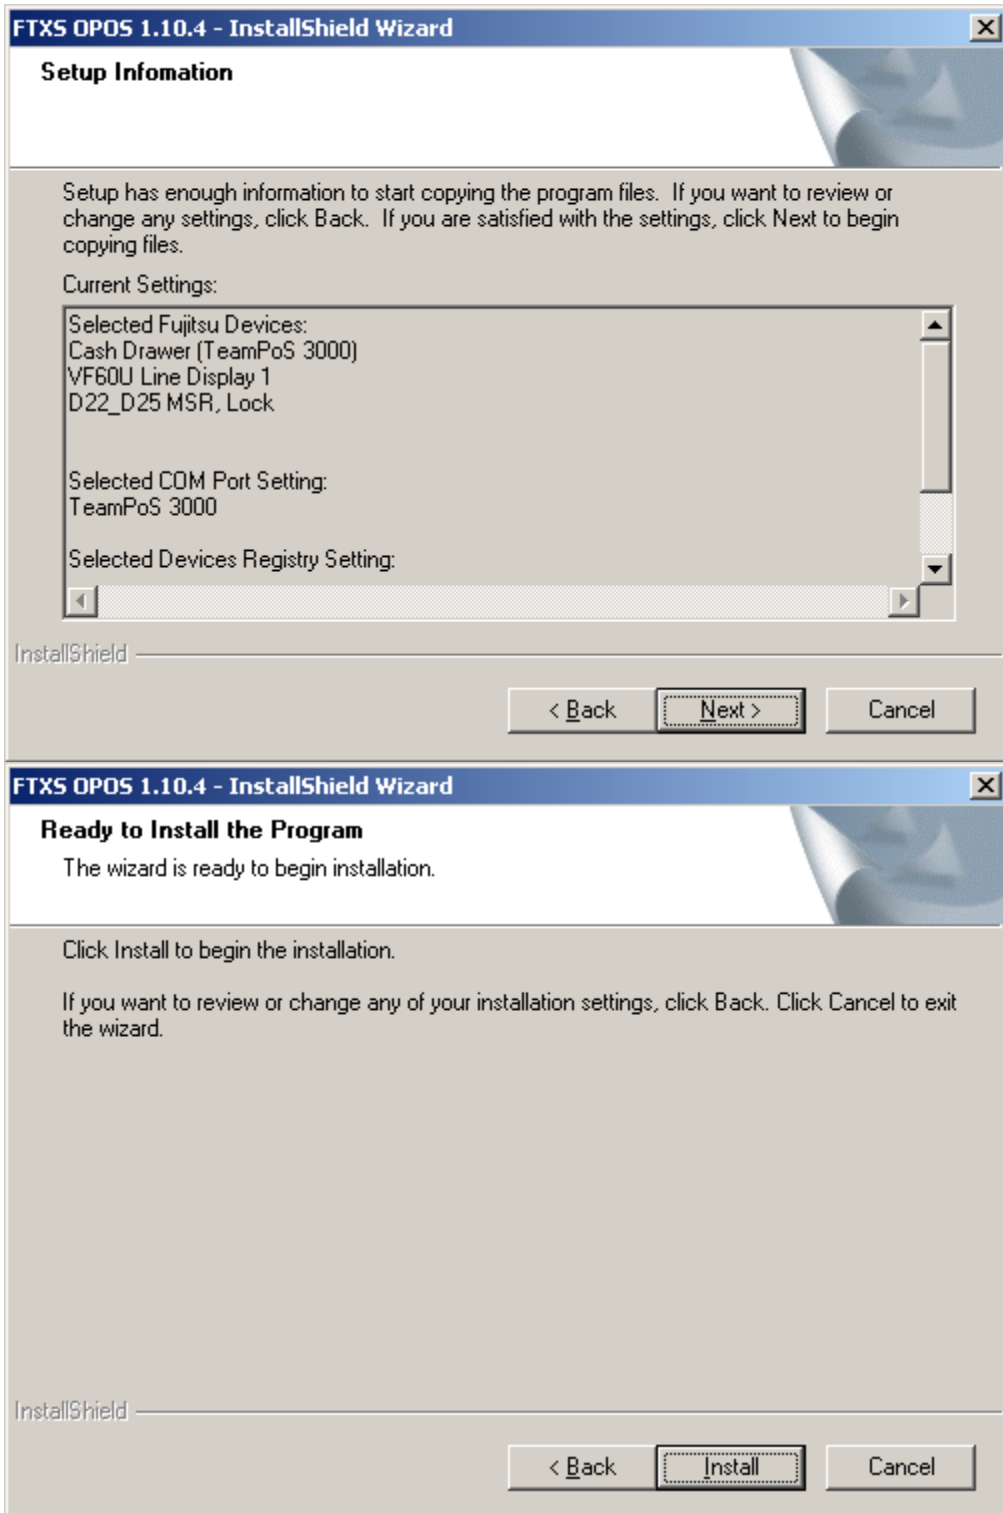



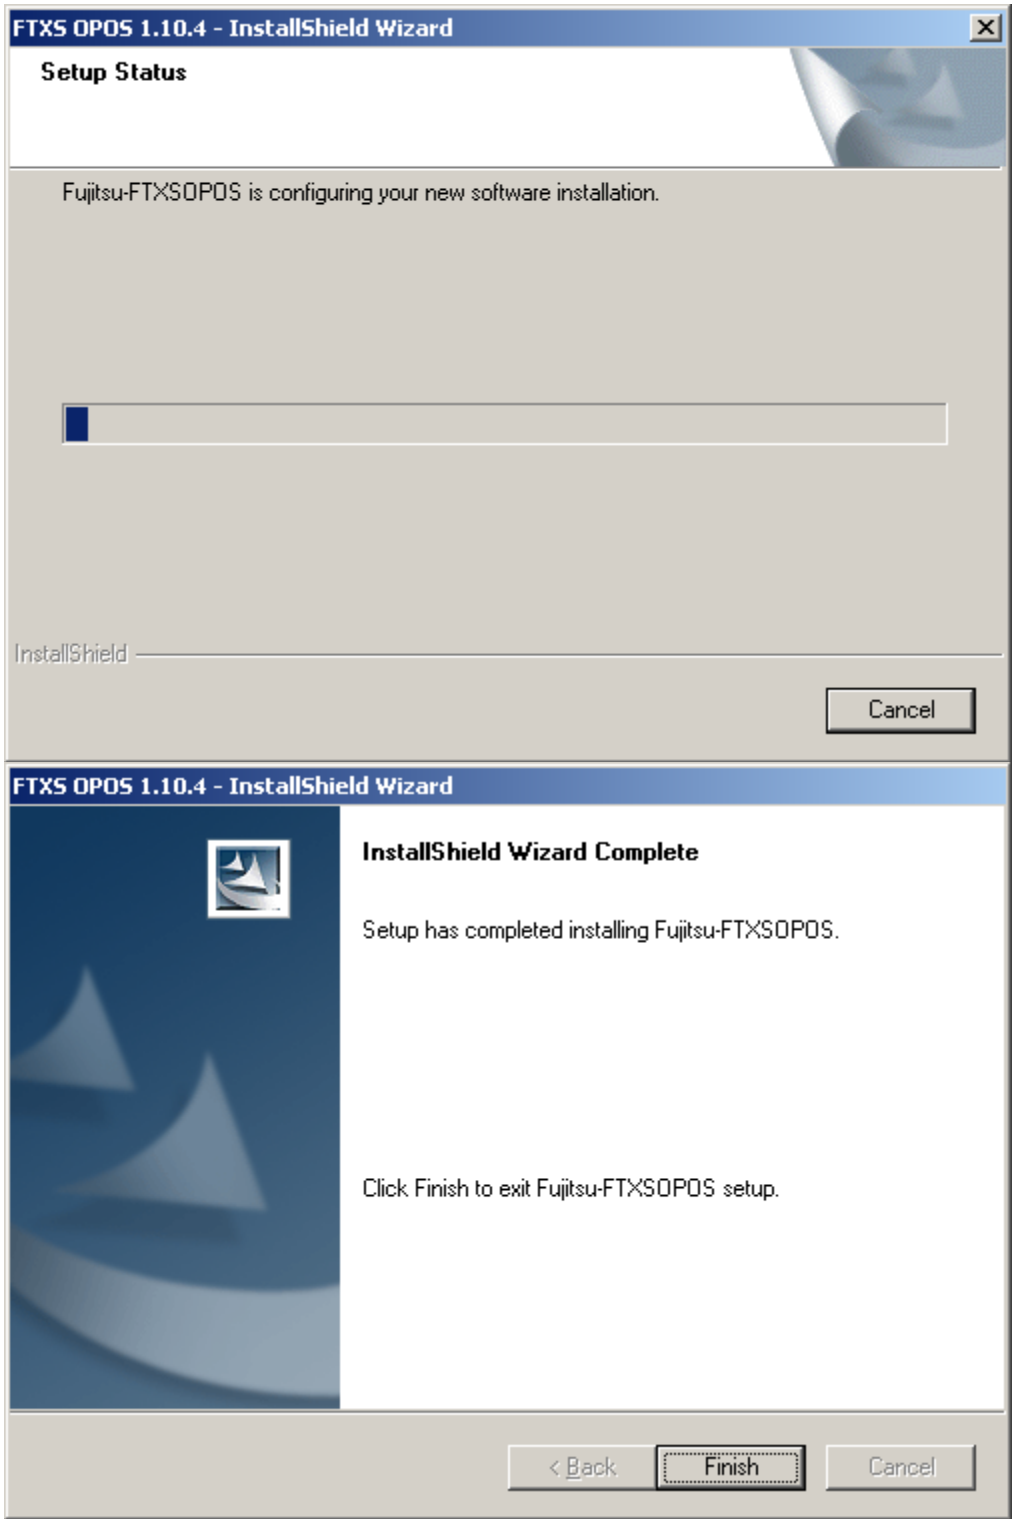




1.6. Epson 6000II USB or 6000III USB Printer Installation


- 1.6.1. Shutdown the TeamPoS 3000XL2 prior to plugging in the Epson printer
- 1.6.2. Plug the 24v powered USB cable into the 24v powered USB port on the back of the TeamPoS 3000XL2
- 1.6.3. Turn on the TeamPoS 3000XL2
- 1.6.4. The TMUSB driver has already been loaded in the WePOS image and will install automatically
- 1.6.5. Load OPOS for the Epson 6000II USB or 6000III USB printer
 - 1.6.5.1. Run the Epson OPOS which is located in the folder "TeamPoS3000_Software_Support\Drivers\Printers\DT50III\OPOS"
 - 1.6.5.2. Run setup.exe in the disk1 folder

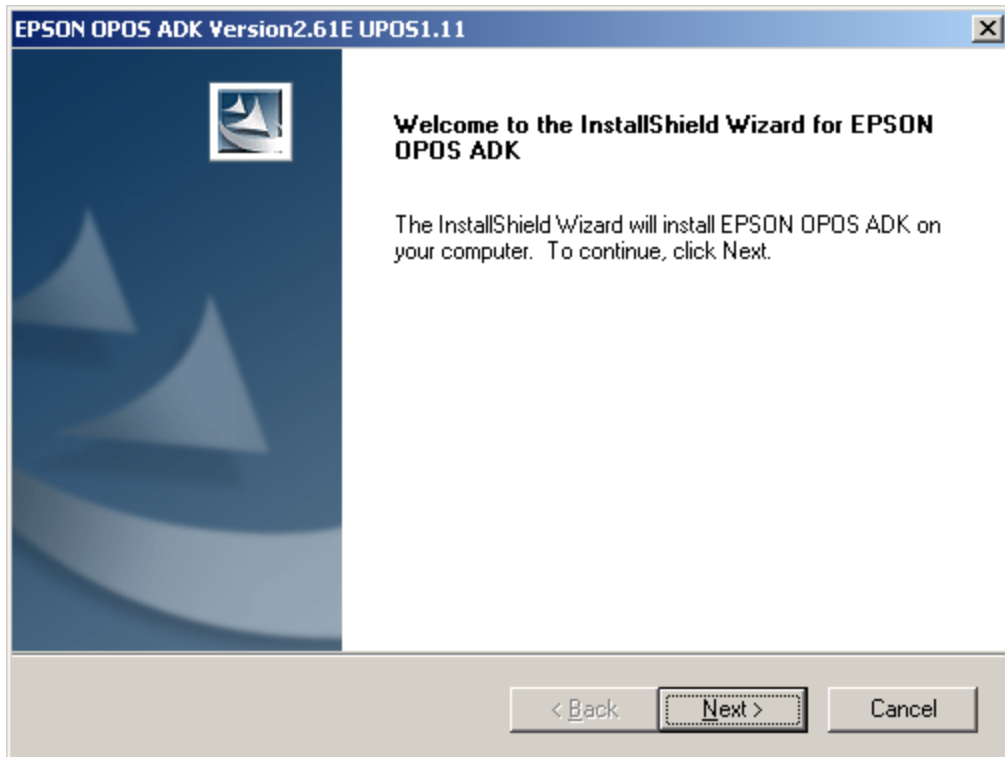

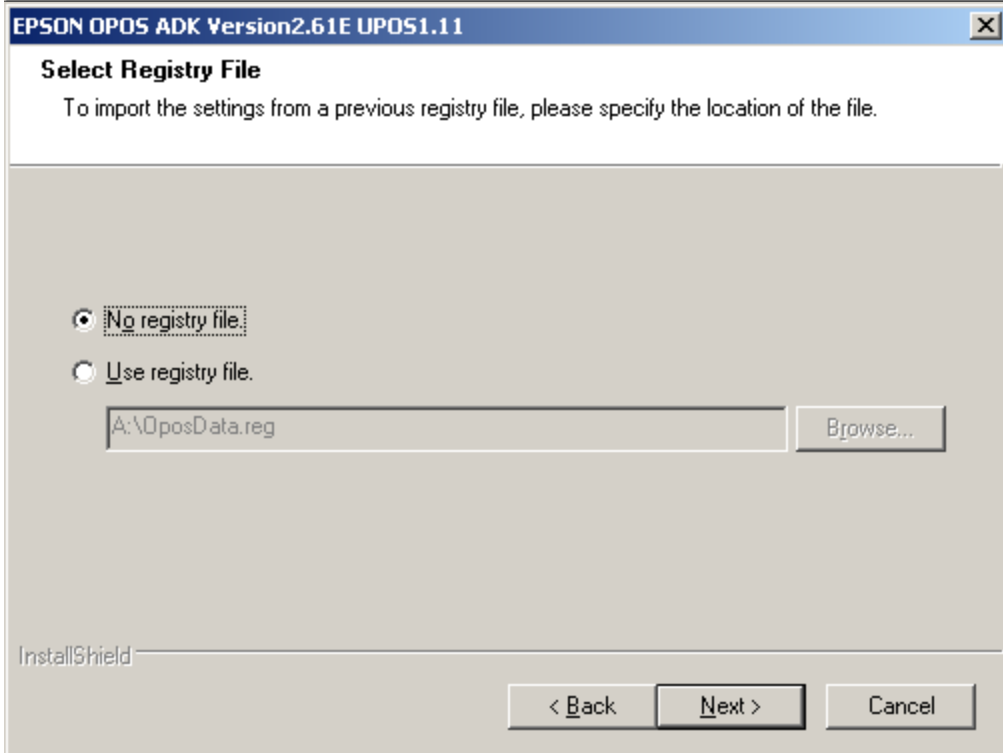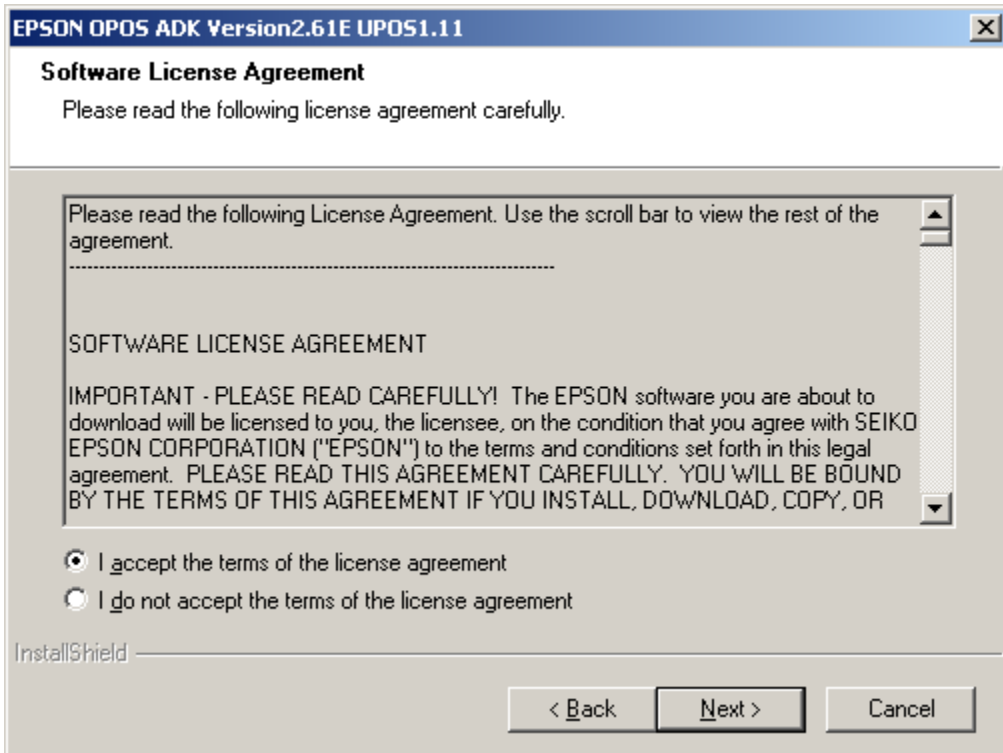


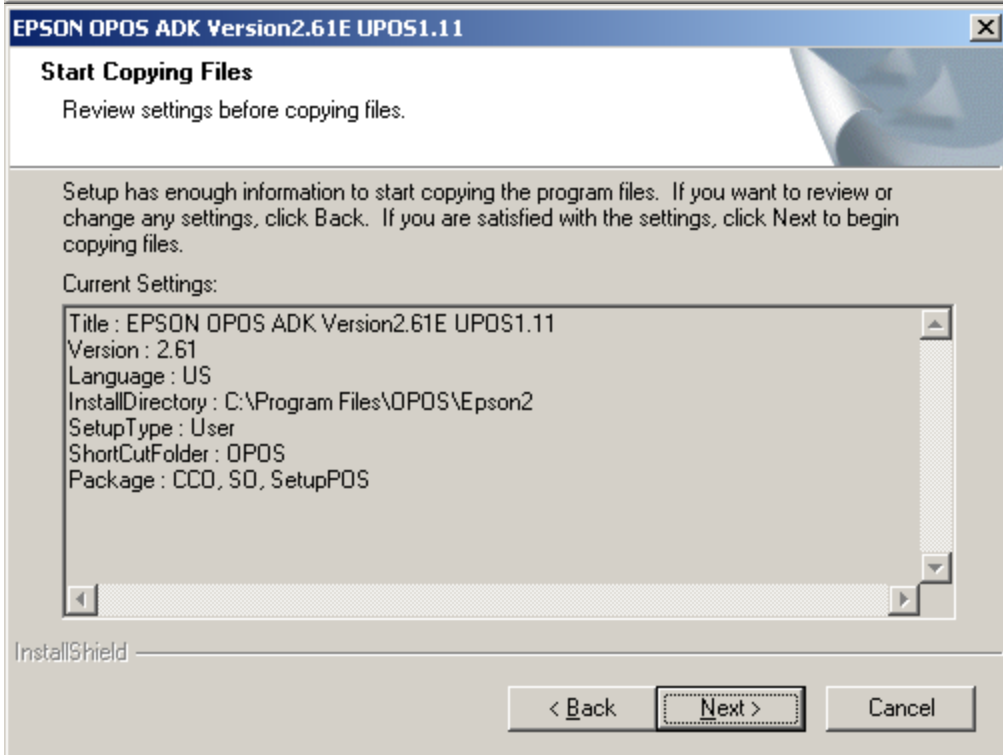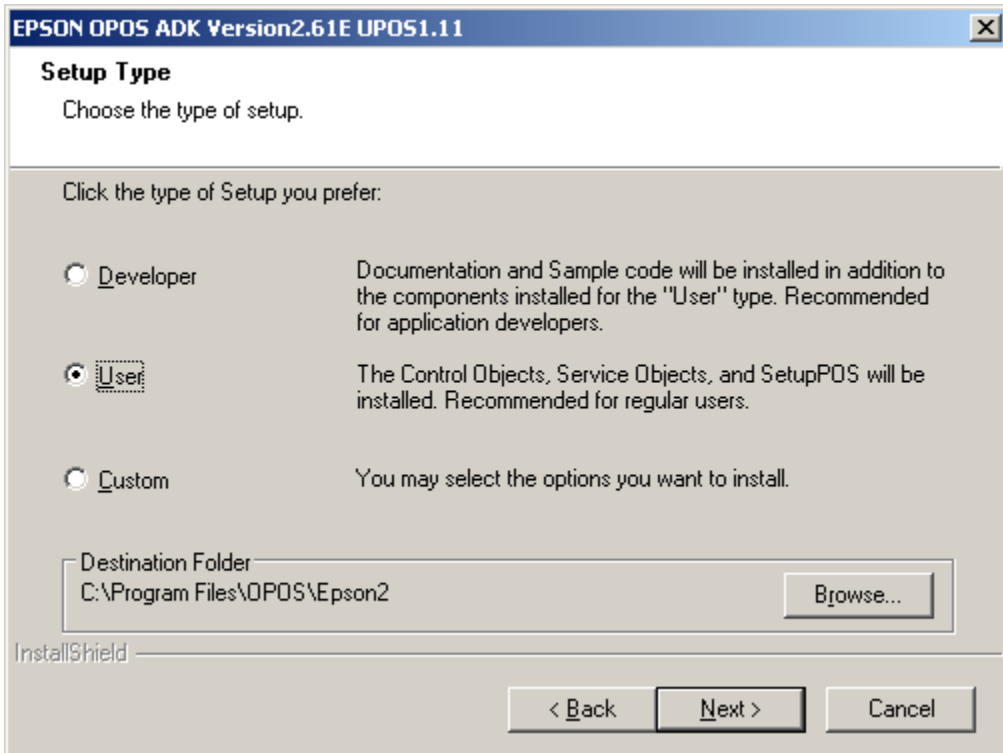

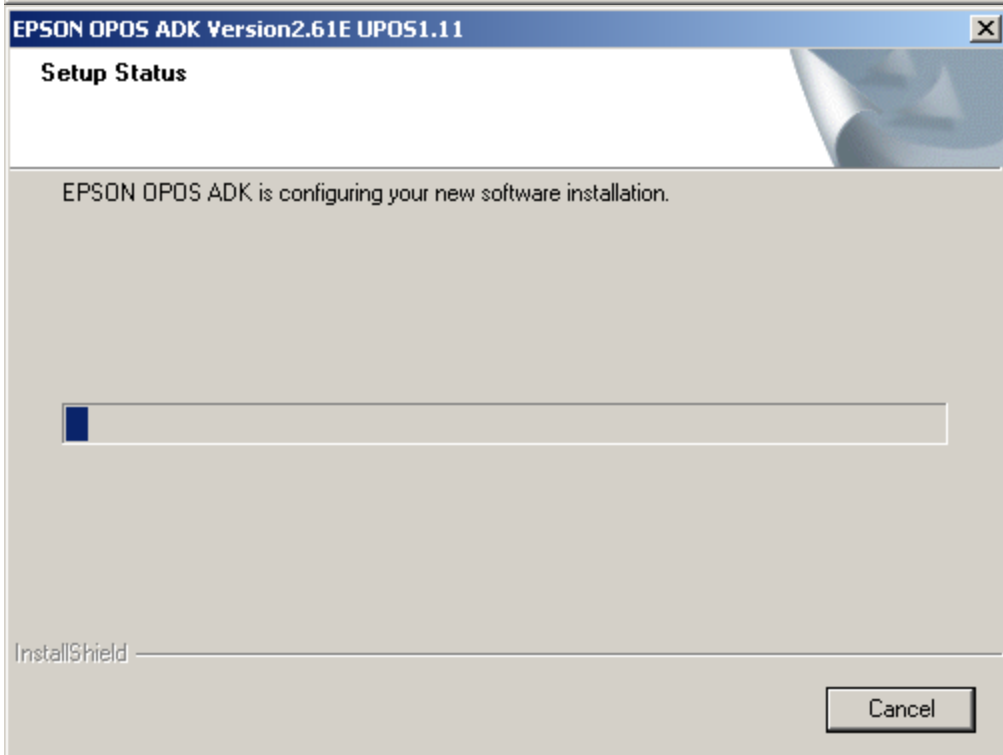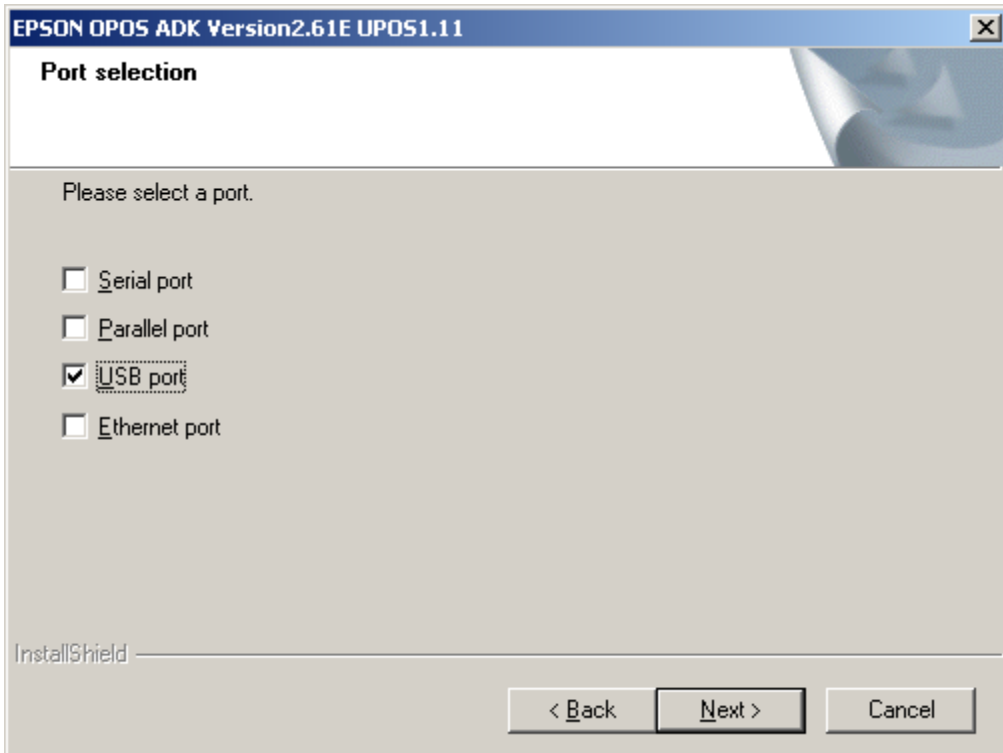

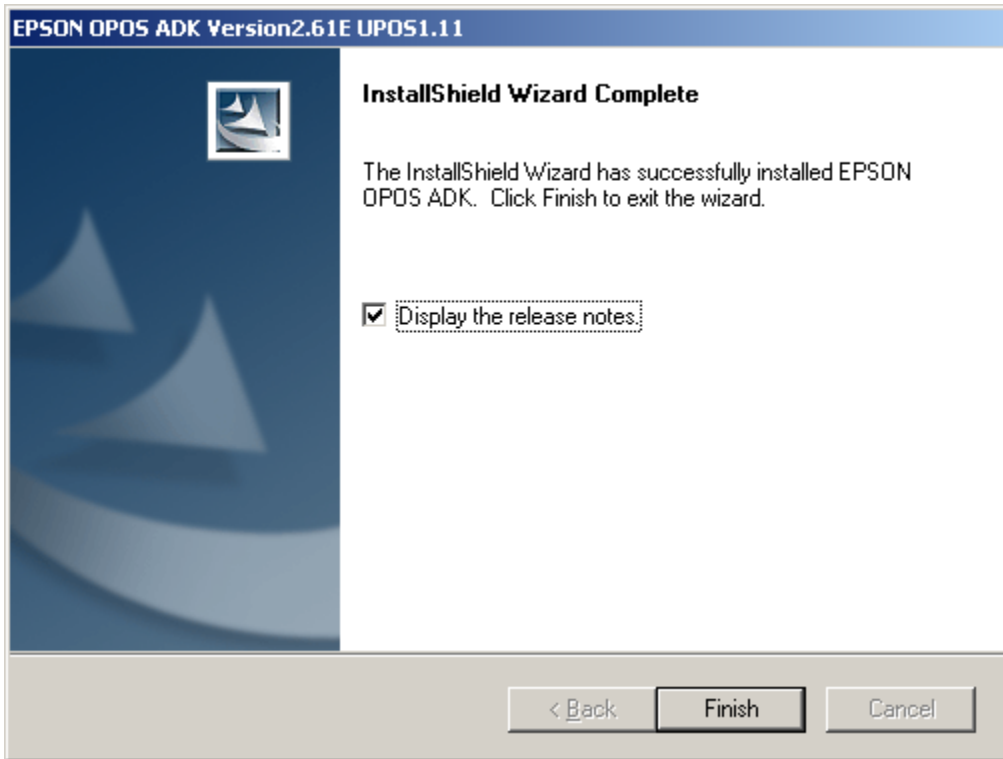

1.6.6. Setup the devices in the Epson device manager

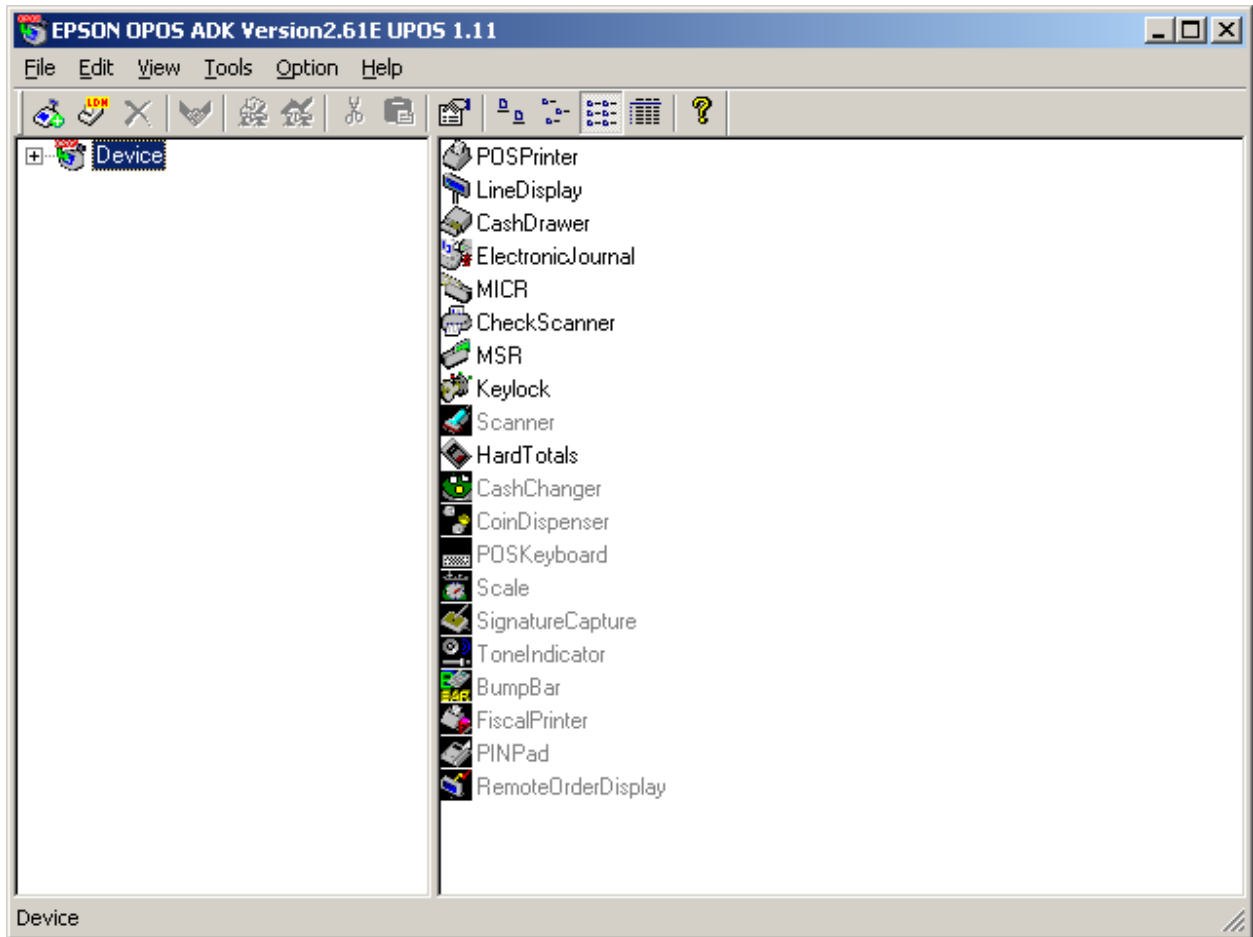


1.6.6.1. USB Printer

1.6.6.1.1. Add New Device

1.6.6.1.2. Select device name TM-H6000II or TM-H6000III


1.6.6.1.3. Select detailed model TM-H6000IIU or TM-H6000IIIU

1.6.6.1.4. Add New LDN TM-H6000IIU or TM-H6000IIIU

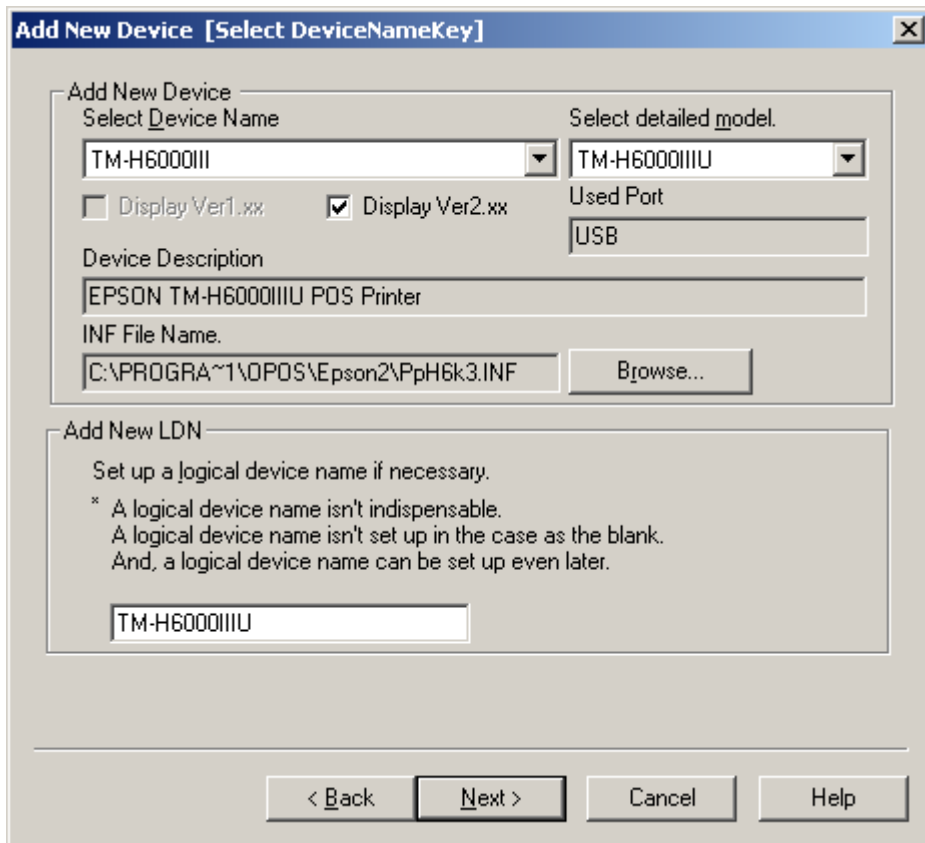

1.6.6.1.5. USB Port Settings

1.6.6.1.6. Default is USB1 but use Auto Settings to scan for port just in case it is on another USB port

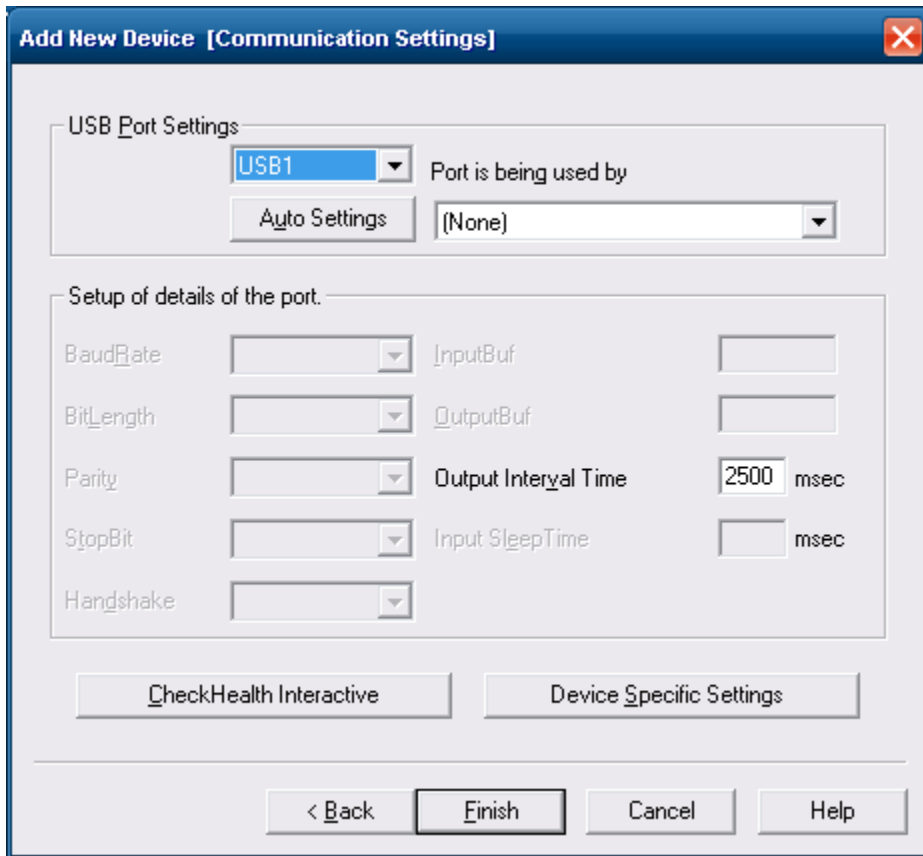

1.6.6.1.7. Run the Health Check Interactive to test Printer


1.6.6.2. MICR

1.6.6.2.1. Add New Device

1.6.6.2.2. Select device name TM-H6000II or TM-H6000III


1.6.6.2.3. Select detailed model TM-H6000IIU or TM-H6000IIIU

1.6.6.2.4. Add New LDN TM-H6000IIU or TM-H6000IIIU

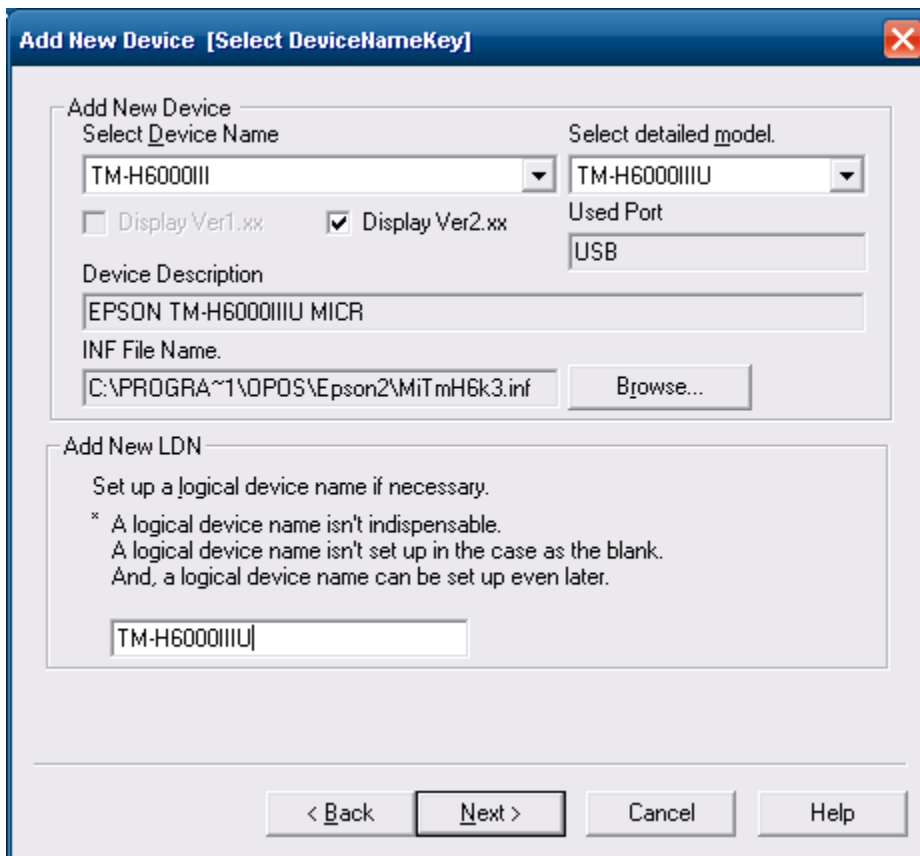

1.6.6.2.5. USB Port Settings

1.6.6.2.6. Default is USB1. Select the USB port that the print above uses.

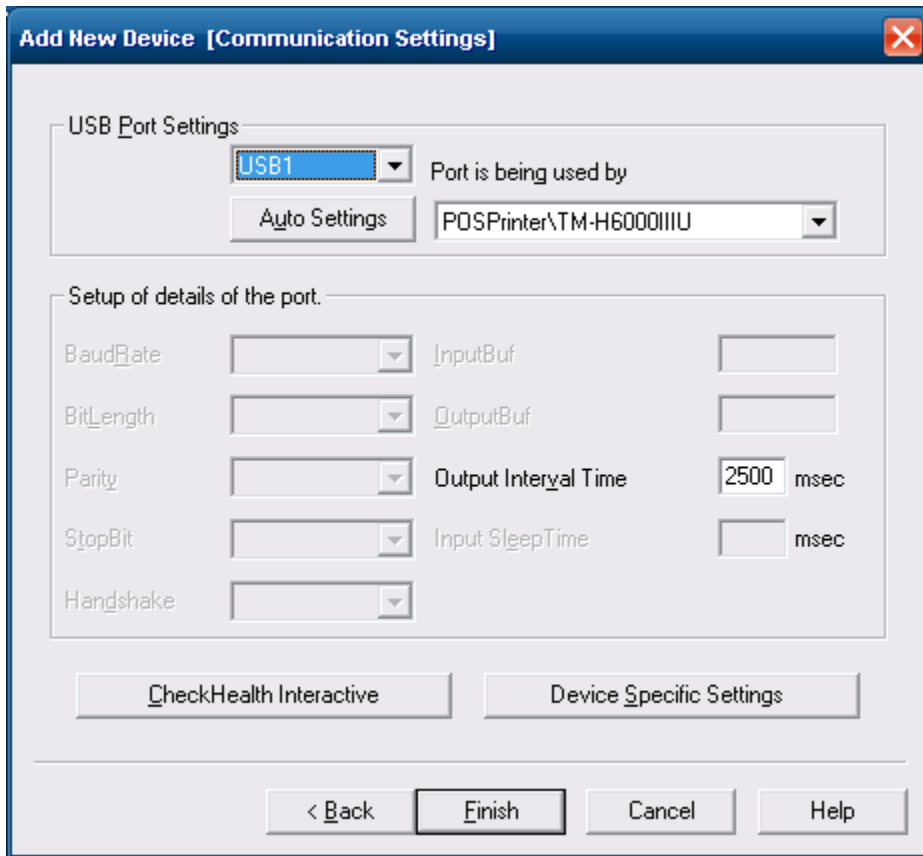

1.6.6.2.7. Run the Health Check Interactive to test MICR


1.6.6.3. Single CashDrawer

1.6.6.3.1. Add New Device

1.6.6.3.2. Select device name Standard (for single cash drawer)


1.6.6.3.3. Select detailed model StandardU

1.6.6.3.4. Add New LDN TM-H6000IIU or TM-H6000IIIU

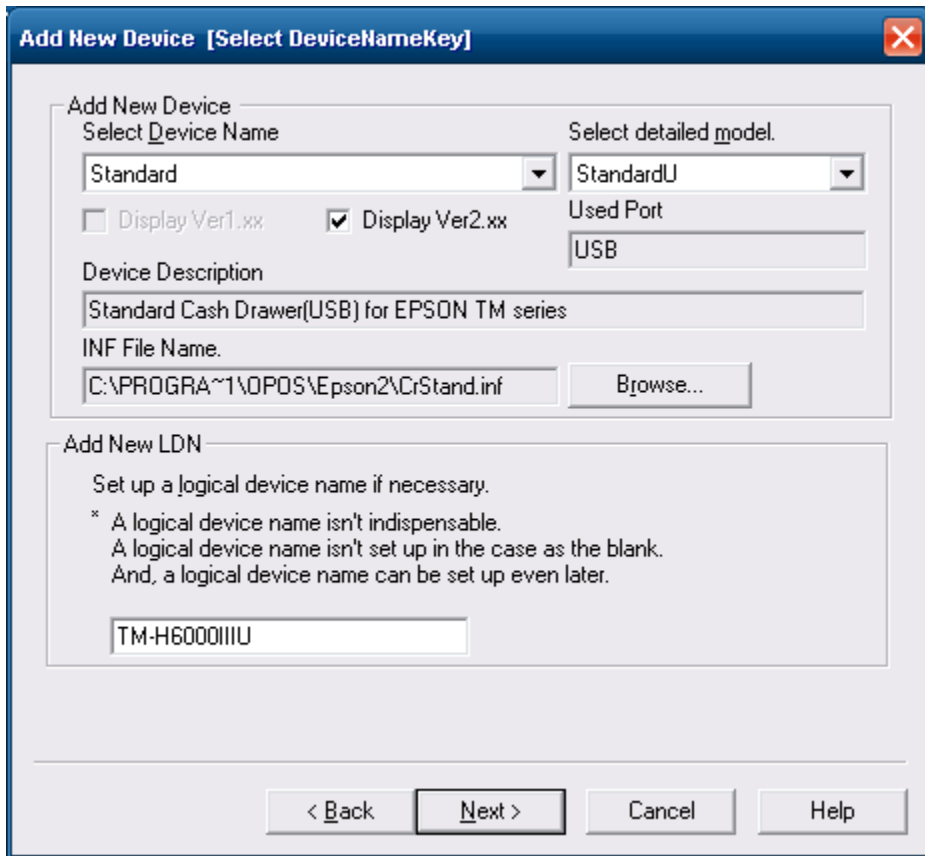


1.6.6.3.5. USB Port Settings

1.6.6.3.6. Default is USB1. Select the USB port that the print above uses.

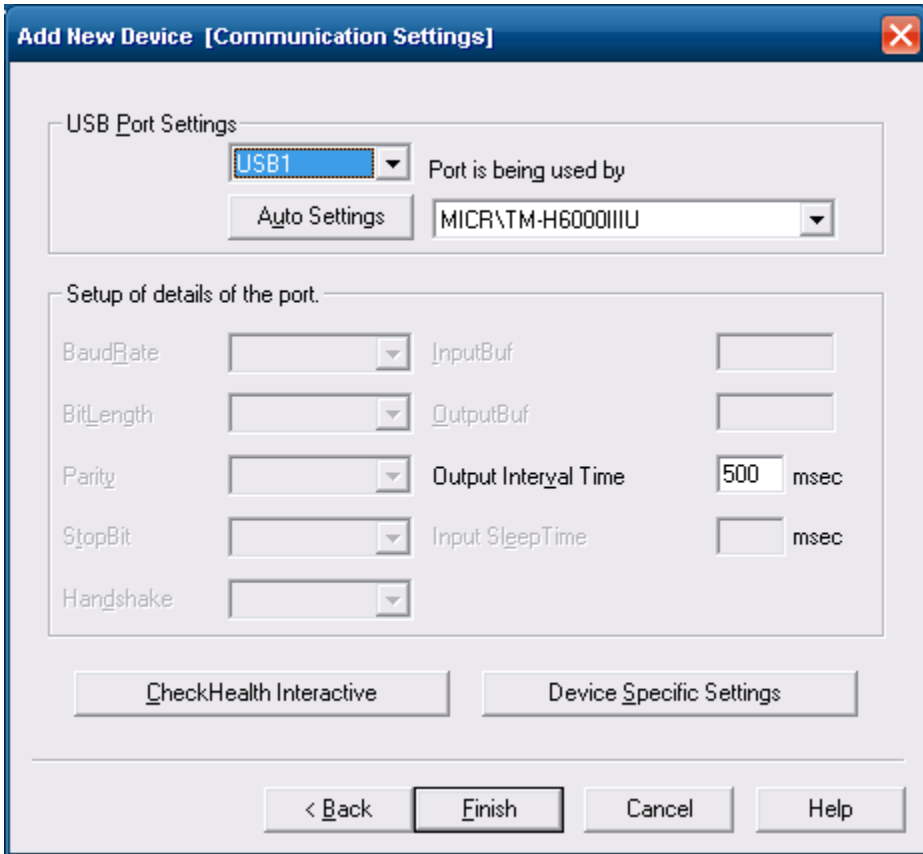


- 1.6.6.3.7. Need to set Device Specific Settings
 - 1.6.6.3.7.1. Leave Pulse Time (ms) 100
 - 1.6.6.3.7.2. Change Open Status Phase to High
 - 1.6.6.3.7.3. Leave Connector Pin 2

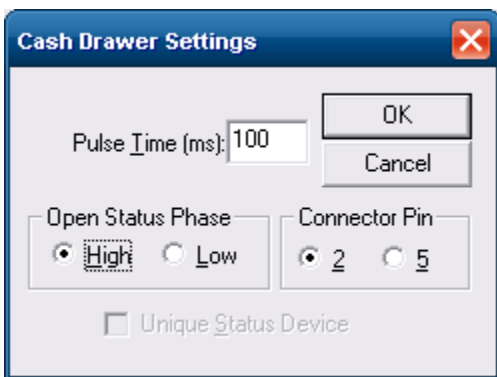

- 1.6.6.3.8. Run the Health Check Interactive to test
 - 1.6.6.3.8.1.A screen showing OPOS contradictory warning will appear if the output interval time does not match the printers 2500msec.

1.6.6.3.8.2. Click OK and the cash drawer will be adjusted to 2500msec to match

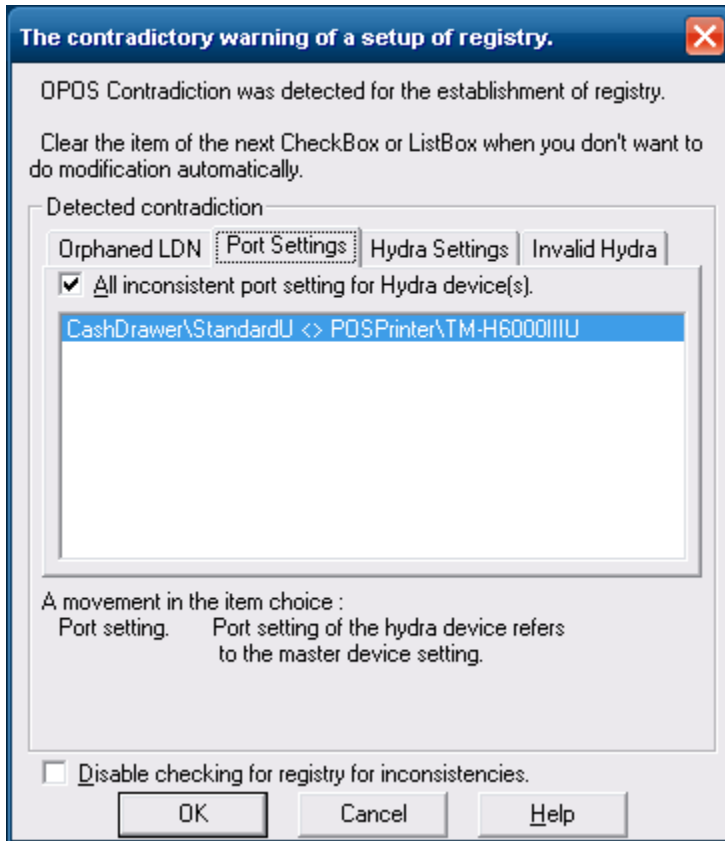


1.6.6.4. Dual Cash Drawers

1.6.6.4.1. Add New Device

1.6.6.4.2. Select device name Multi_A (for cash drawer A)


1.6.6.4.3. Select detailed model Multi_AU

1.6.6.4.4. Add New LDN Multi_AU

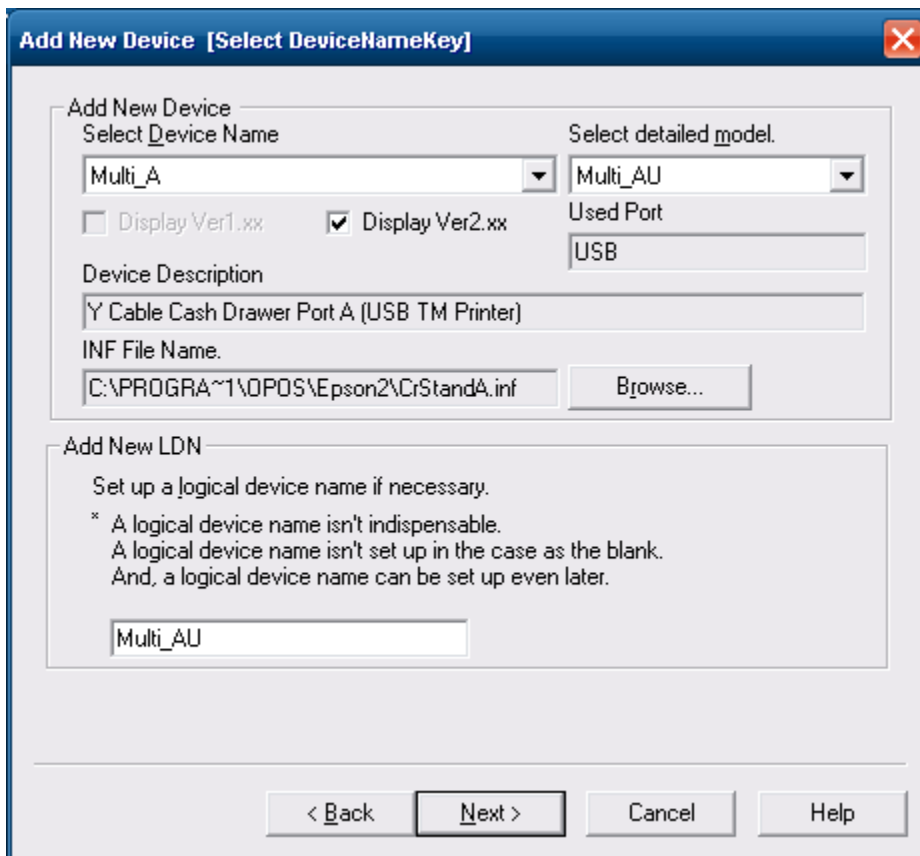

1.6.6.4.5. USB Port Settings

1.6.6.4.6. Default is USB1. Select the USB port that the print above uses.

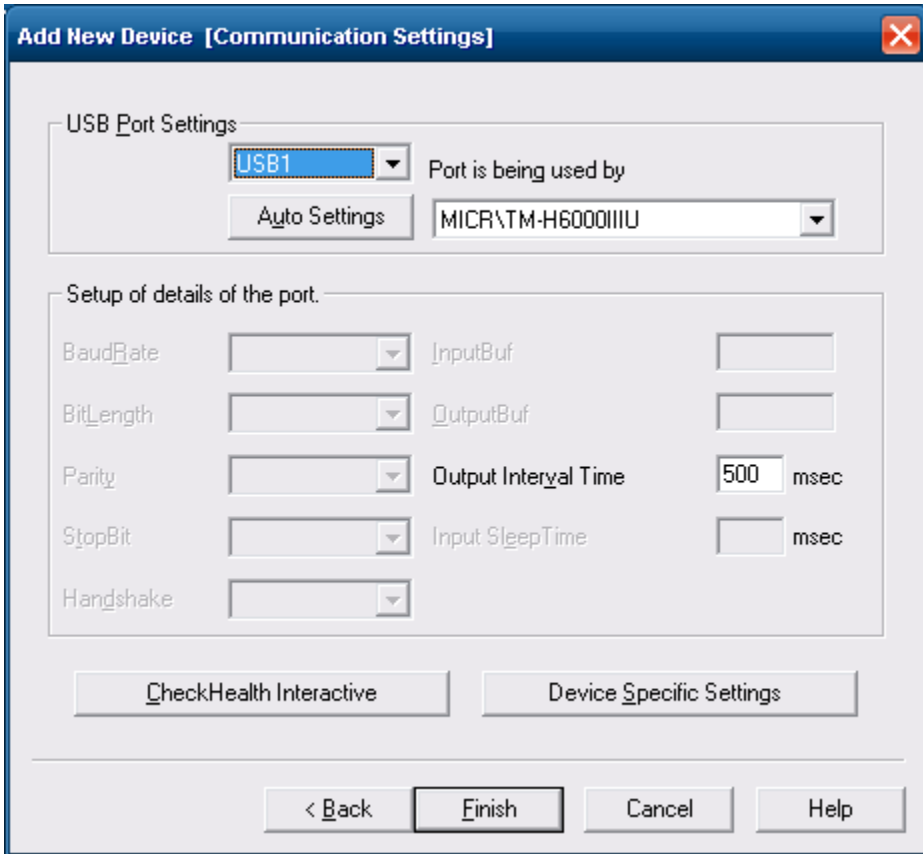


1.6.6.4.7. Need to set Device Specific Settings

1.6.6.4.7.1. Leave Pulse Time (ms) 100

1.6.6.4.7.2. Change Open Status Phase to High


1.6.6.4.7.3. Leave Connector Pin 2

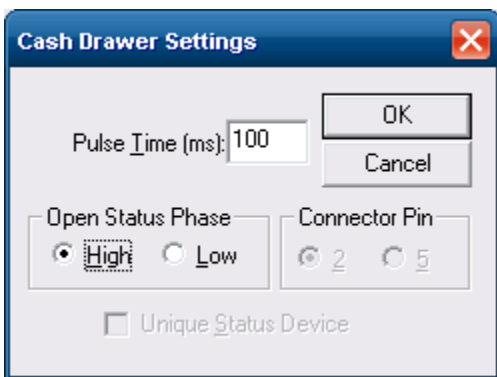

1.6.6.4.8. Run the Health Check Interactive to test

1.6.6.4.8.1. A screen showing OPOS contradictory warning will appear if the output interval time does not match the printers 2500msec.

1.6.6.4.8.2. Click OK and the cash drawer will be adjusted to 2500msec to match

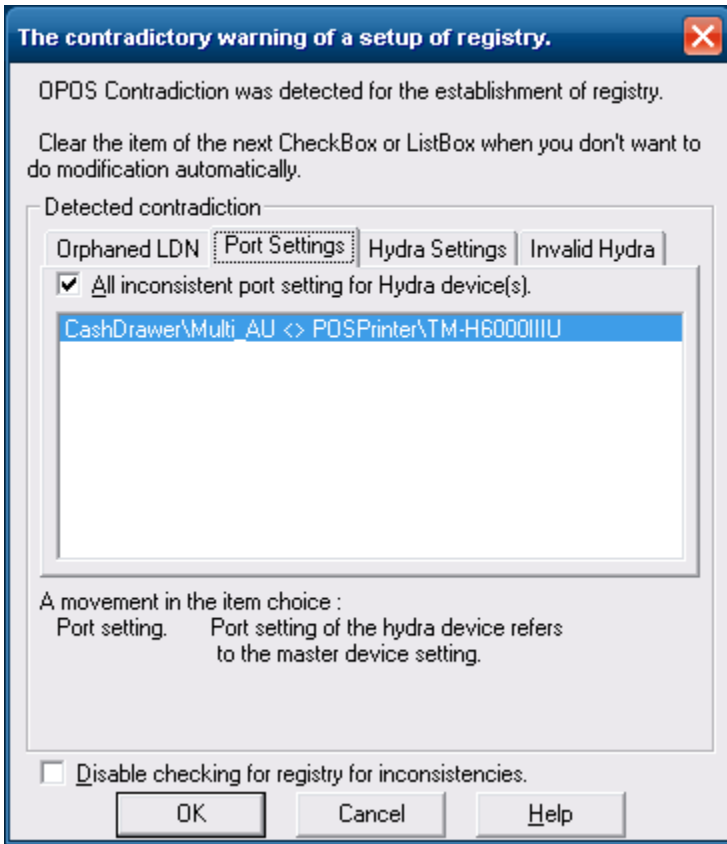


1.6.6.4.9. Add New Device

1.6.6.4.10. Select device name Multi_B (for cash drawer B)


1.6.6.4.11. Select detailed model Multi_BU

1.6.6.4.12. Add New LDN Multi_BU

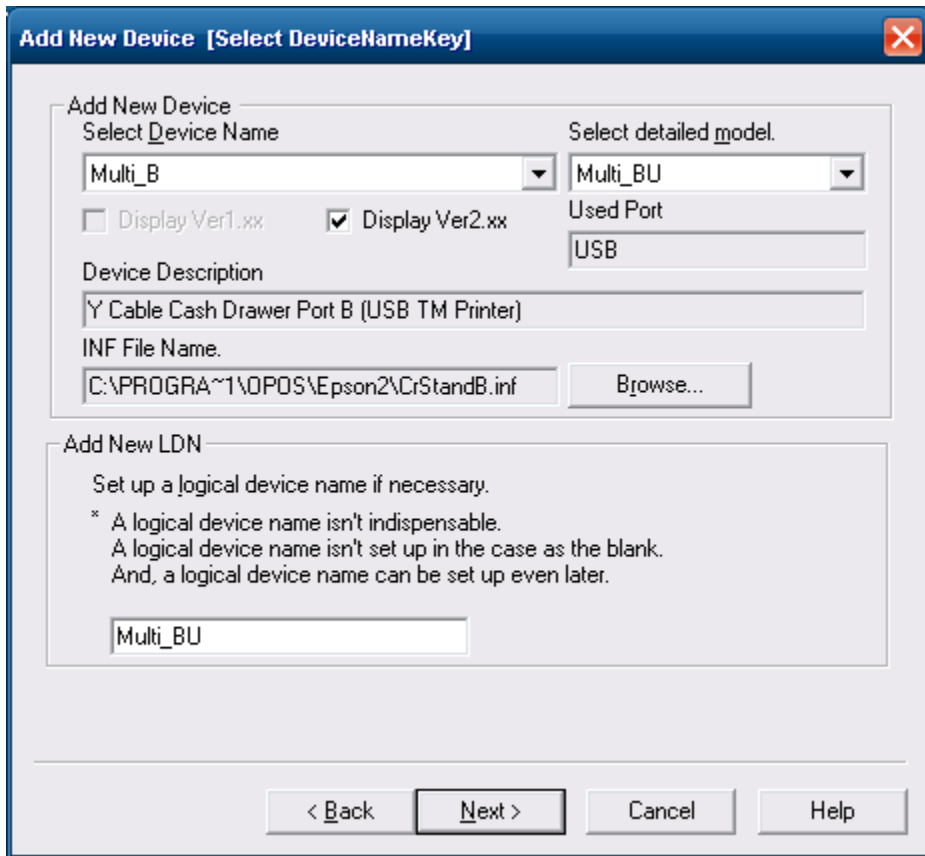


1.6.6.4.13. USB Port Settings

1.6.6.4.14. Default is USB1. Select the USB port that the print above uses.

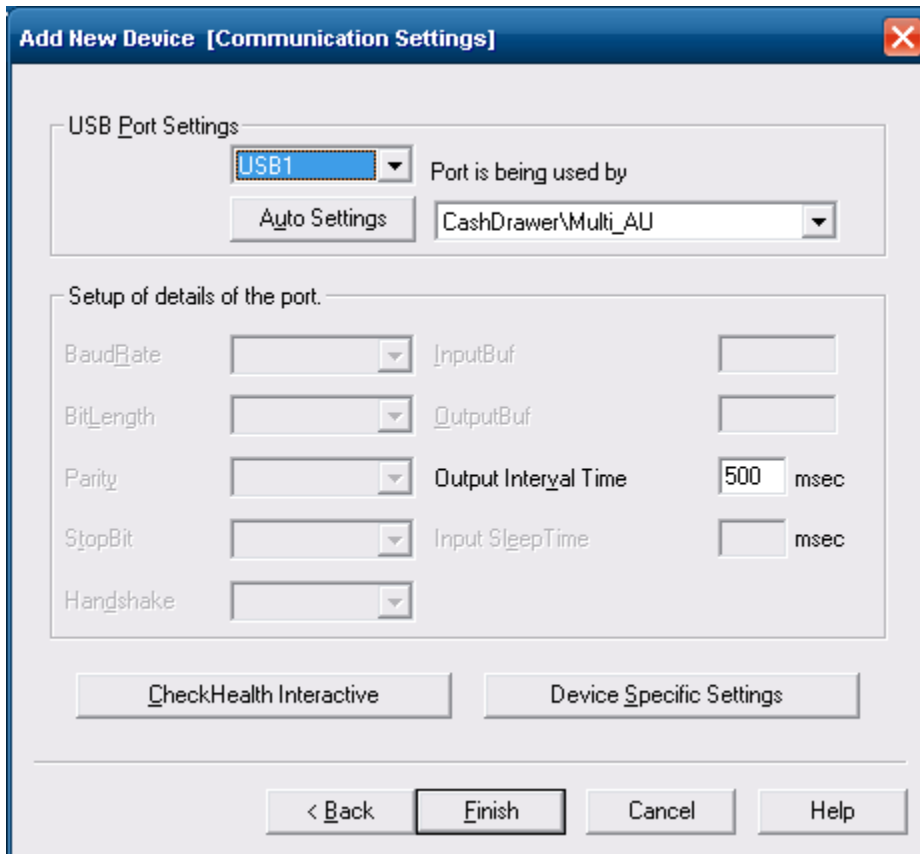


1.6.6.4.15. Need to set Device Specific Settings

- 1.6.6.4.15.1. Leave Pulse Time (ms) 100
- 1.6.6.4.15.2. Change Open Status Phase to High
- 1.6.6.4.15.3. Leave Connector Pin 2

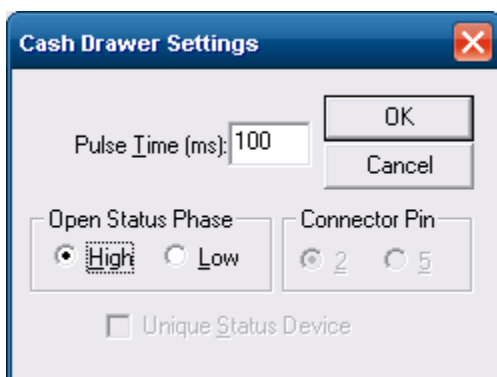

1.6.6.4.16. Run the Health Check Interactive to test

- 1.6.6.4.16.1. A screen showing OPOS contradictory warning will appear if the output interval time does not match the printers 2500msec.
- 1.6.6.4.16.2. Click OK and the cash drawer will be adjusted to 2500msec to match

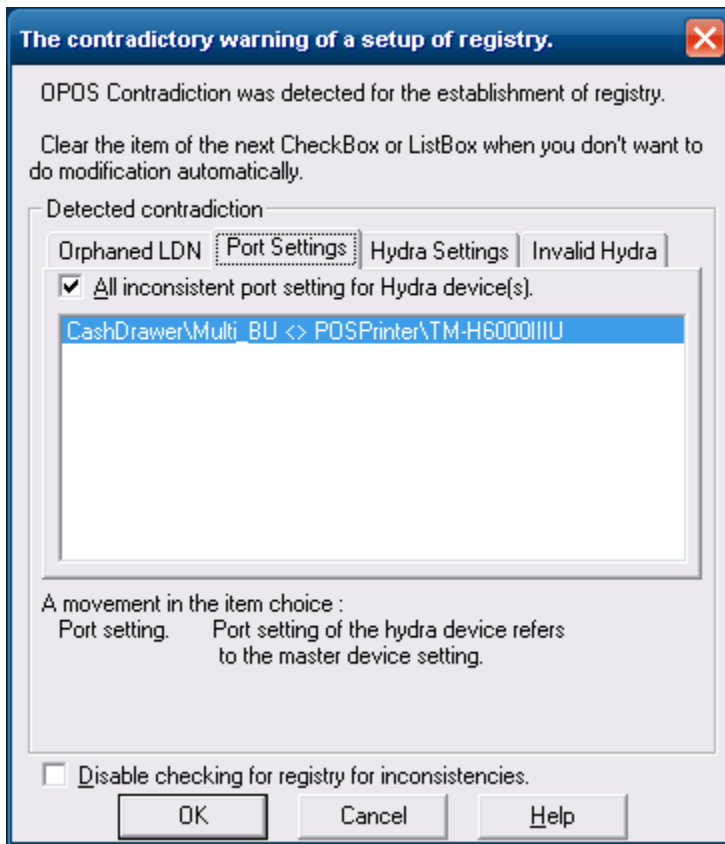



1.7. Epson 6000II RS232 or 6000III RS232 Printer Installation



1.7.1. Load OPOS for the Epson 6000II RS232 or 6000III RS232 printer



1.7.1.1. Run the Epson OPOS which is located in the folder


"TeamPoS3000_Software_Support\Drivers\Printers\DT50III\OPOS"

1.7.1.2. Run setup.exe in the disk1 folder

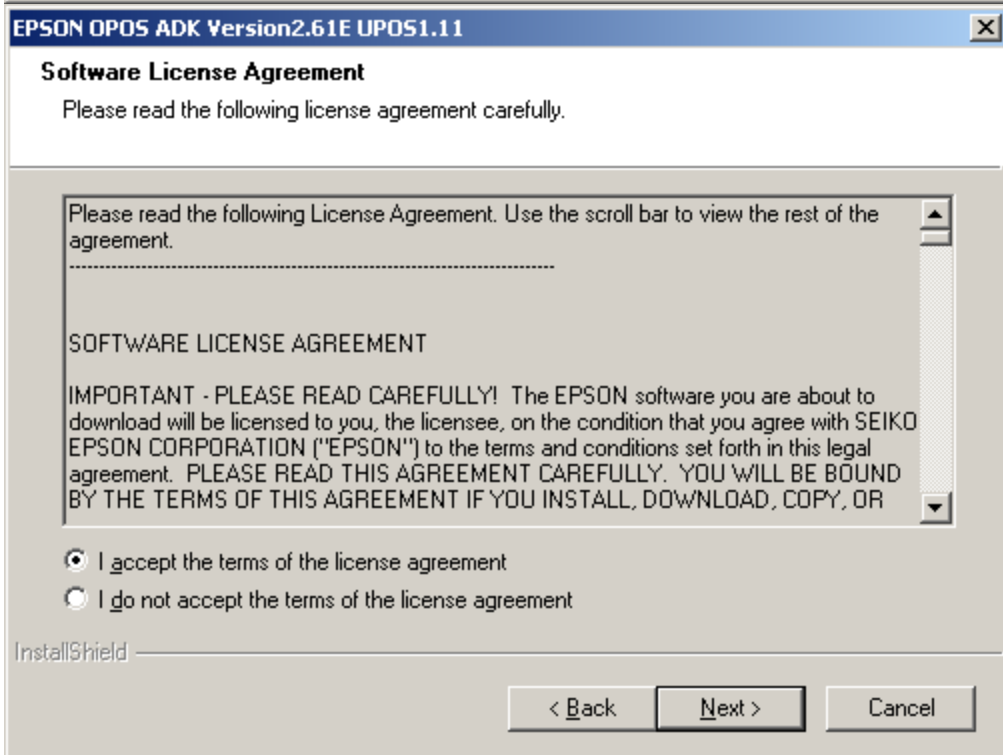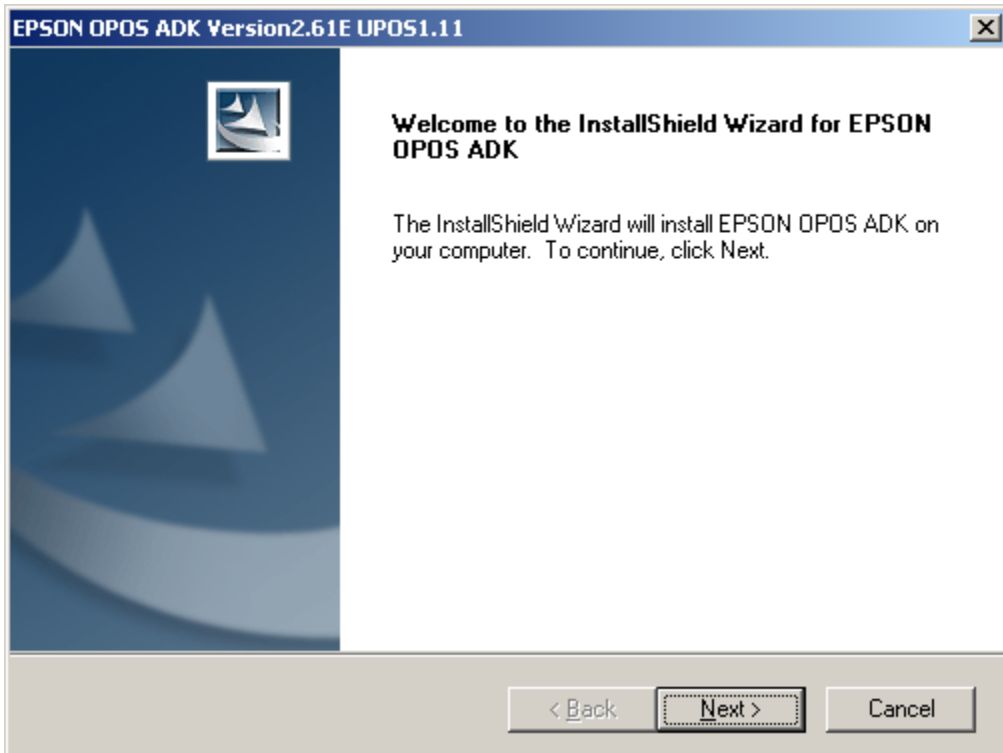


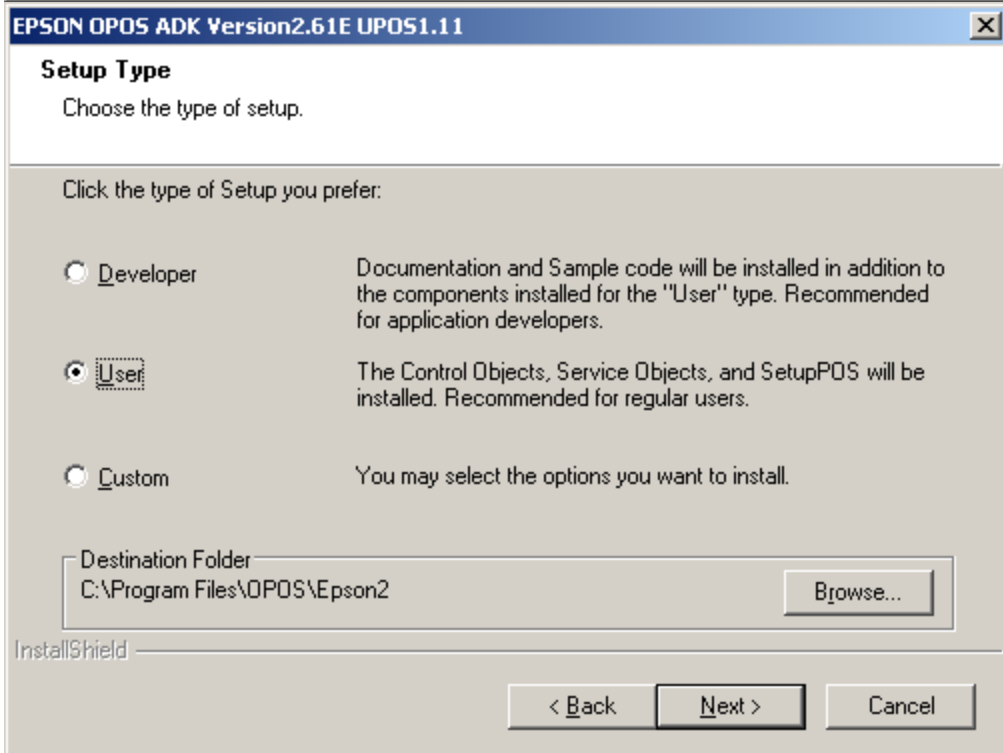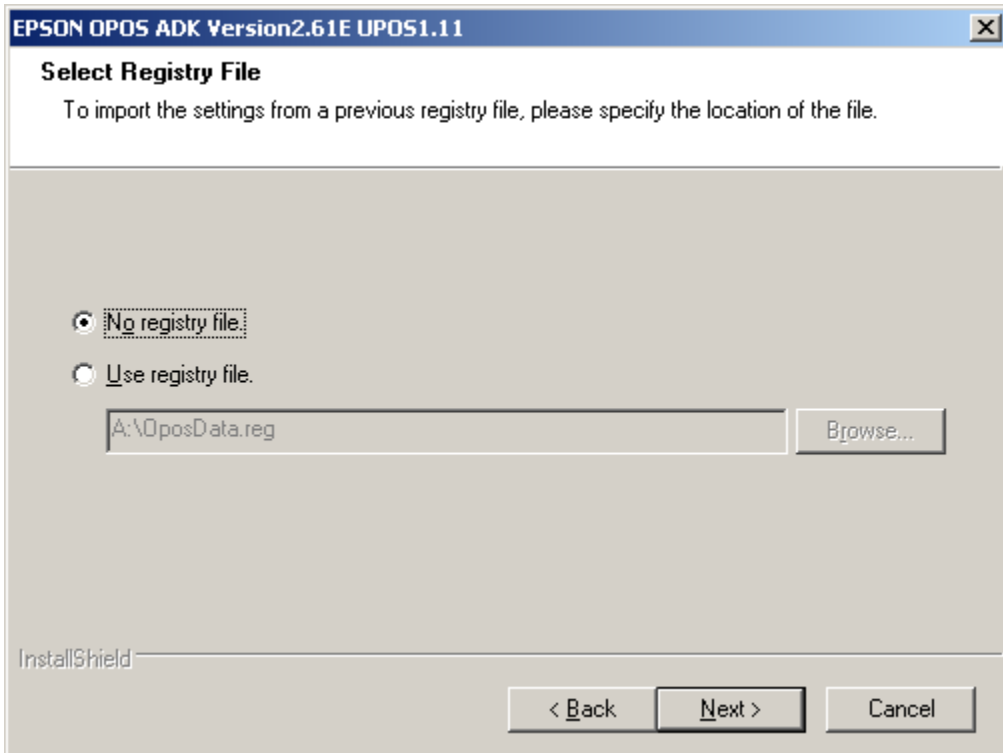

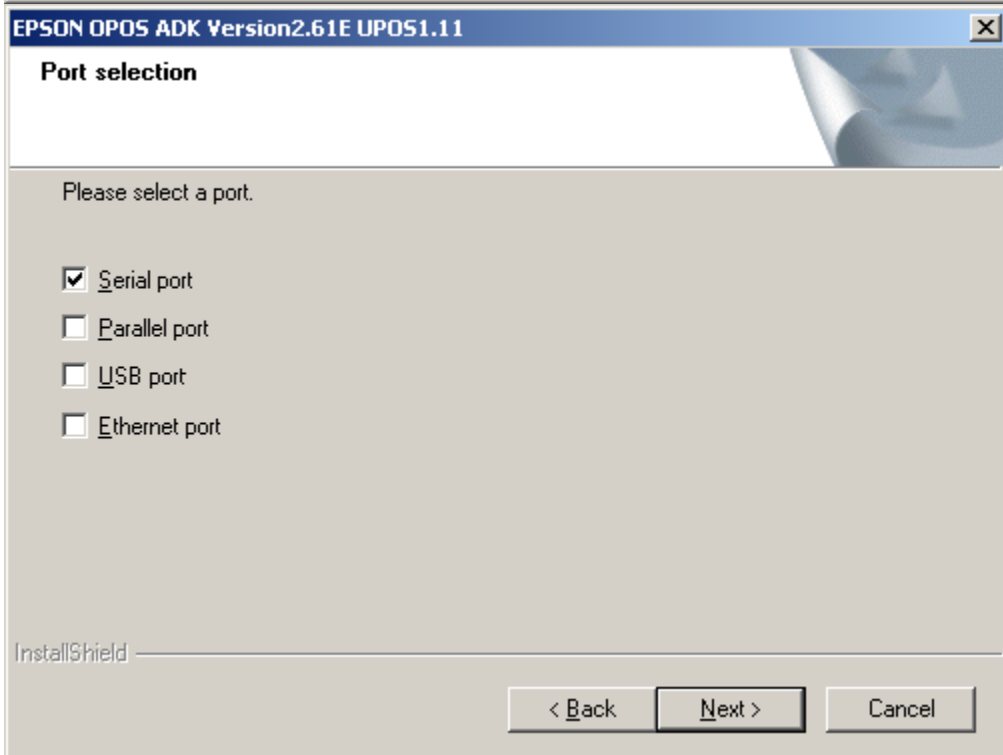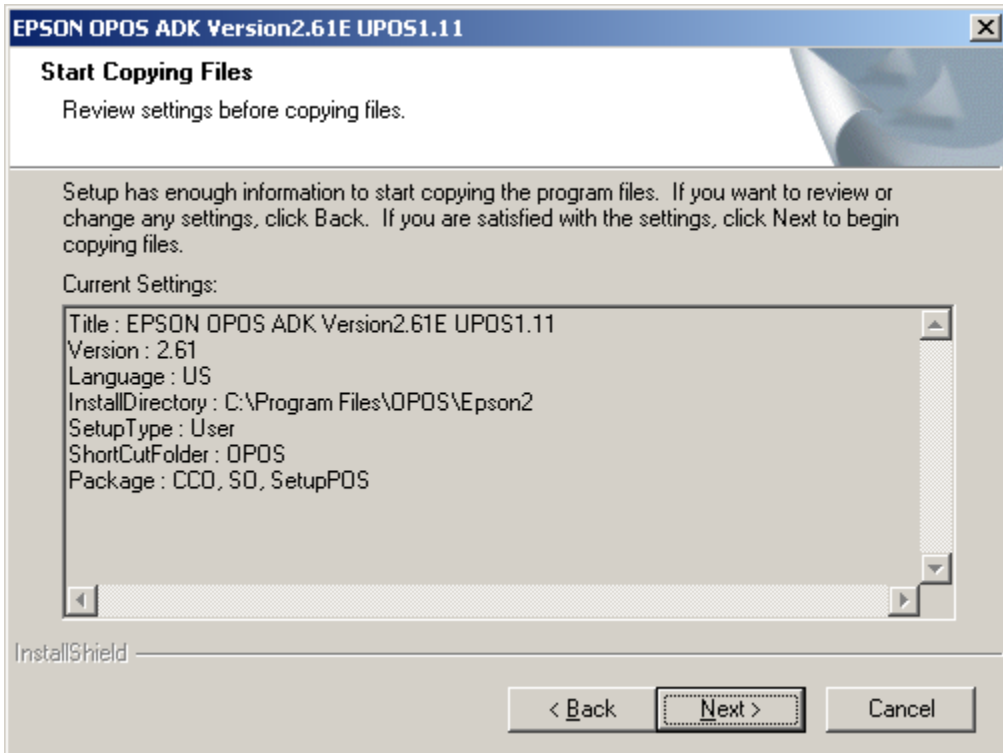

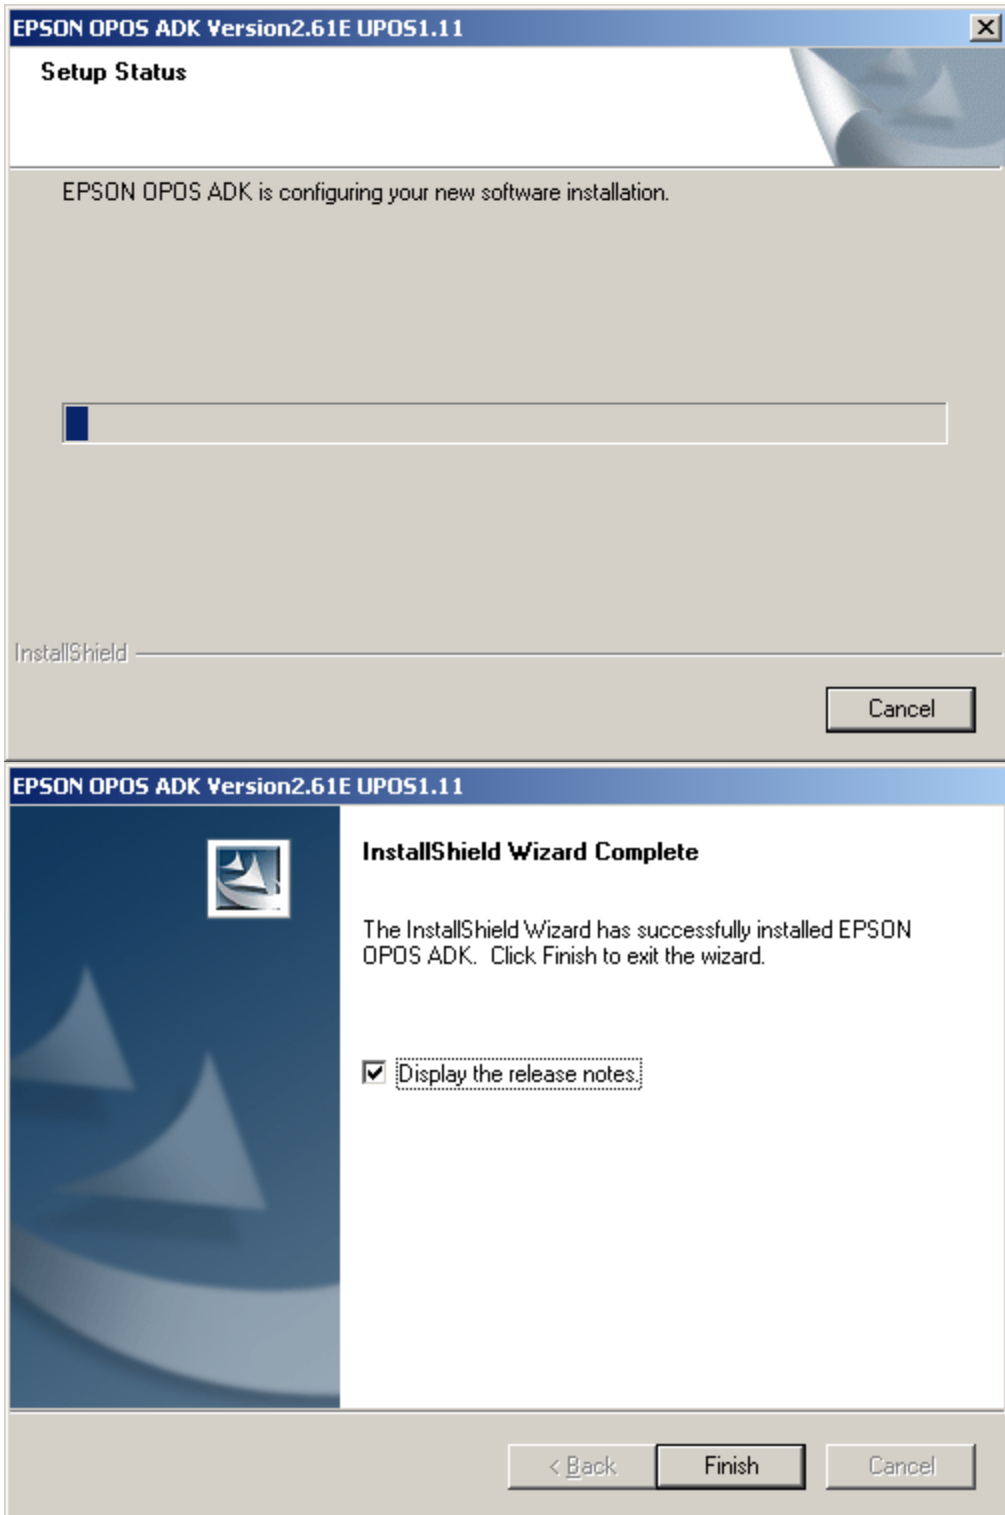

1.7.2. Setup the devices in the Epson device manager

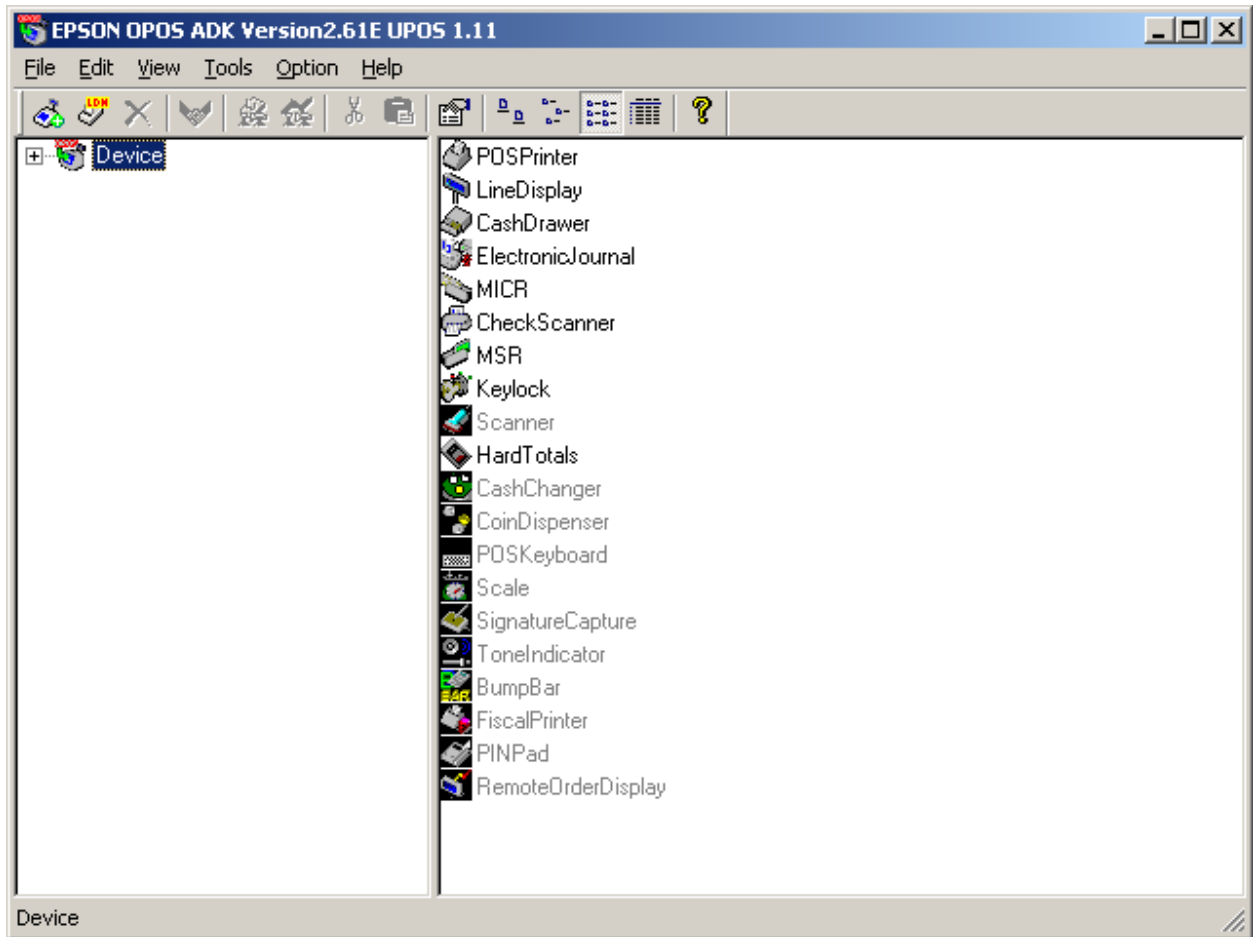


1.7.2.1. RS232 Printer

1.7.2.1.1. Add New Device


1.7.2.1.2. Select device name TM-H6000II or TM-H6000III

1.7.2.1.3. Select detailed model TM-H6000II or TM-H6000III

1.7.2.1.4. Add New LDN TM-H6000II or TM-H6000III

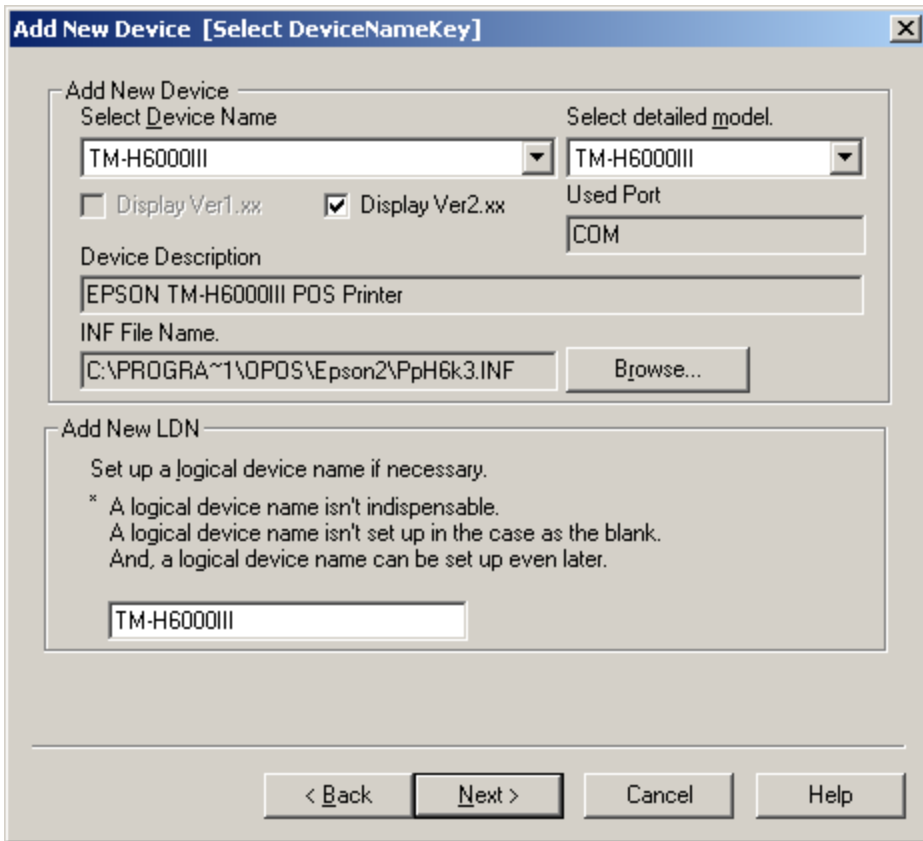

1.7.2.1.5. COM Port Settings

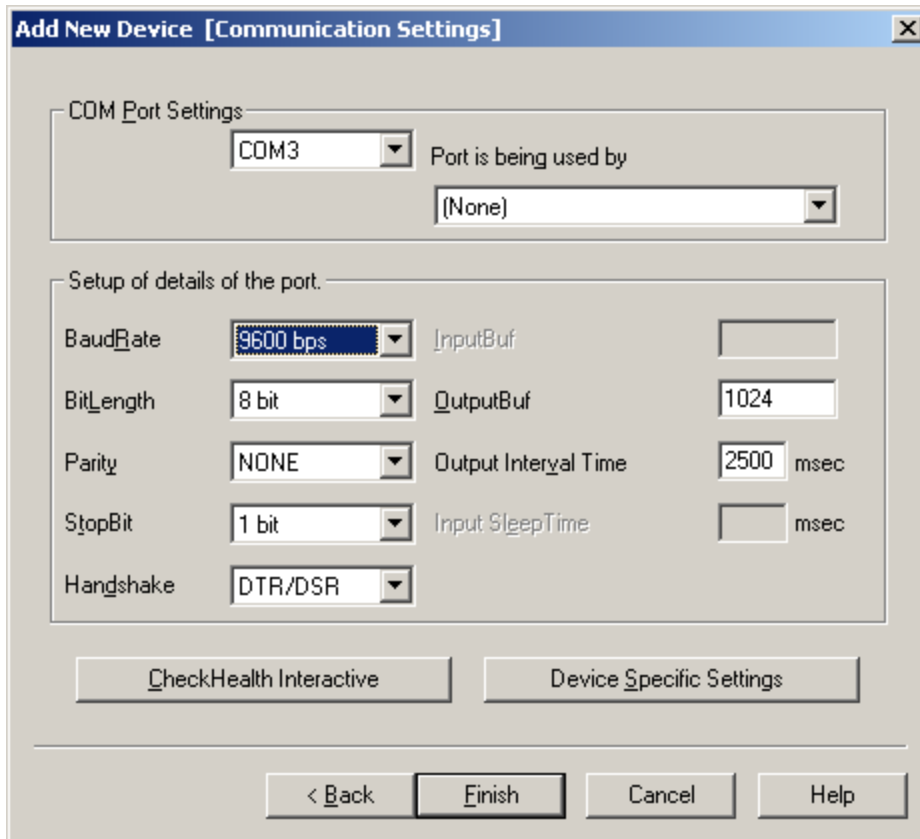

1.7.2.1.6. Run the Health Check Interactive to test Printer


1.7.2.2. MICR

1.7.2.2.1. Add New Device


1.7.2.2.2. Select device name TM-H6000II or TM-H6000III

1.7.2.2.3. Select detailed model TM-H6000II or TM-H6000III

1.7.2.2.4. Add New LDN TM-H6000II or TM-H6000III

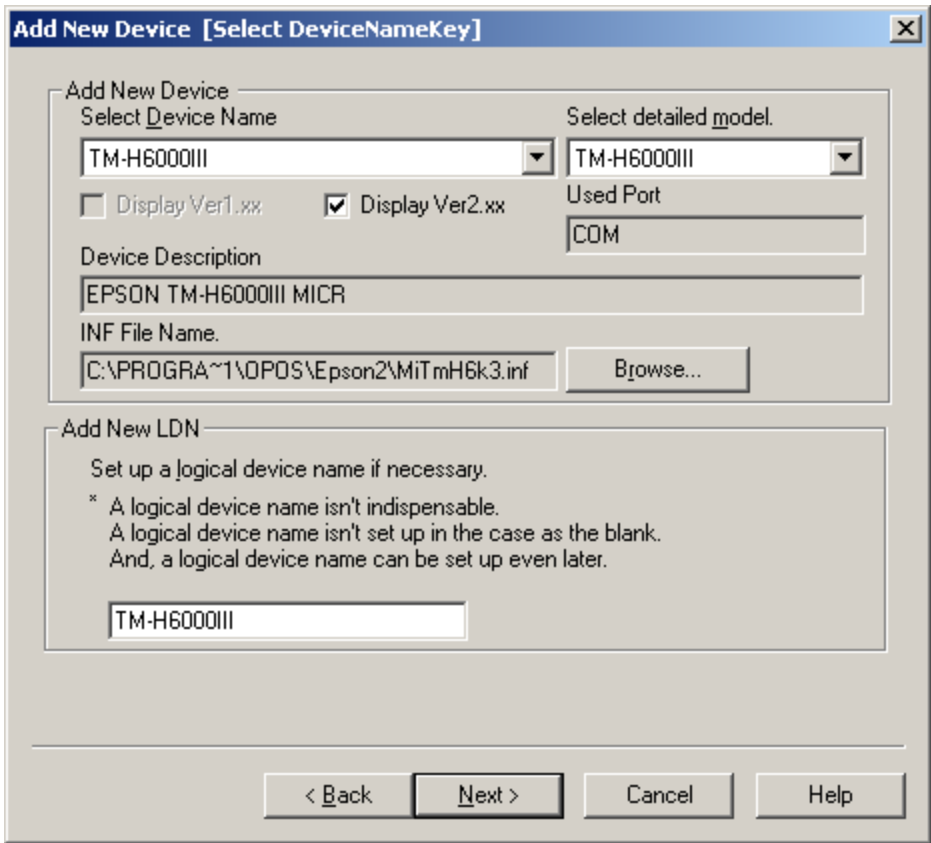

1.7.2.2.5. COM Port Settings

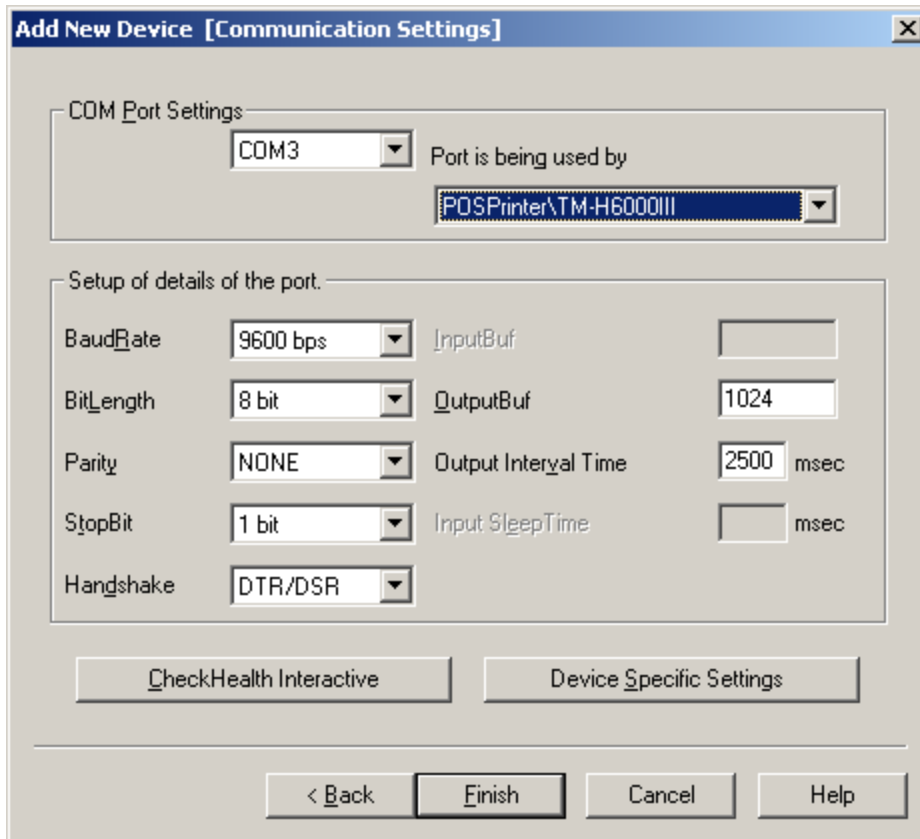

1.7.2.2.6. Run the Health Check Interactive to test MICR


1.7.2.3. Single CashDrawer

1.7.2.3.1. Add New Device


1.7.2.3.2. Select device name Standard (for single cash drawer)

1.7.2.3.3. Select detailed model Standard

1.7.2.3.4. Add New LDN TM-H6000II or TM-H6000III

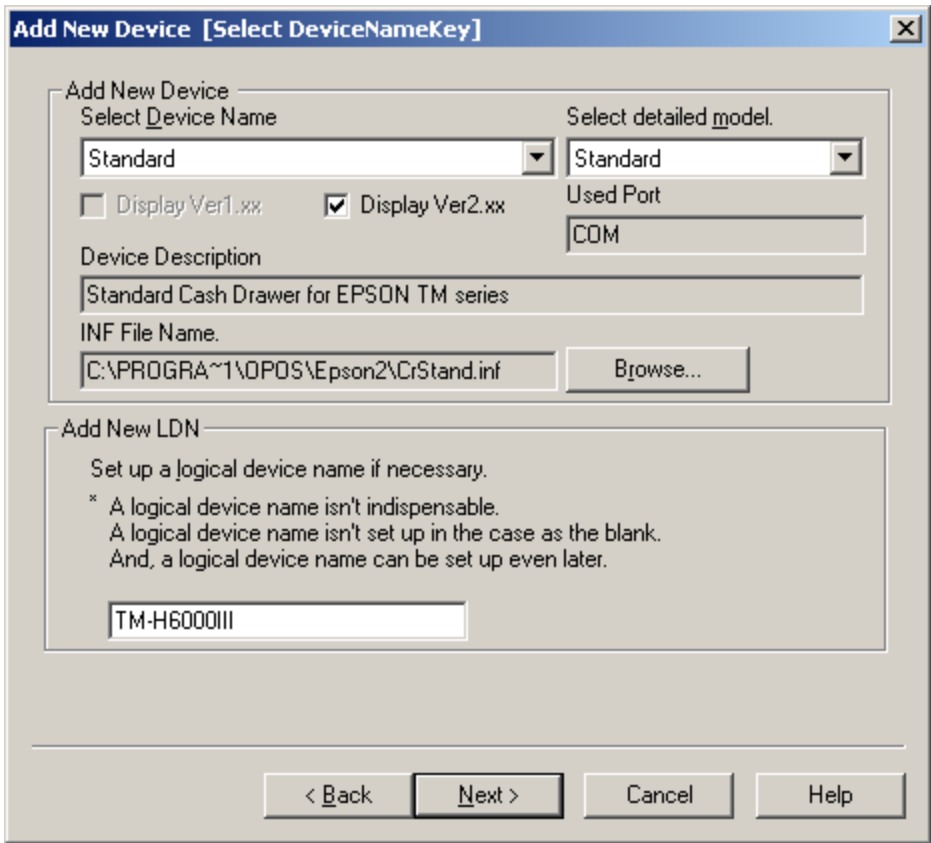

1.7.2.3.5. COM Port Settings

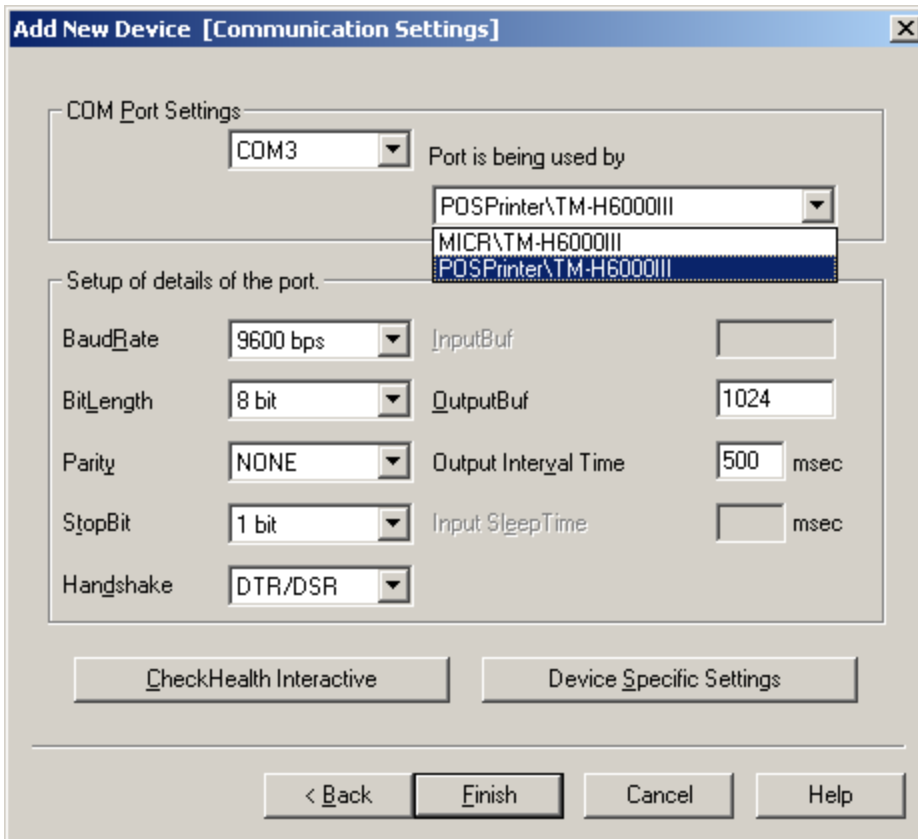


1.7.2.3.6. Need to set Device Specific Settings

1.7.2.3.6.1. Leave Pulse Time (ms) 100

1.7.2.3.6.2. Change Open Status Phase to High


1.7.2.3.6.3. Leave Connector Pin 2

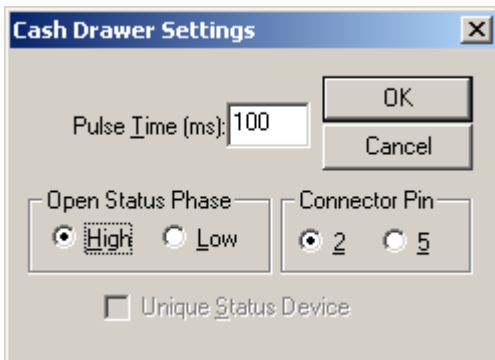

1.7.2.3.7. Run the Health Check Interactive to test

1.7.2.3.7.1. A screen showing OPOS contradictory warning will appear if the output interval time does not match the printers 2500msec.

1.7.2.3.7.2. Click OK and the cash drawer will be adjusted to 2500msec to match

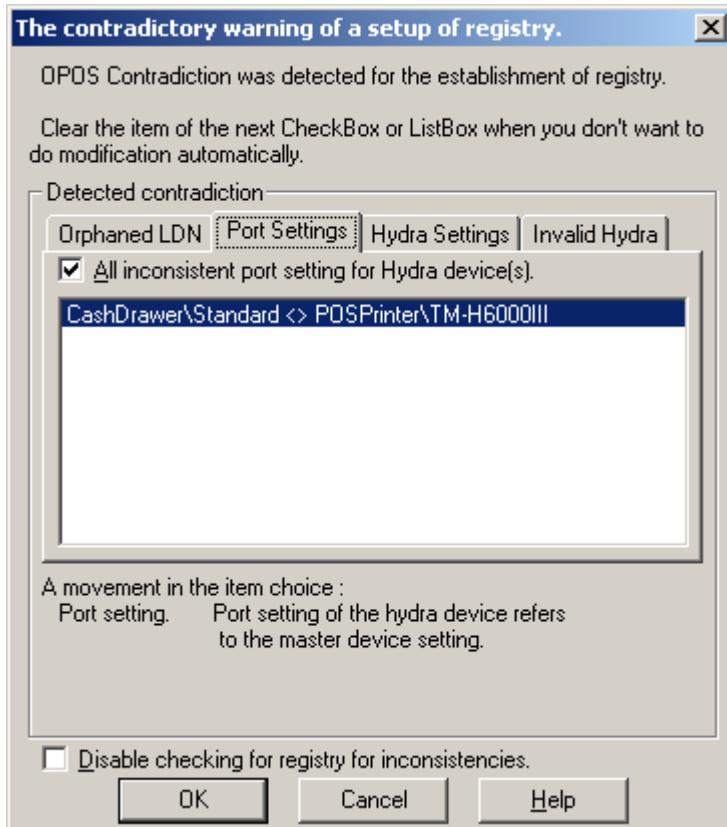


1.7.2.4. Dual Cash Drawers

1.7.2.4.1. Add New Device


1.7.2.4.2. Select device name Multi_A (for cash drawer A)

1.7.2.4.3. Select detailed model Multi_A

1.7.2.4.4. Add New LDN Multi_A

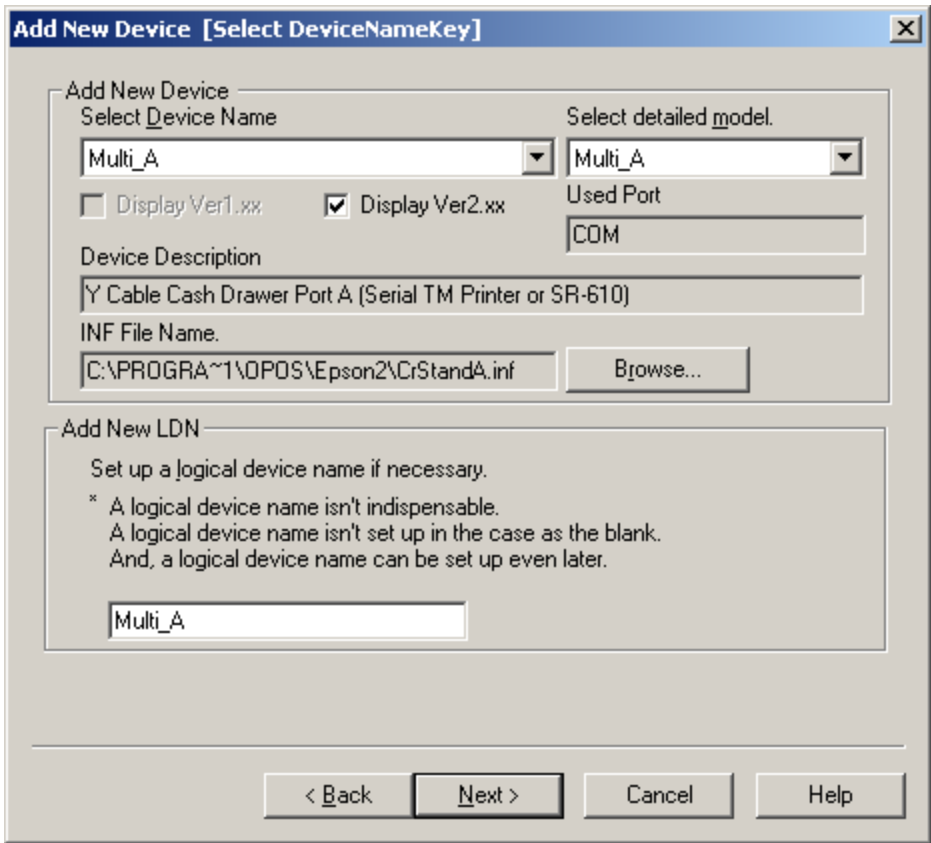

1.7.2.4.5. COM Port Settings

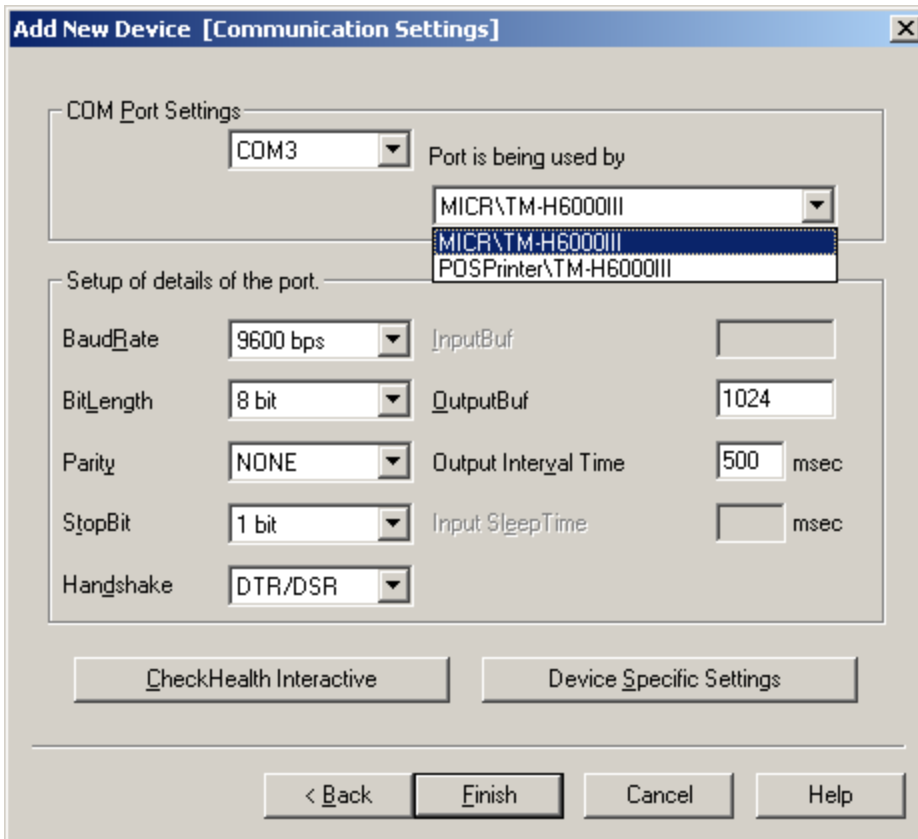


1.7.2.4.6. Need to set Device Specific Settings

1.7.2.4.6.1. Leave Pulse Time (ms) 100

1.7.2.4.6.2. Change Open Status Phase to High


1.7.2.4.6.3. Leave Connector Pin 2

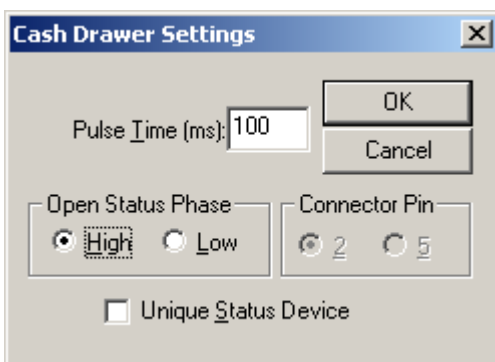

1.7.2.4.7. Run the Health Check Interactive to test

1.7.2.4.7.1. A screen showing OPOS contradictory warning will appear if the output interval time does not match the printers 2500msec.

1.7.2.4.7.2. Click OK and the cash drawer will be adjusted to 2500msec to match

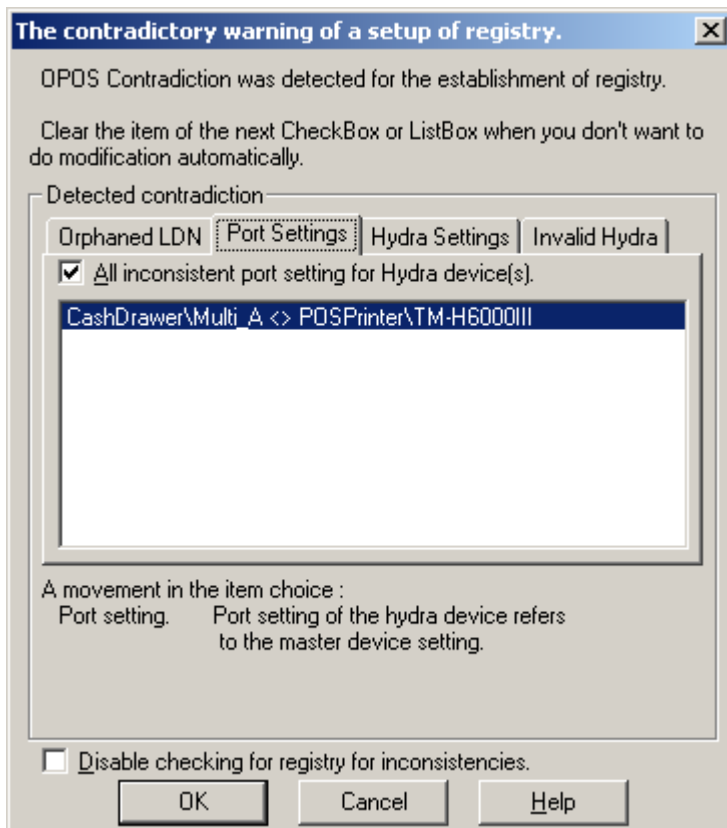


1.7.2.4.8. Add New Device


1.7.2.4.9. Select device name Multi_B (for cash drawer B)

1.7.2.4.10. Select detailed model Multi_B

1.7.2.4.11. Add New LDN Multi_B

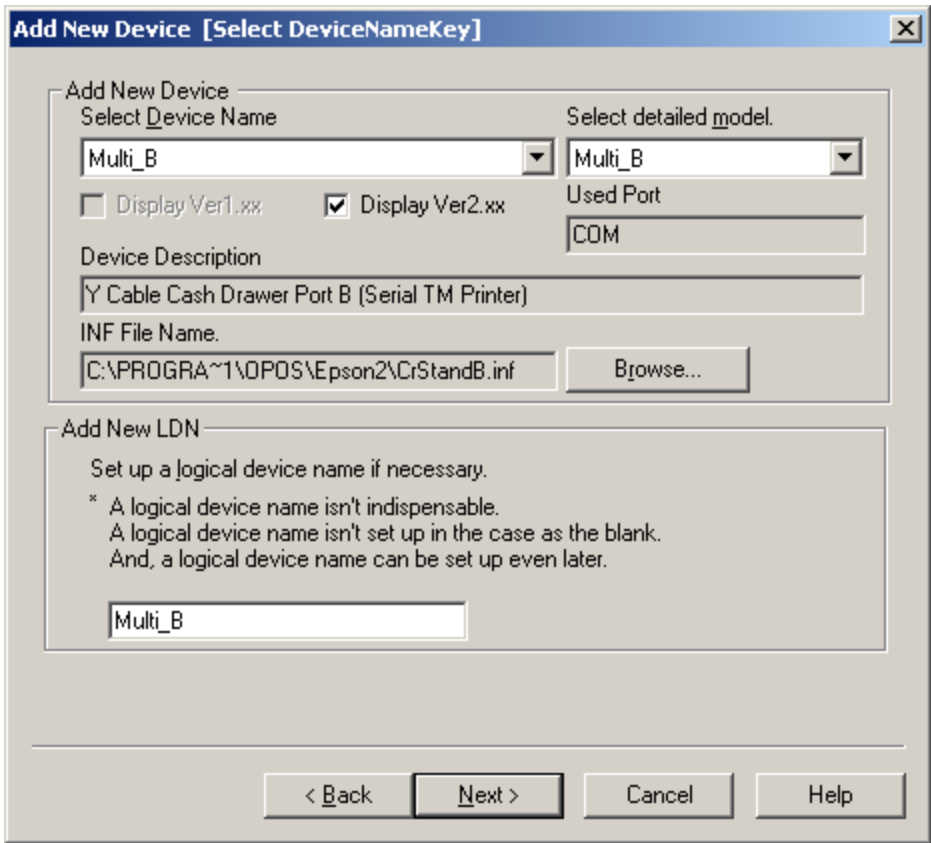


1.7.2.4.12. COM Port Settings

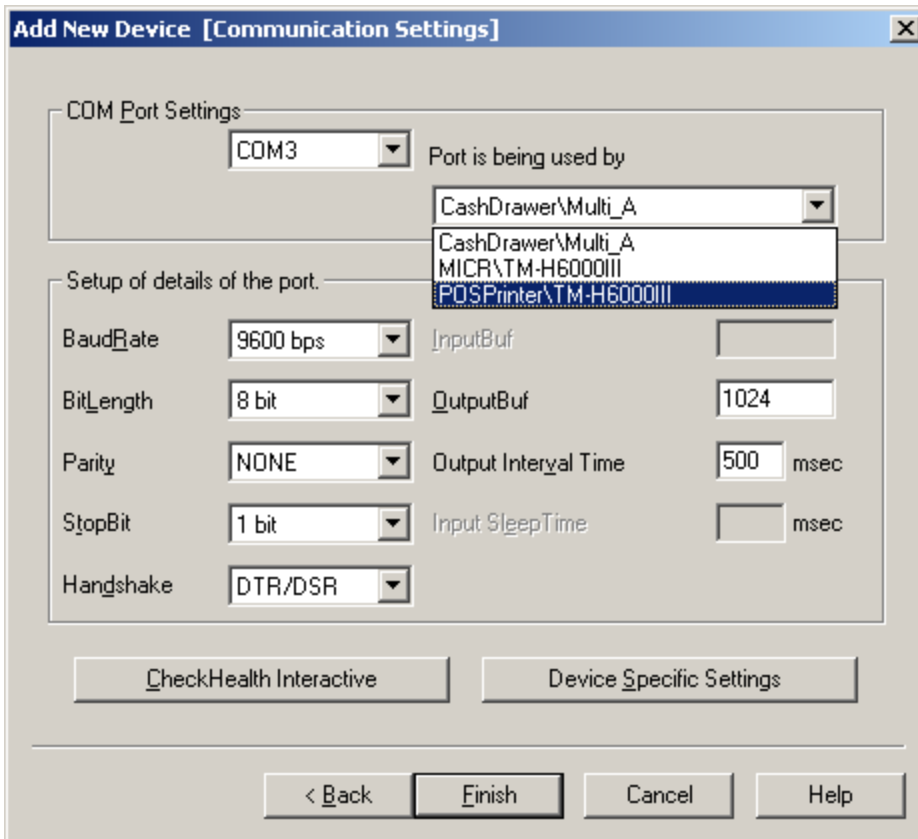


1.7.2.4.13. Need to set Device Specific Settings

- 1.7.2.4.13.1. Leave Pulse Time (ms) 100
- 1.7.2.4.13.2. Change Open Status Phase to High
- 1.7.2.4.13.3. Leave Connector Pin 2

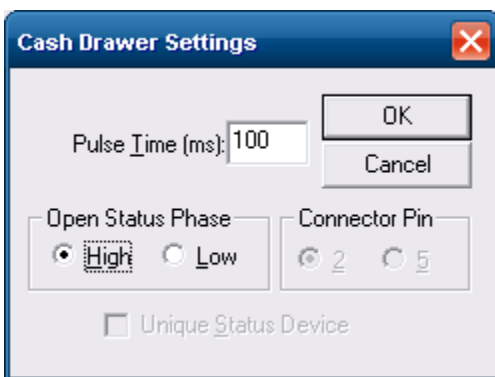

1.7.2.4.14. Run the Health Check Interactive to test


- 1.7.2.4.14.1. A screen showing OPOS contradictory warning will appear if the output interval time does not match the printers 2500msec.
- 1.7.2.4.14.2. Click OK and the cash drawer will be adjusted to 2500msec to match

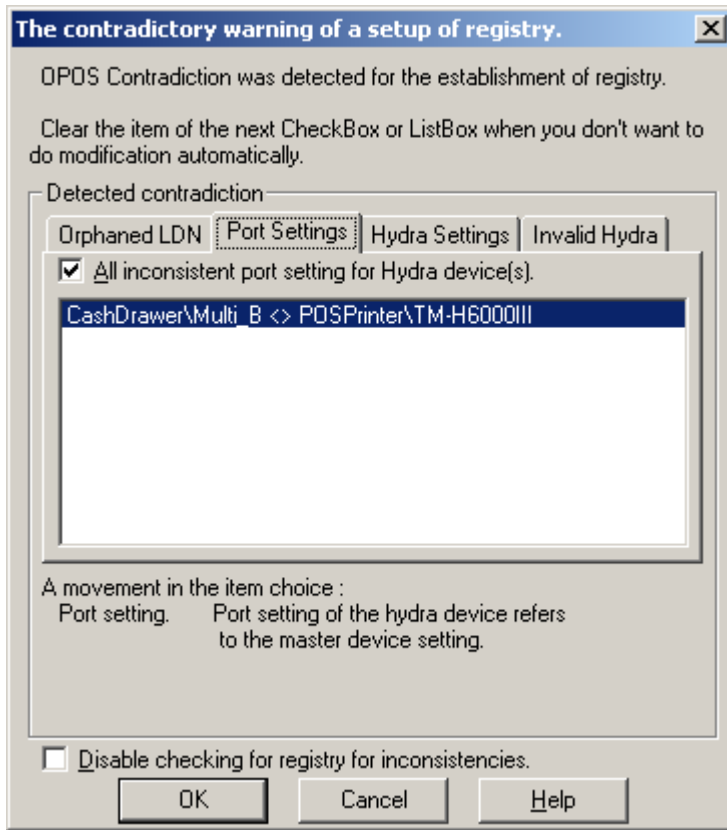


1.8. DataLogic USB OPOS driver installation for the USB connected DataLogic Scanner and Scanner / Scale (2500, 6500, 8200, 8300, 8400, 8500, 8500XT, 1000i and QD2130)

Note: The RS232 connection does not require OPOS


- 1.8.1. This installation assumes that your Scanner / Scale has been set up for the IBM-USB interface already
- 1.8.2. Shutdown the TeamPoS 3000XL2 prior to plugging in the DataLogic Scanner/Scale
- 1.8.3. Plug the 12v powered USB cable into an available powered USB port on the back of the TeamPoS 3000XL2
- 1.8.4. Turn on the TeamPoS 3000XL2
- 1.8.5. The device will be discovered by the operating system and install it as a HID device
- 1.8.6. Run the program Datalogic OPOS 1.12 StoreNext Retailix.msi located on the ISS45 Distribution CD V8.1.4.0 and above or the StoreNext Web site
- 1.8.7. The following DATALOGIC OPOS 1.12 welcome screen is displayed

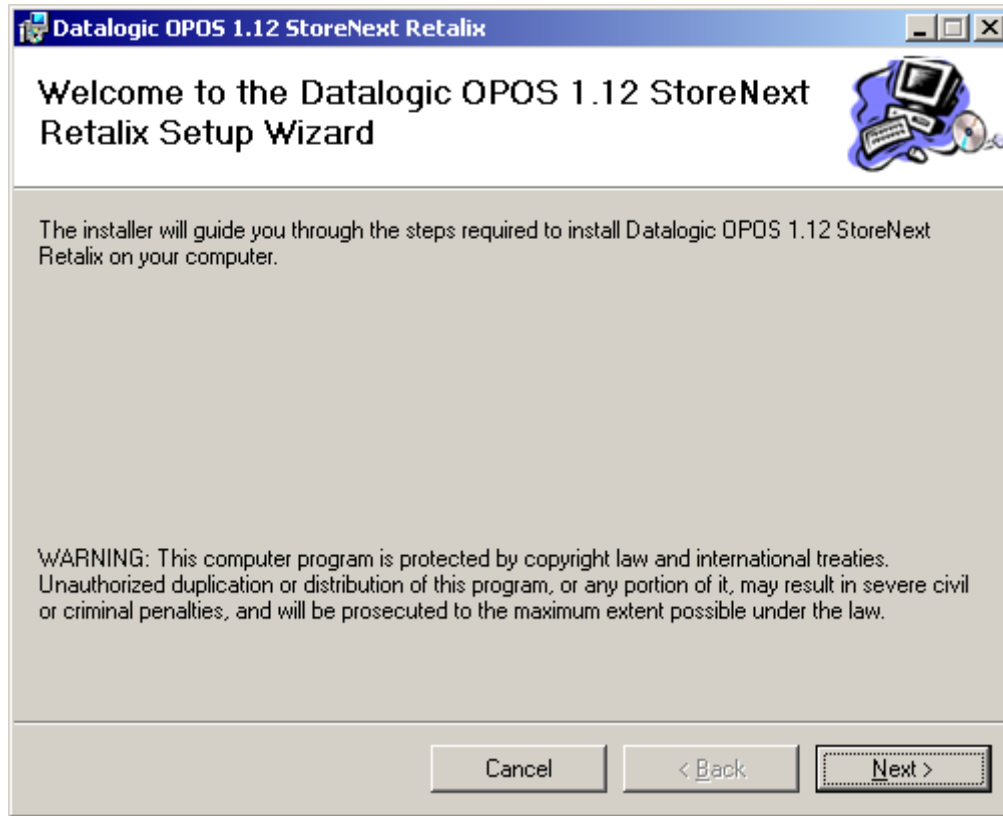


1.8.8. Click Next and the License Agreement screen is displayed

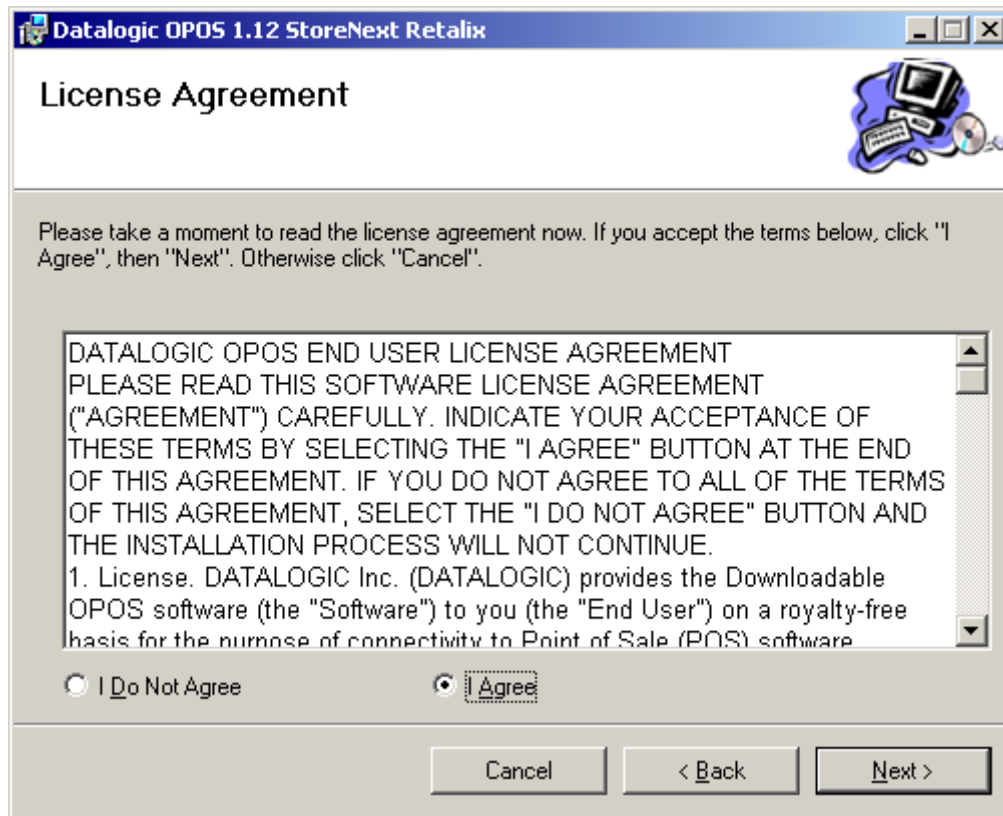


1.8.9. Click I Agree, click Next and the Select Installation Folder screen is displayed

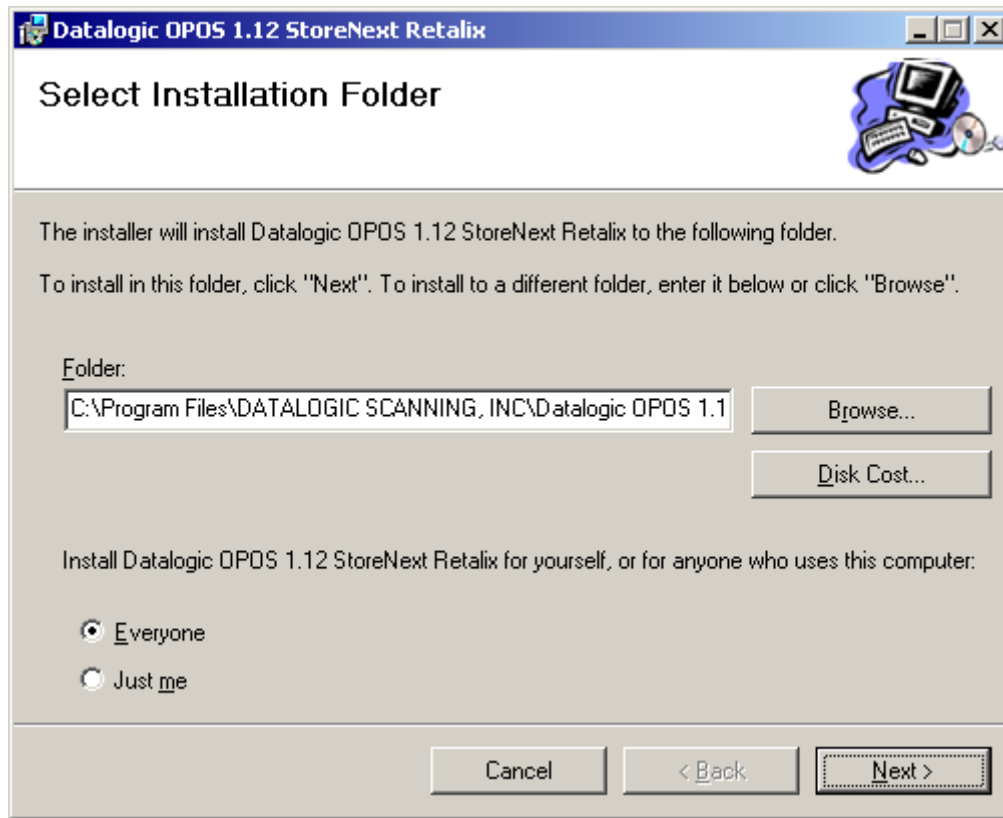


1.8.10. Make sure Everyone is selected and Click Next and the install Control Objects screen is displayed

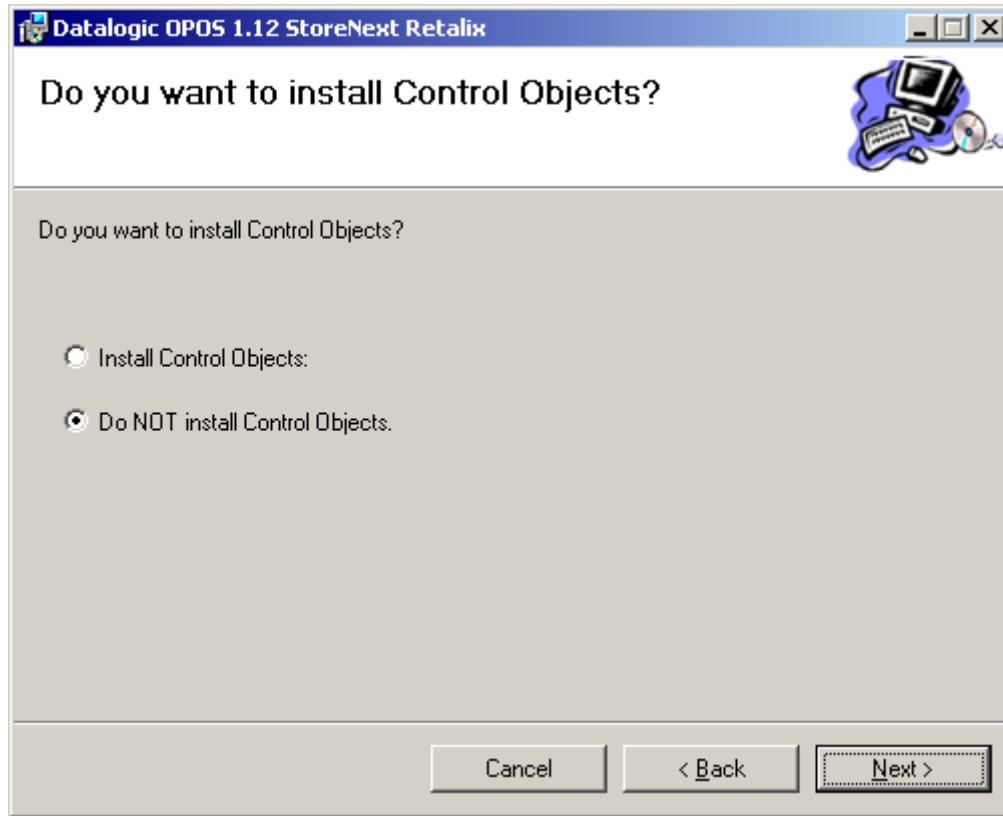


1.8.11. Select Do NOT install Control Objects and Click Next and the Confirm Installation screen is displayed

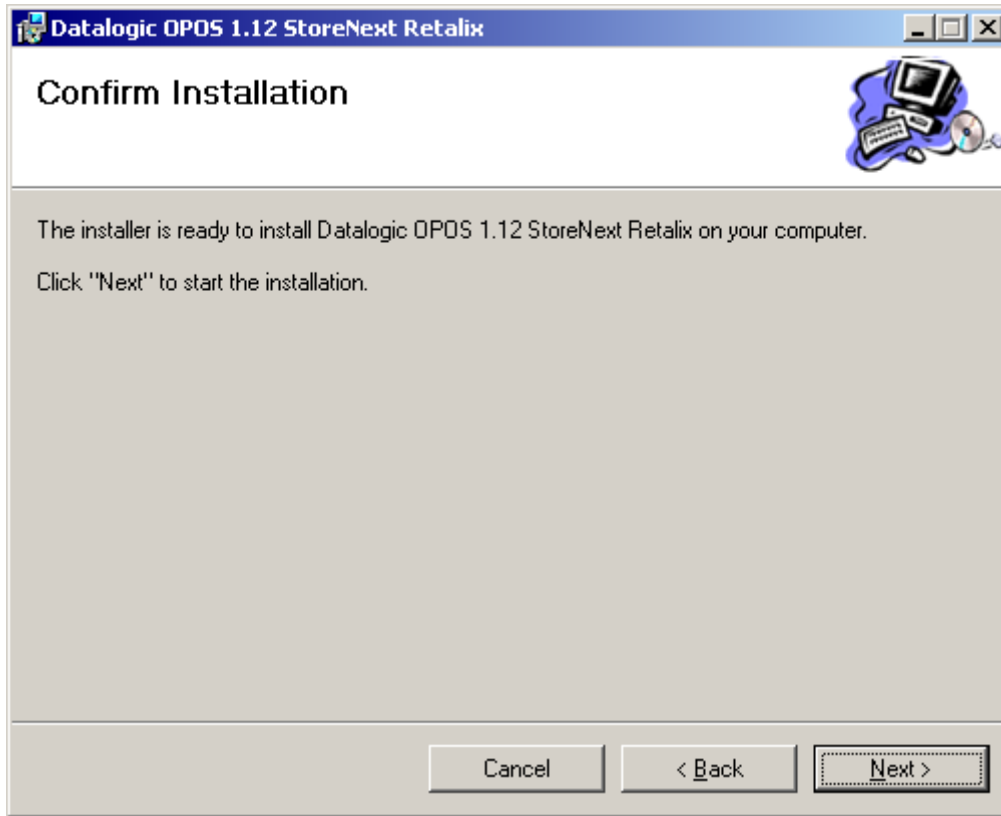

1.8.12. Click Next and the installation continues

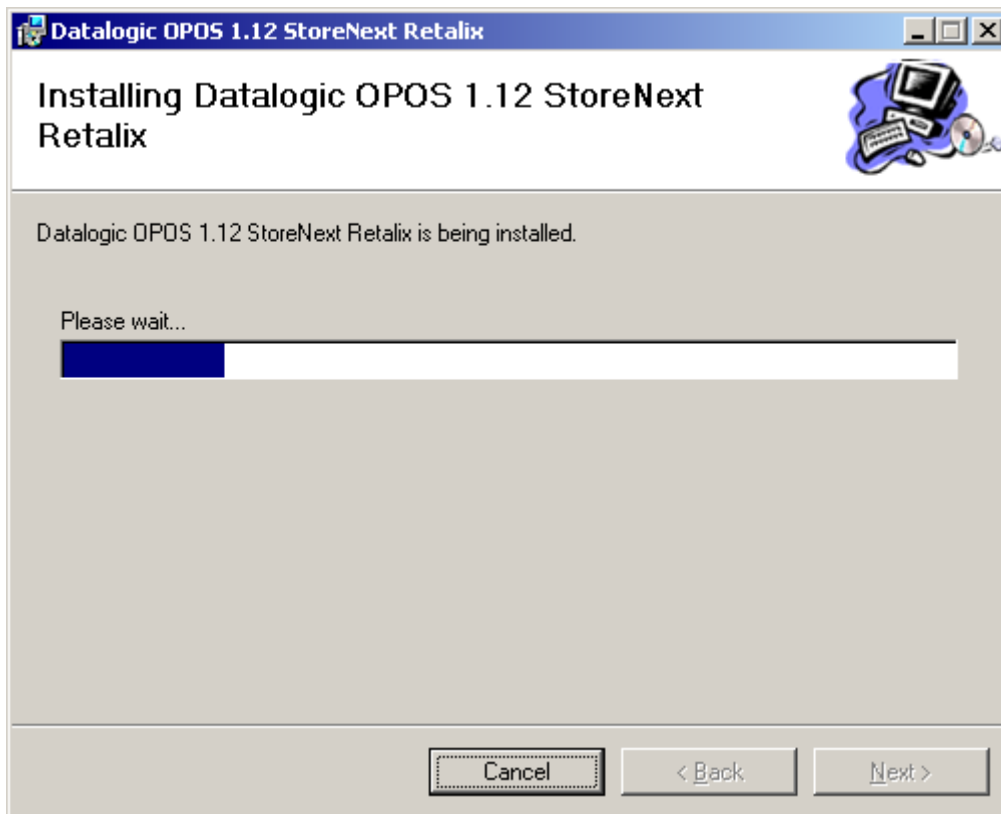

1.8.13. The Installation Complete screen is displayed

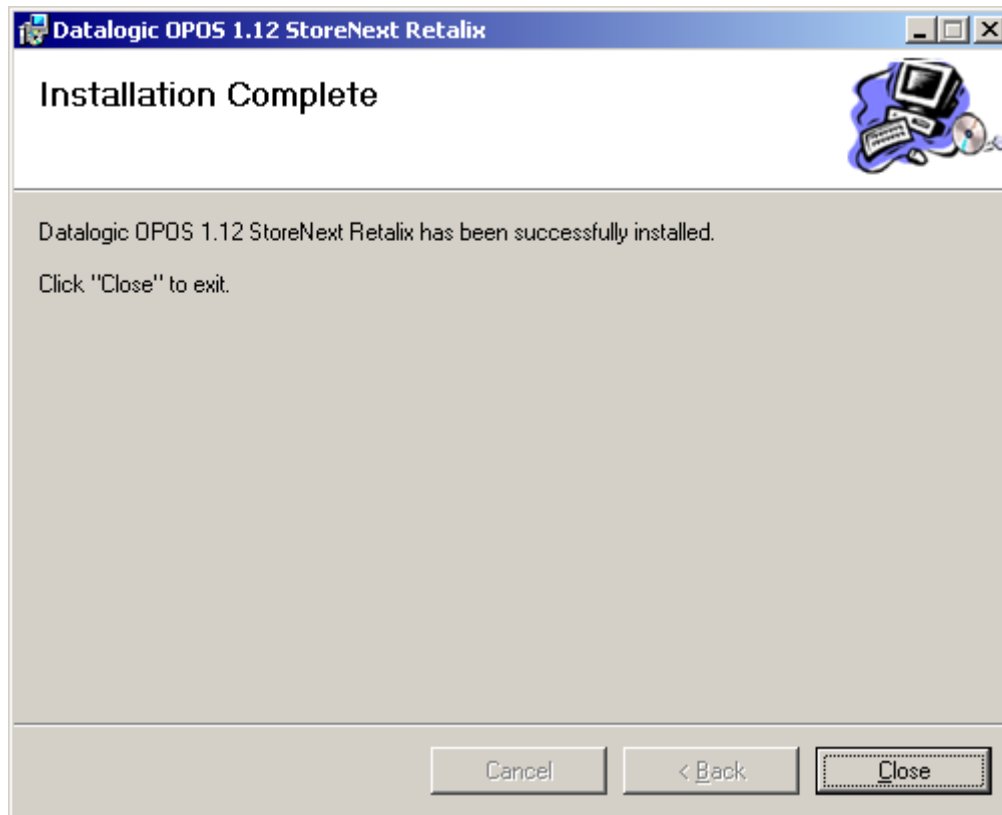



1.8.14. Click Close to close the screen




1.9. TPG NATIVE USB Driver Installation




- 1.9.1. The TPG NATIVE USB Driver is now included as part of the **InstallTPG_OPOSV18036.exe** located on the ISS45 V8.1.4.0 distribution CD and above in the OPOS\TPG folder or from the StoreNext Web site.
- 1.9.2. Shutdown the TeamPoS 3000 prior to plugging in the TPG printer
- 1.9.3. Plug the 24v powered USB cable into the 24v powered USB port on the back of the TeamPoS 3000
- 1.9.4. Turn on the TeamPoS 3000
- 1.9.5. Make sure that the TPG printer is setup for **USB DRIVER TYPE NATIVE** using the Diagnostics form or get into the configuration menu and change the setting to native.
- 1.9.6. If the driver installation wizard starts up at this point, just click cancel and proceed to the TPG OPOS Installation section below. The driver will be installed later during the installation.

1.10. TPG OPOS Installation for a TPG USB Connected Printer


- 1.10.1. The TPG OPOS Installation that ISS45 uses is **InstallTPG_OPOSV18036.exe** located on the ISS45 V8.1.4.0 distribution CD and above in the OPOS\TPG folder or from the StoreNext Web site.
- 1.10.2. Run the InstallTPG_OPOSV18036.exe installation
- 1.10.3. The following screens show an example of installing the TPG A776 USB printer

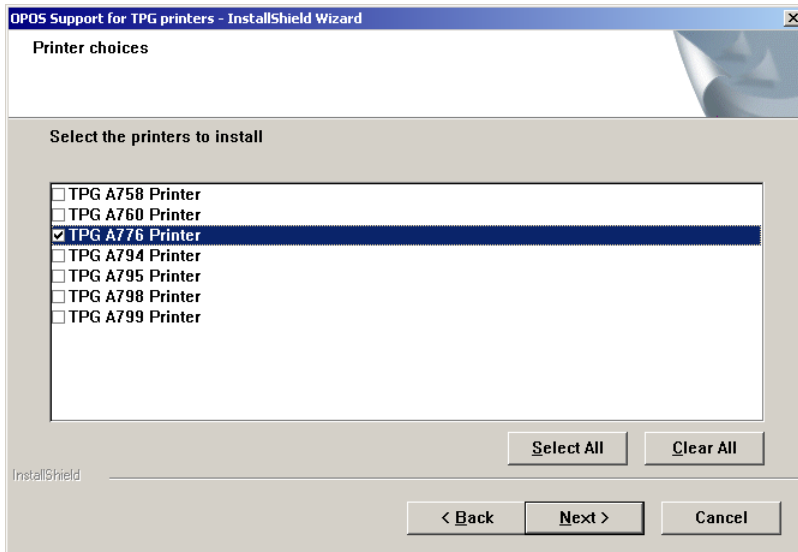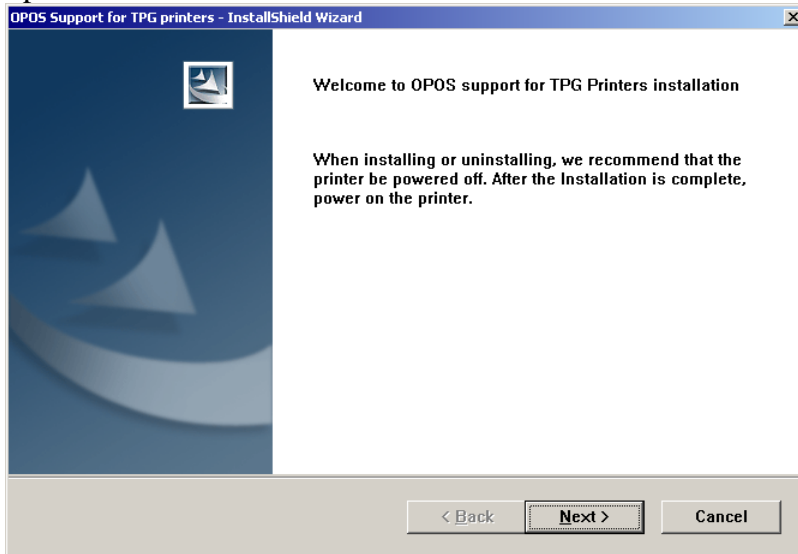

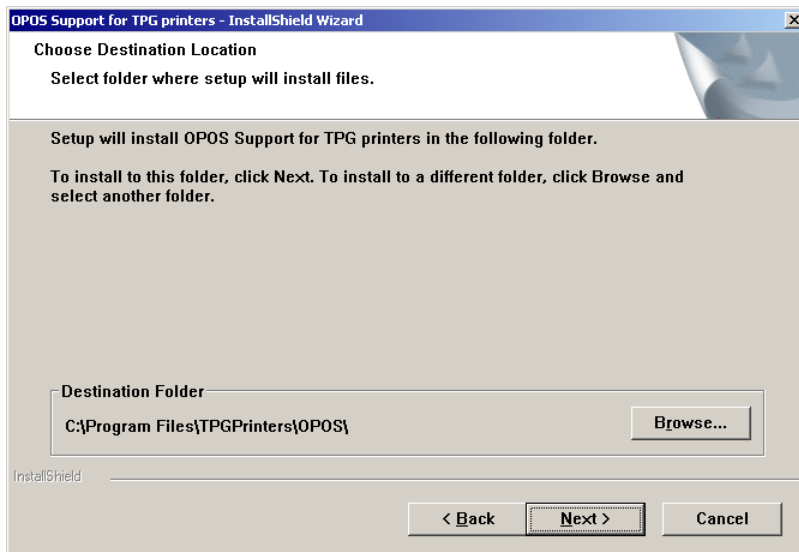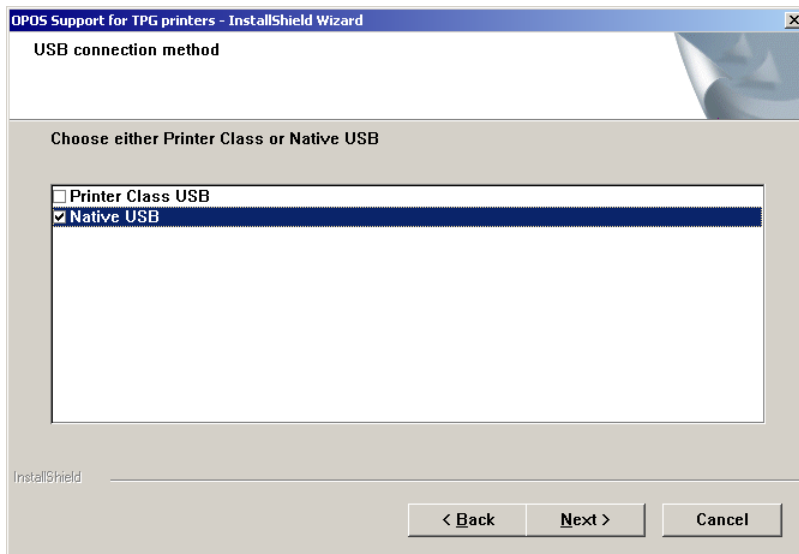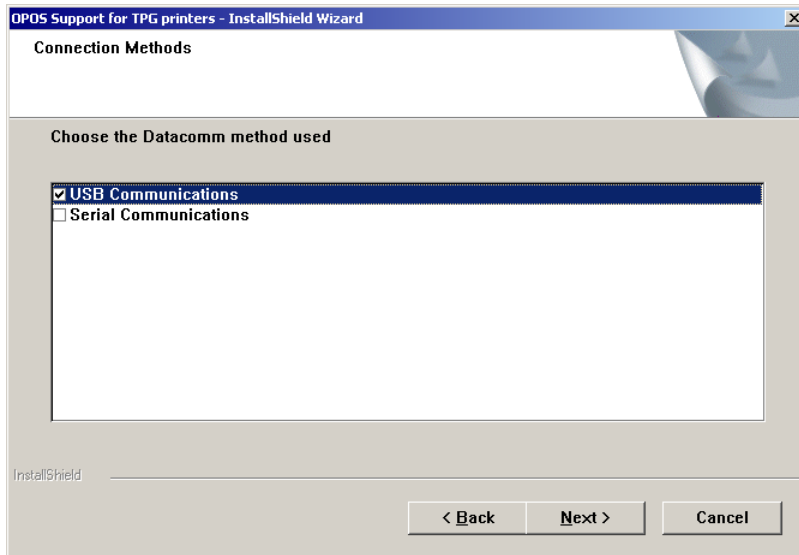


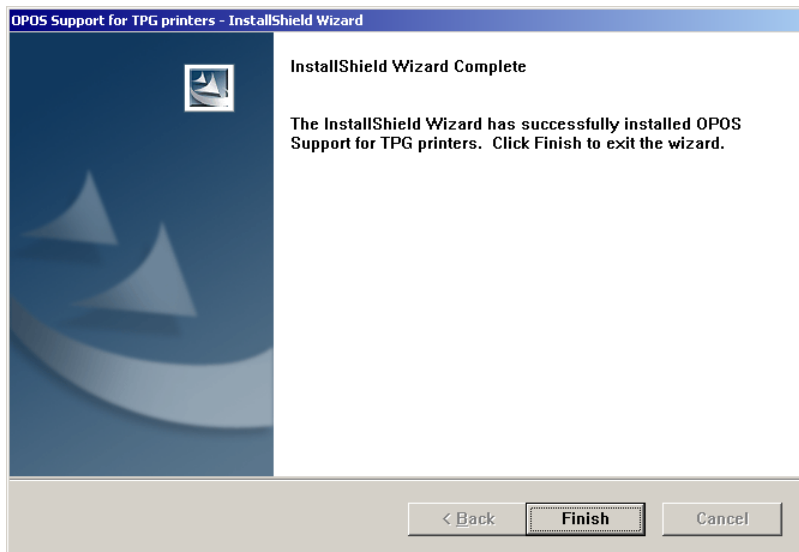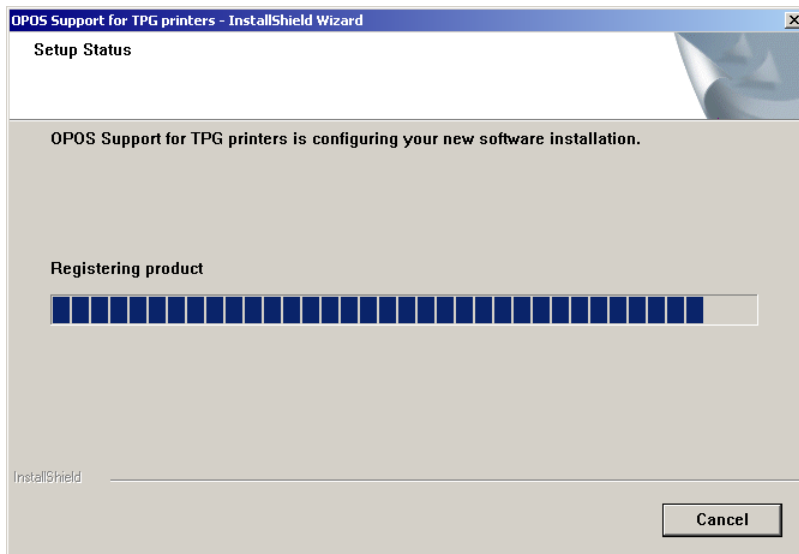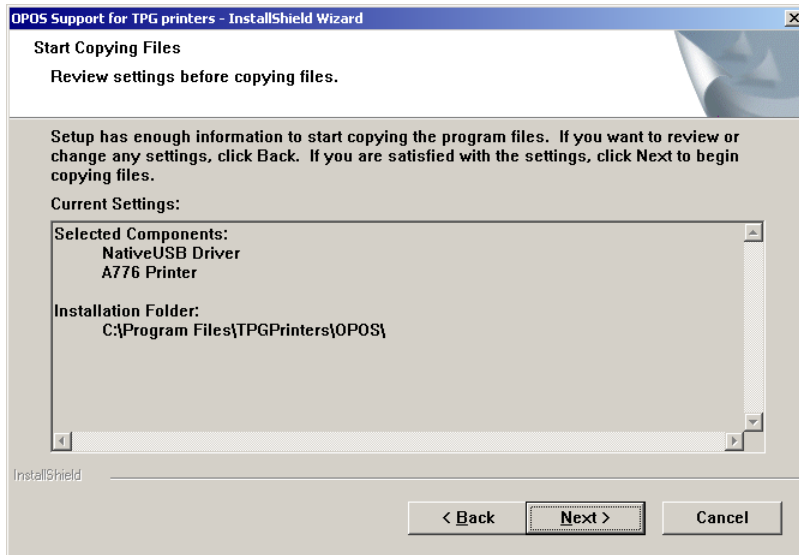

- 1.10.4. The TPG Native USB driver should have been installed automatically as part of this installation. If the driver does not appear to have been installed, unplug the USB connector from the printer and plug it back in.
- 1.10.4.1. The screen below will pop up for the location of the TPGUSB.sys file.

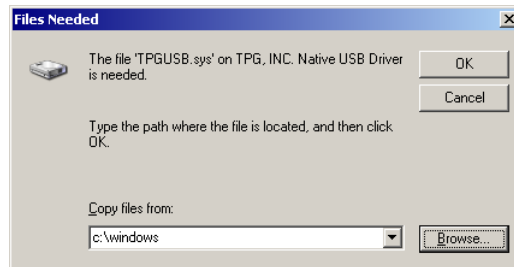




- 1.10.4.2. Browse to the "C:\Program Files\TPGPrinters\OPOS\TPGUSB" folder
- 1.10.4.3. Click on TPGUsb.sys and click Open



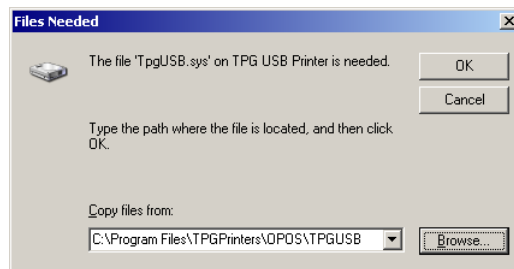





- 1.10.4.4. Click OK



1.11. TPG OPOS Installation for a TPG RS232 Connected Printer

- 1.11.1. The TPG OPOS Installation that ISS45 uses is **InstallTPG_OPOSV18036.exe** located on the ISS45 V8.1.4.0 distribution CD and above in the OPOS\TPG folder or from the StoreNext Web site.
- 1.11.2. Run the InstallTPG_OPOSV18036.exe installation
- 1.11.3. The following screens show an example of installing the TPG A776 RS232 printer

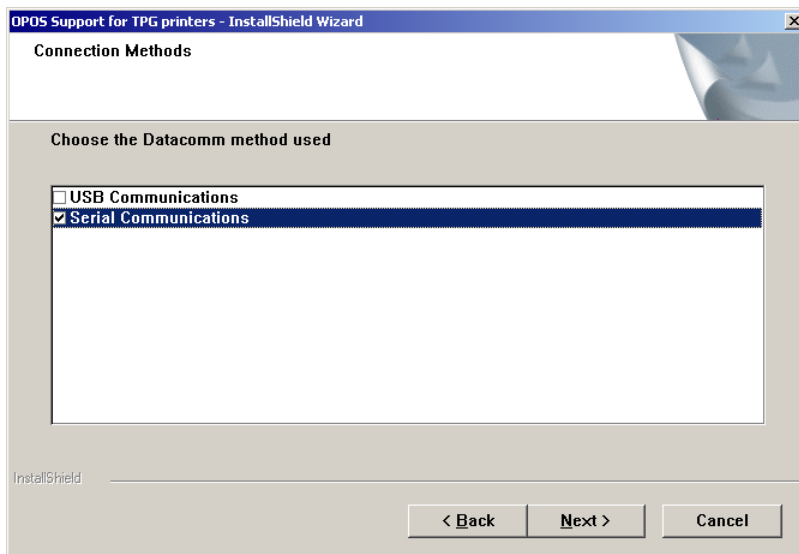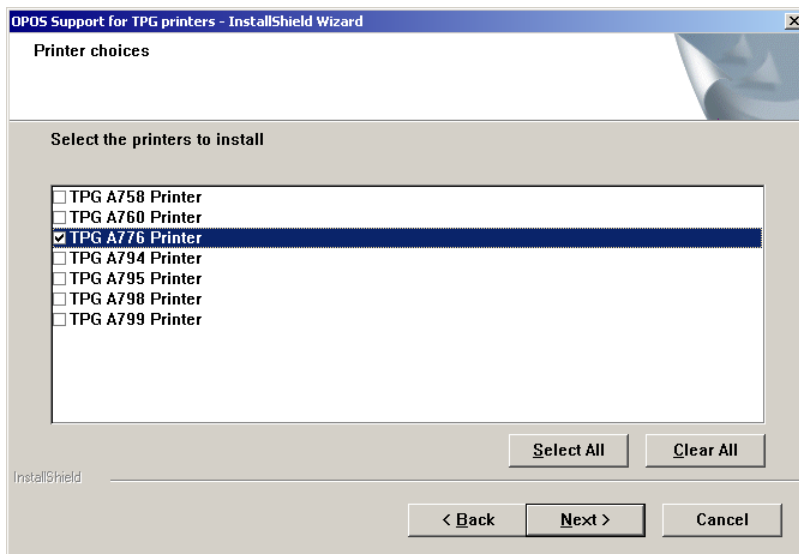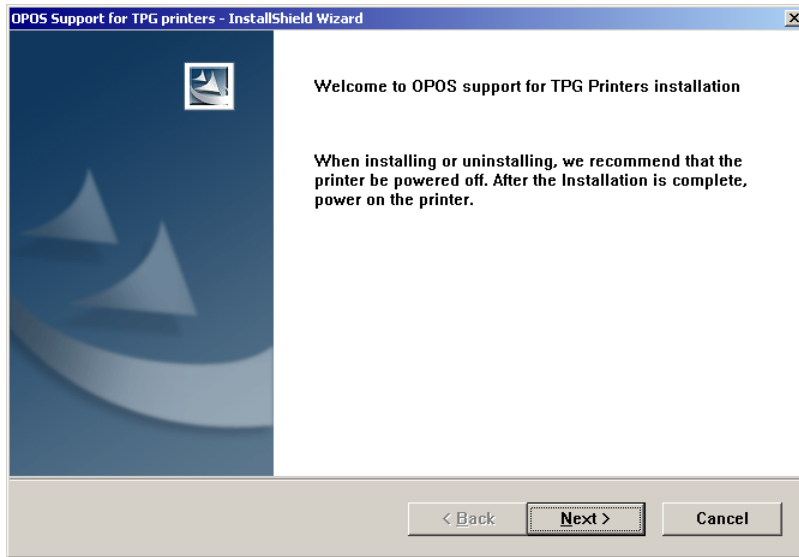

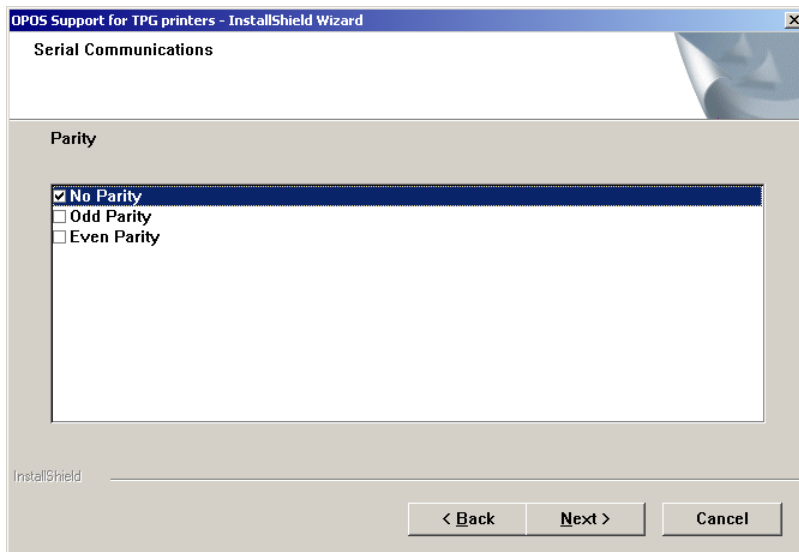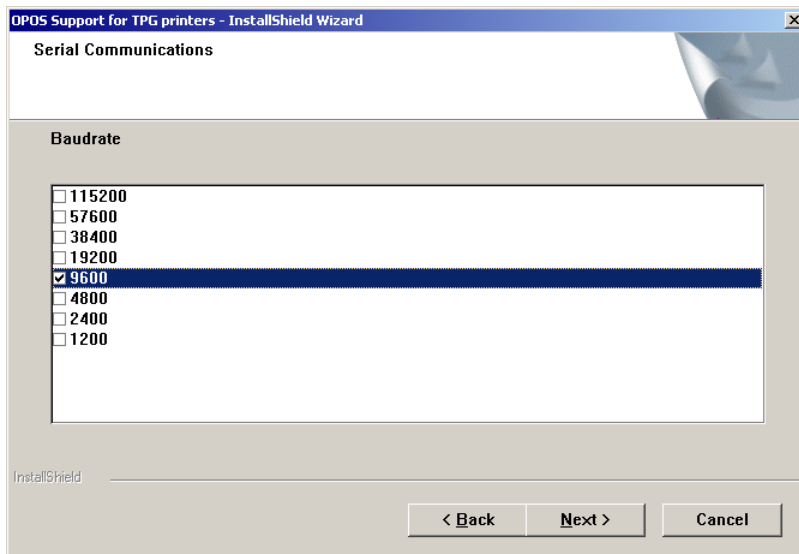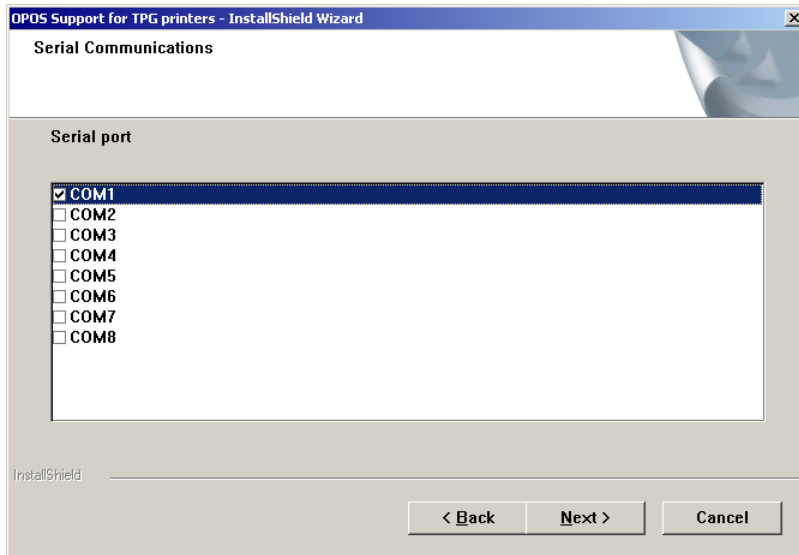

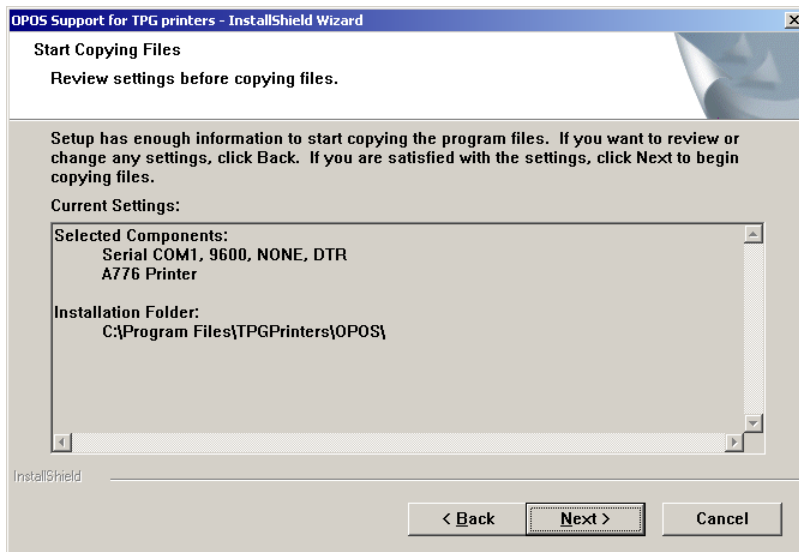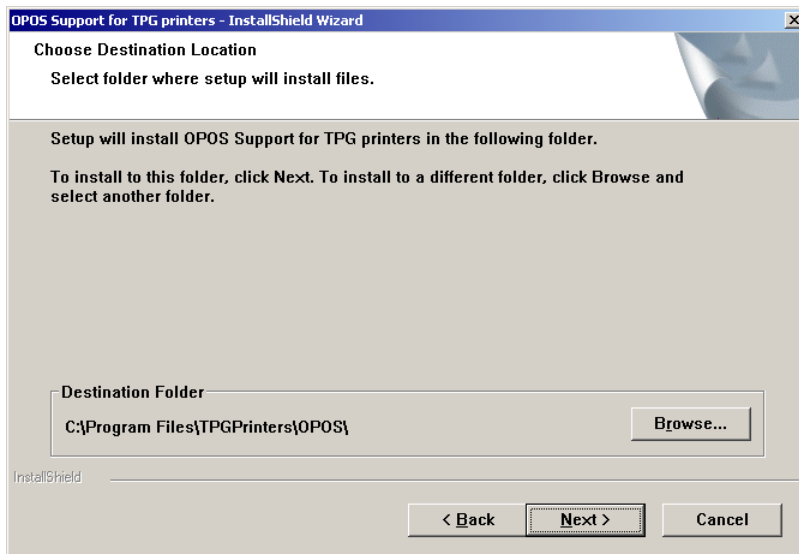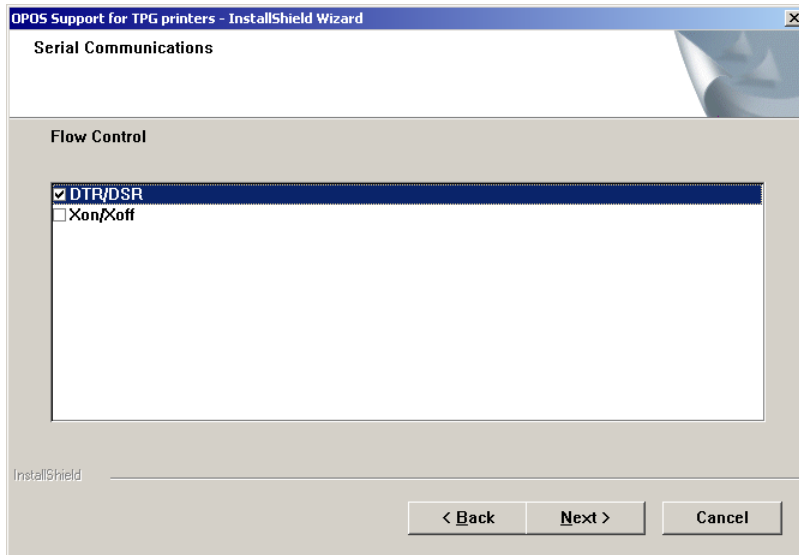

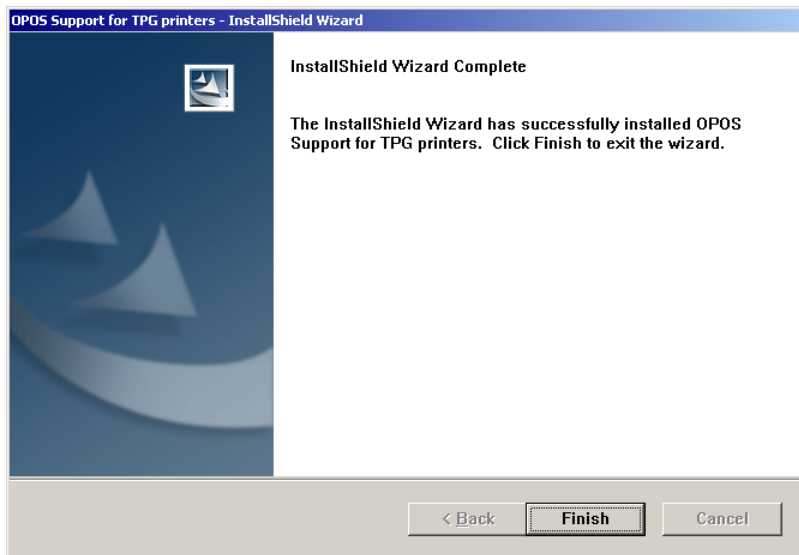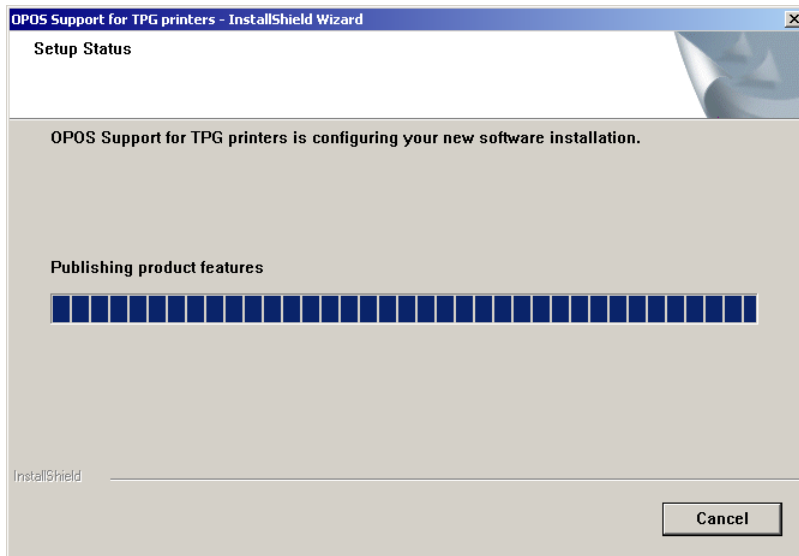

1.12. Fujitsu Cash Drawer TeamPoS 3000XL2 Connected Installation

- 1.12.1. Connect the Fujitsu cash drawer connector to the TeamPoS 3000XL2 cash drawer connector DRW. The driver is preloaded in the WePOS image and is mapped to COM10.
- 1.12.2. Load OPOS for the Fujitsu cash drawer by running the file FTXSOPOS_1_10_4.exe located in the folder "TeamPoS3000_Software_Support\Drivers\OPOS\FTXSOPOS "
- 1.12.3. During the installation of OPOS select Platform Type TeamPoS 3000 and Cash Drawer (TeamPoS 3000)

1.13. D22_D25 Keyboard, MSR and Key lock Installation

- 1.13.1. Connect the D22_D25 Keyboard on the side of the D22 or D25 Monitor
 - 1.13.2. Connect a separate USB A to USB B cable to the Register and the Monitor
 - 1.13.3. The installation document can be found in the
TeamPoS3000_Software_Support\Drivers\Keyboards\D22 and D25
Keypad_MSR
 - 1.13.4. Map the keys on the keyboard using the KeyEdit.exe program located in
the folder "TeamPoS3000_Software_Support\Drivers\Keyboards\D22 and
D25 Keypad_MSR\KB ReMapper".
 - 1.13.5. Load OPOS for the key lock and the MSR by running the file
FTXSOPOS_1_10_4.exe located in the folder
"TeamPoS3000_Software_Support\Drivers\OPOS\FTXSOPOS"
 - 1.13.6. During the installation of the OPOS select Platform Type TeamPos 3000
and D22_D25 MSR, Lock
- 1.14. HyperCom 4100/4250 USB Installation

Note: This section only applies if you are using a USB connected HyperCom 4100/4150/4250 EFT terminal

Software Installation

- 1.14.1. On the WinEPS installation CD, browse to the \OpenEPS\SCAT
Code\Hyp4100 or 4250\ directory
- 1.14.2. Extract the "4100 USB Driver Installation (40_RS232ToUSBDriver).zip"
file to a convenient location on the POST, such as the desktop
- 1.14.3. Run the RS232toUSBDriver.msi by double clicking on it
- 1.14.4. Click Next
- 1.14.5. Select I Agree and click Next
- 1.14.6. Use the default directory path during the installation
- 1.14.7. Select everyone
- 1.14.8. Click Next
- 1.14.9. Confirm the installation by clicking Next
- 1.14.10. You may see an error on the screen at this point of the installation
but this can be ignored as it is part of the installation
- 1.14.11. Installation complete screen appears

Hardware USB Mode Setup

- 1.14.12. On the HyperCom, tap the upper left corner, upper right corner and
the upper left corner again
- 1.14.13. If you are prompted for a password, enter "multilane" or
"685845263" on the number pad
- 1.14.14. At the Main menu, select ERC Port
- 1.14.15. Under the ERC menu, select USB
- 1.14.16. Select USB and then press the apply now button
- 1.14.17. Reboot the HyperCom terminal
- 1.14.18. The startup screen should now list USB for the communication
type

2. Peripherals Notes


2.1. Cash Drawer Connection

- 2.1.1. Cash drawers can be connected to the cash drawer connection on the back of the printer or the cash drawer connector DRW on the back of the TeamPoS 3000XL2
- 2.1.2. Cash drawers may be sensed backwards in ISS45 when connected to some models of printers. Open appears shut and shut appears open. If this applies to your installation, add the following line in the ISS45 WinPOS.ini file to reverse how the drawer is seen.
 - DrawerNegativeCheck=Yes

3. ISS45 Installation on the TeamPoS 3000XL2

3.1. Starting ISS45 WinPOS installation


- 3.1.1. Use the following to start the WinPOS installation from the ISS45 software release
- 3.1.2. Click Start | Run
- 3.1.3. Click on **Browse** and locate the file Setup.exe in the CD Drive: folder WinPOS\Disk1 (example D:\WinPOS\Disk1 folder)
- 3.1.4. Double click on Setup which puts it into (Run – Open: D:\WinPOS\Disk1\Setup.exe
CAUTION: Ensure that the line indicates Setup.exe and not Setup.bat
If the line indicates Setup.bat then browse back and select the correct Setup.exe file
- 3.1.5. Click **OK** to launch the WinPOS installation
- 3.1.6. The following (Welcome) screen is displayed

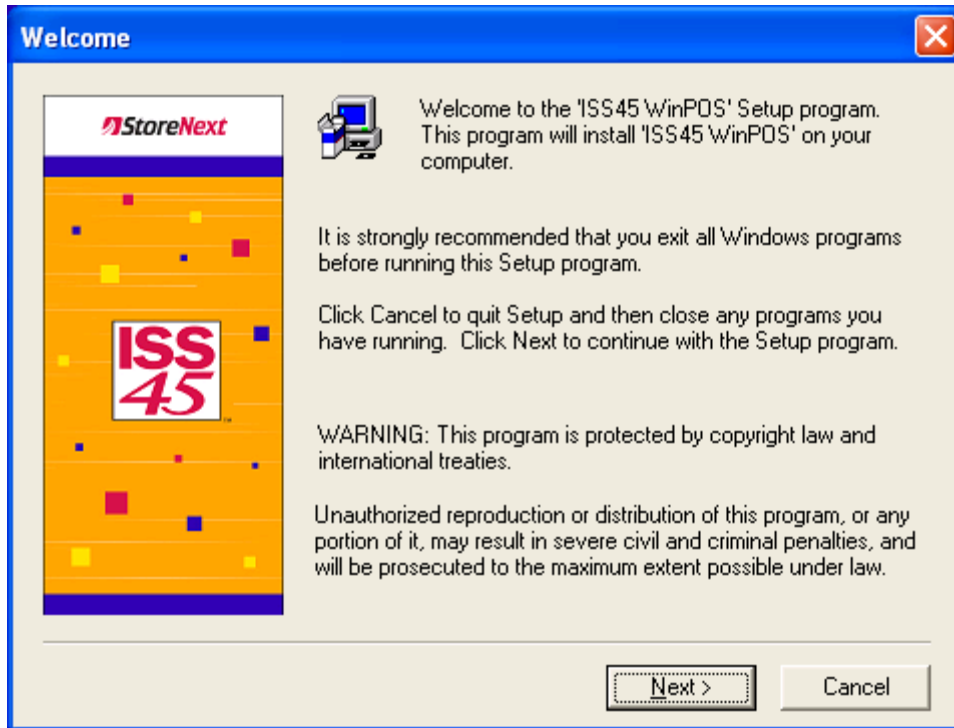


3.1.7. Click **Next** and the (User Information) screen is displayed




3.1.8. Change the information if so desired, click **Next** and the (Registration Confirmation) screen is displayed

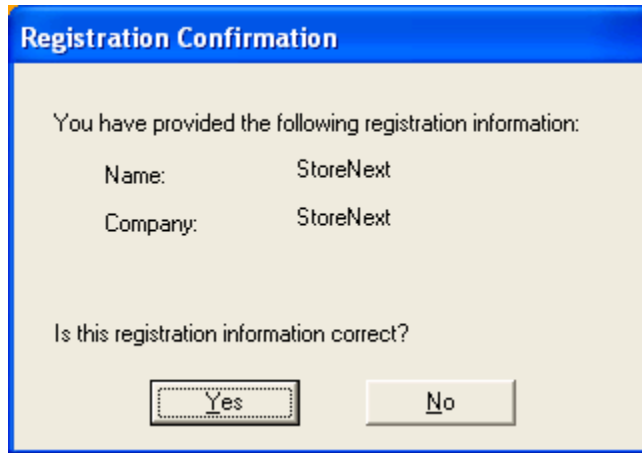


3.1.9. Click **Yes** and the (Choose Destination Location) screen is displayed

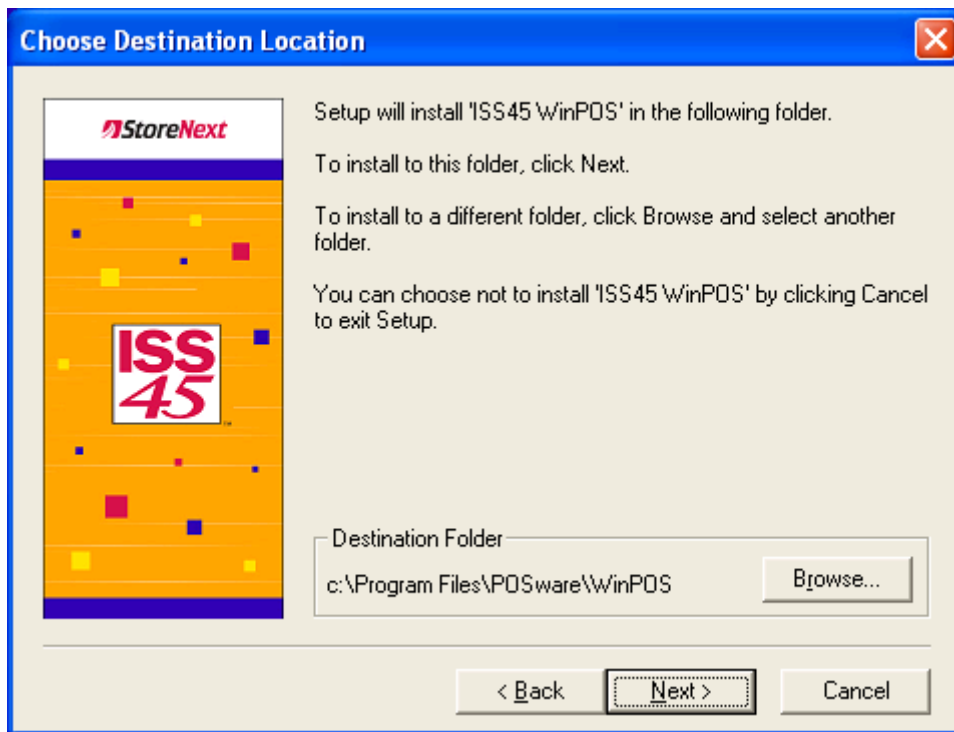

3.1.10. Click **Next** and the (Screen Resolution) screen is displayed

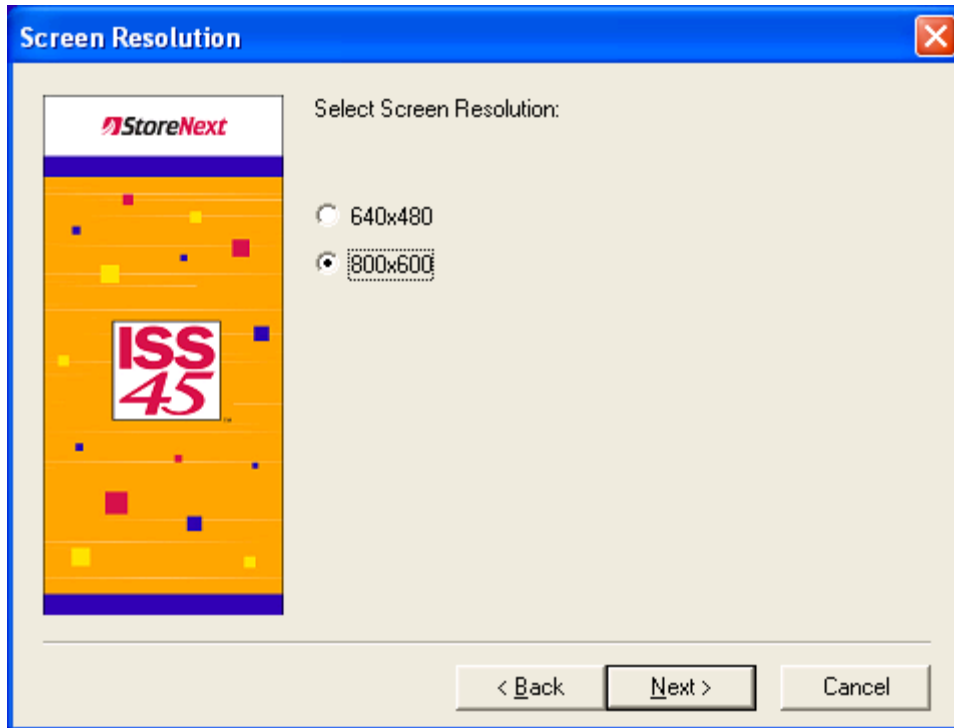


3.1.11. Ensure that 800x600 is selected, click **Next** and the (Screen Format) screen is displayed

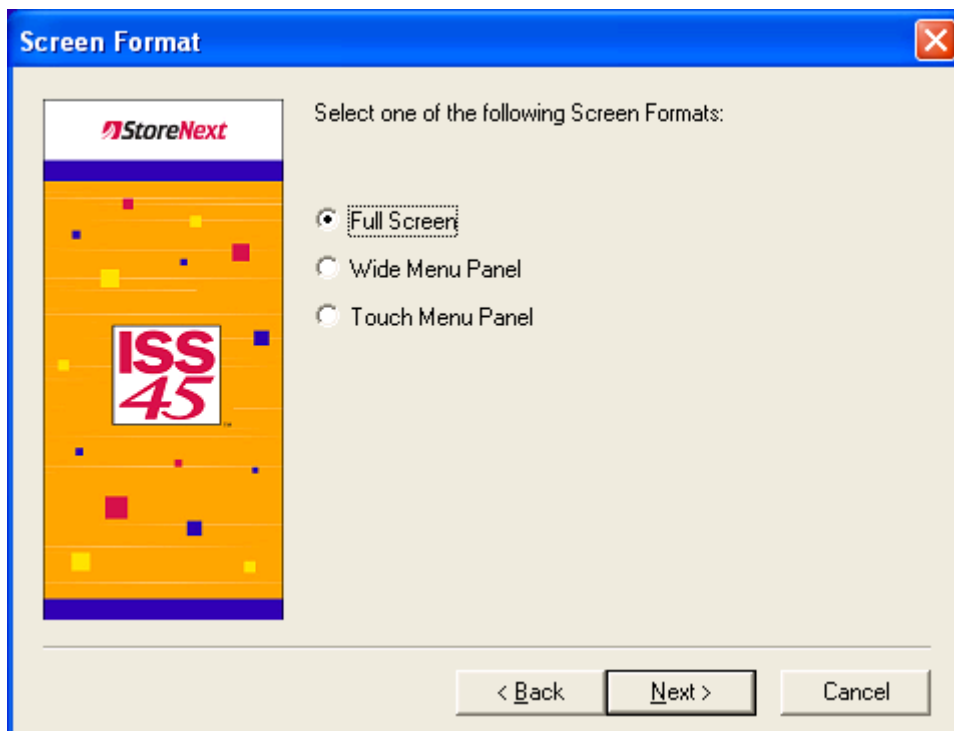


3.1.12. Select the configuration for your equipment setup
3.1.12.1. Full Screen does not provide any touch screen capabilities


- 3.1.12.2. Wide Menu Panel provides limited touch and requires some form of a keyboard (example: The TeamKey D22_D25 on the Fujitsu D22 or D25 display)
- 3.1.12.3. Touch Menu Panel provides full touch screen support and does not required any additional keyboards
- 3.1.13. Click **Next** and the (Color Configuration) screen is displayed

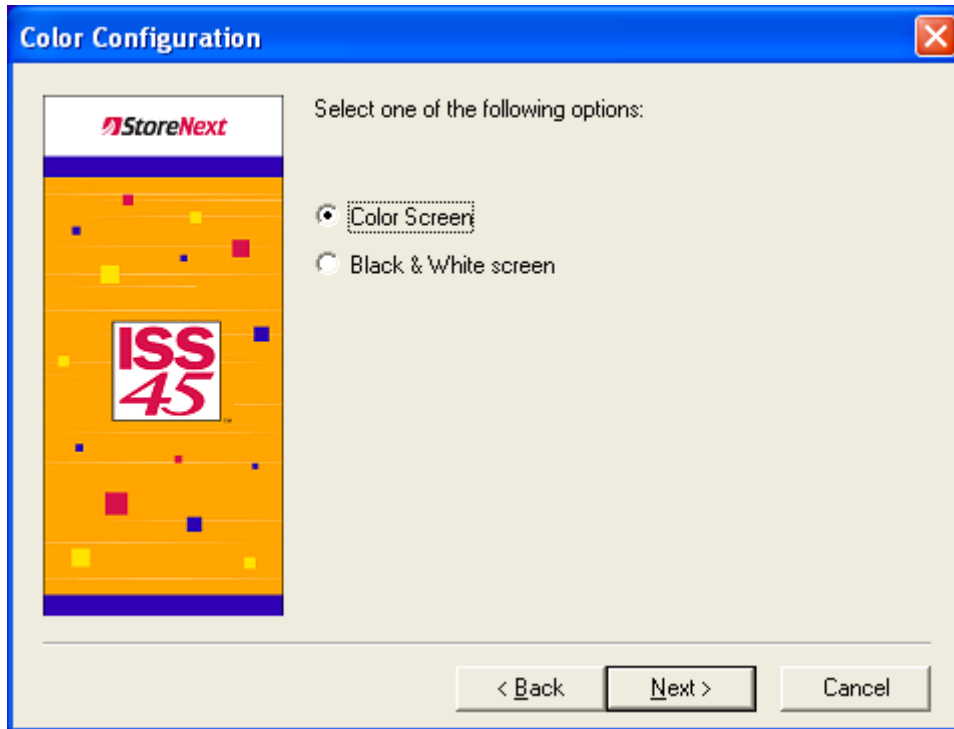

- 3.1.14. Ensure Color Screen is selected, click **Next** and the (VGA Configuration) screen is displayed

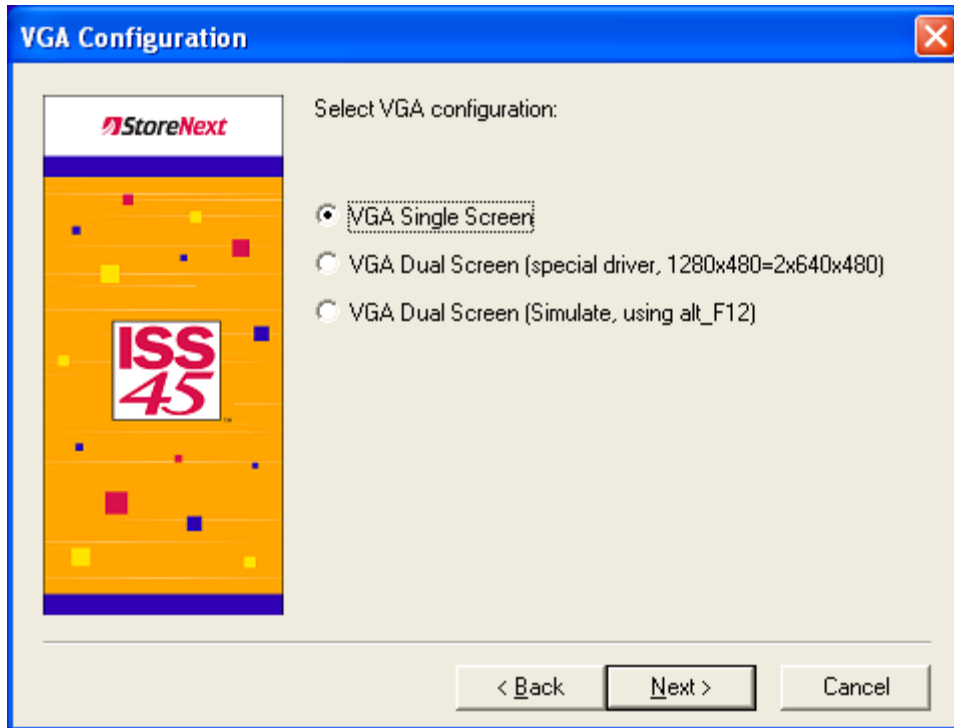

3.1.15. Ensure VGA Single Screen is selected, click **Next** and the (Hardware Type) screen is displayed

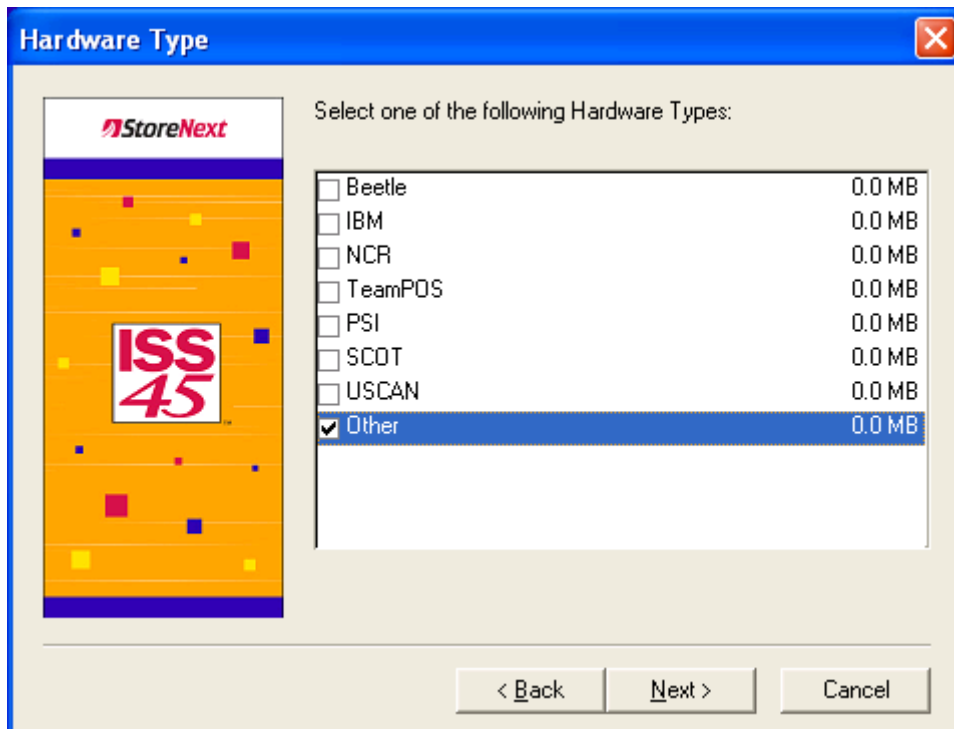

3.1.16. **NOTE: This step is critical and you need to ensure type Other is selected and NOT TeamPOS, click Next and the (POS Terminal Number) screen is displayed**


POS Terminal Number

Enter POS Terminal Number
[Valid range: 1-240]


POS No.: 4

< Back Next > Cancel


3.1.17. Enter the POS terminal number, click Next and the (Use Auto Logon?) screen is displayed

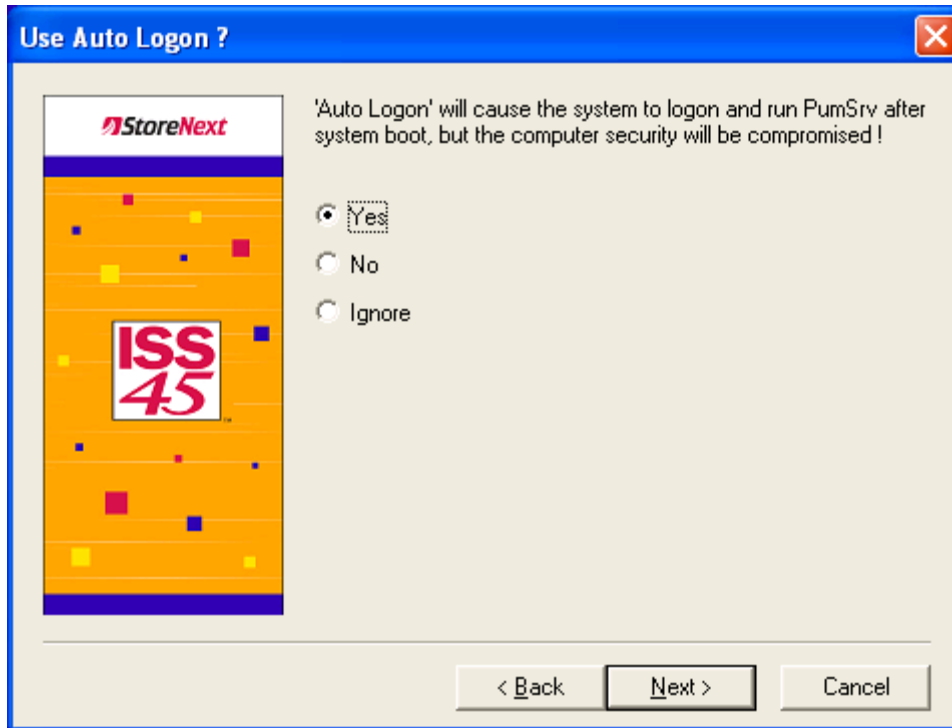


3.1.18. Ensure Yes is selected, click **Next** and the next (Use Auto Logon) screen is displayed

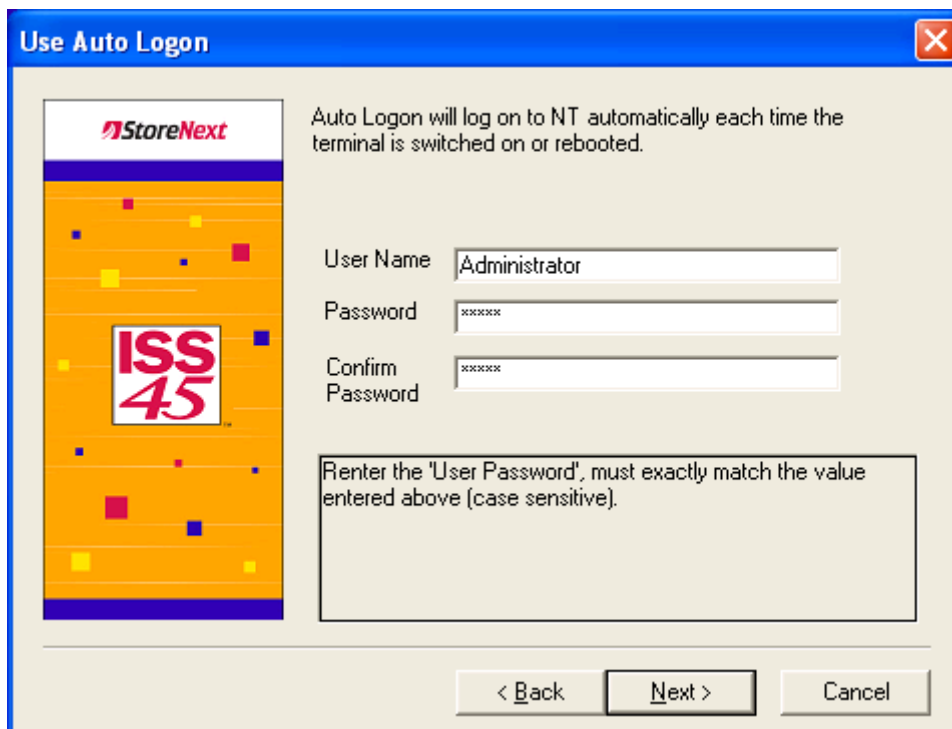


3.1.19. Fill in the Password and Confirm for your Administrator, click **Next** and the (Start Copying Files) screen is displayed

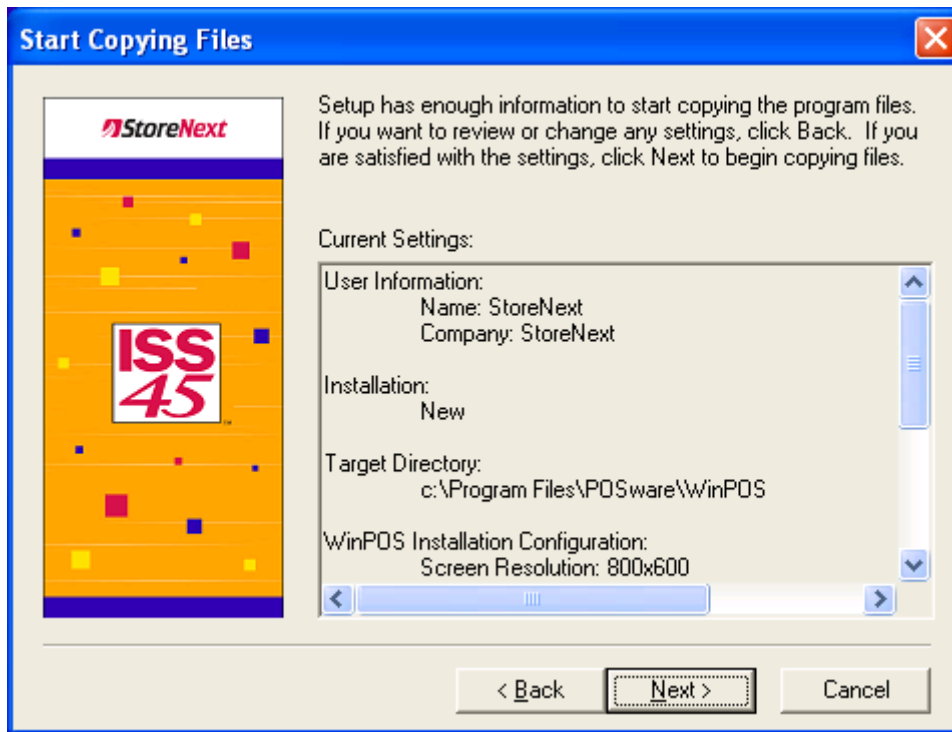

3.1.20. Review the information, click **Next** and the (HOSTS – Notepad) screen is displayed

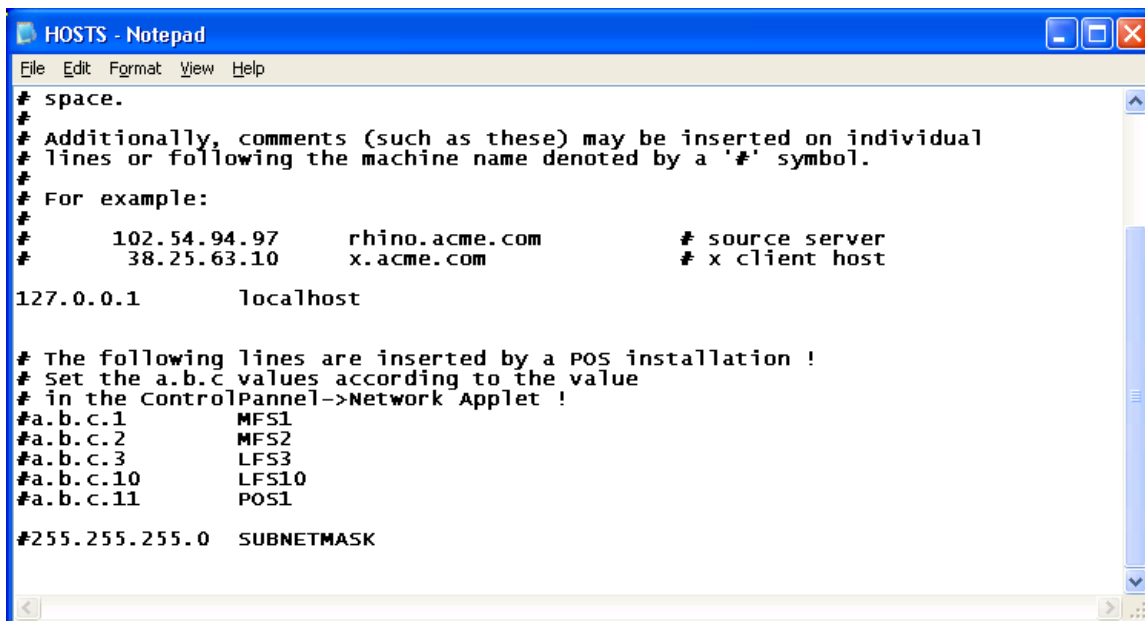

3.1.21. Make the necessary changes to the HOSTS file to match your network IP addressing and remove the # symbol on the items required for your store environment (example: see the following edited screen)

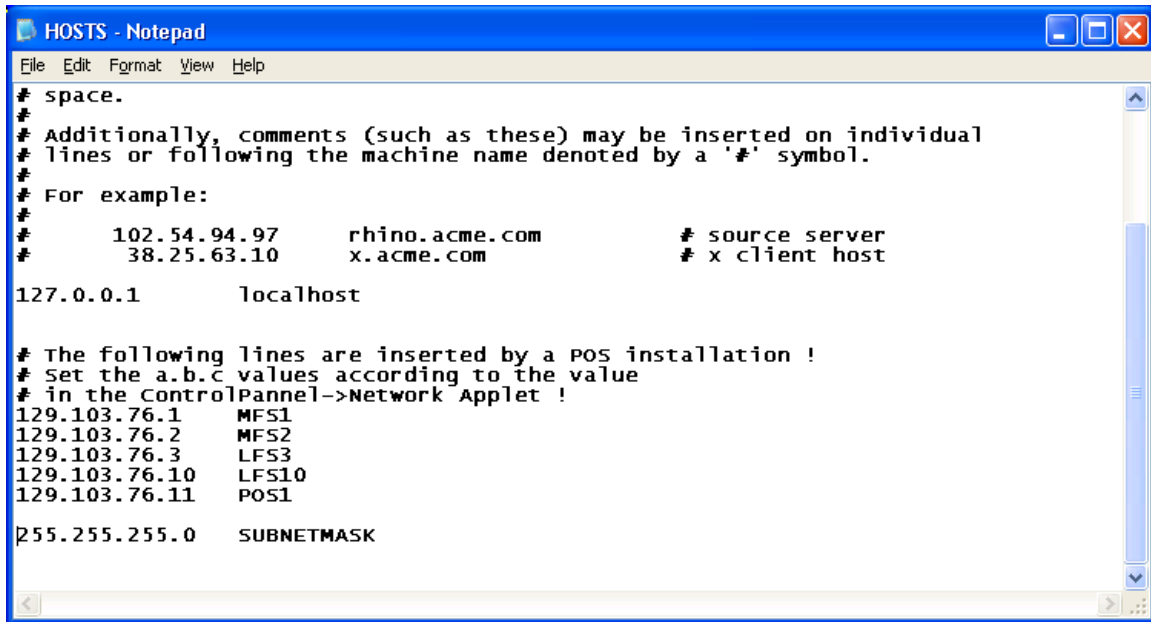


```
# space.
#
# Additionally, comments (such as these) may be inserted on individual
# lines or following the machine name denoted by a '#' symbol.
#
# For example:
#
#       102.54.94.97      rhino.acme.com      # source server
#       38.25.63.10     x.acme.com        # x client host
127.0.0.1      localhost


# The following lines are inserted by a POS installation !
# Set the a.b.c values according to the value
# in the ControlPannel->Network Applet !
129.103.76.1   MFS1
129.103.76.2   MFS2
129.103.76.3   LFS3
129.103.76.10 LFS10
129.103.76.11 POS1

255.255.255.0 SUBNETMASK
```

3.1.22. Select File | Exit after making your changes and the following is displayed

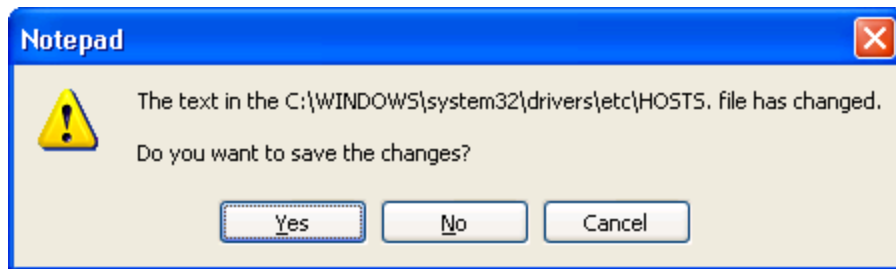

3.1.23. Click **Yes** and the installation continues until the (Setup Complete) screen is displayed

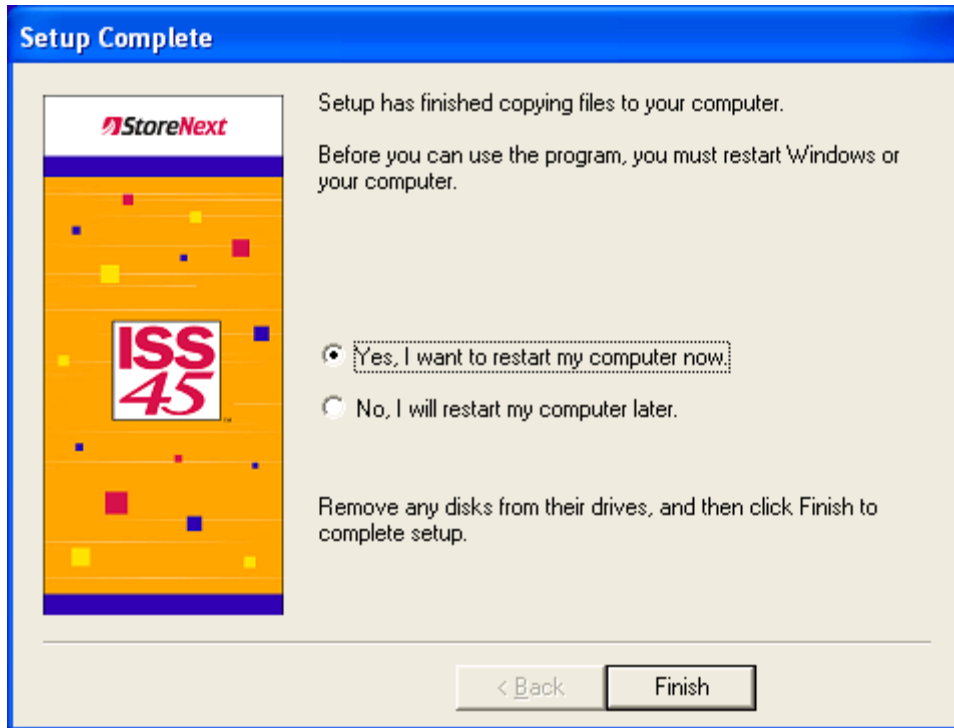

3.1.24. Ensure Yes is selected and click Finish

3.1.25. The computer will restart and start loading ISS45

3.1.26. Exit to the Windows Desktop when the ISS45 load has finished for further installation (example: adding payments, Xinetix, Catalina, applying patches)

4. ISS45 Peripheral Setup for Connected Devices on the TP3000XL2

4.1. 92U USB Keyboard


NOTE: The 92U keyboard does not use OPOS. Look in windows device manager and see what COM port is showing for the 92U USB connected keyboard. This should normally be COM7 if changed from the default setting COM6 during the install above for the 92U.

4.1.1. ISS45 V7 Configuration

4.1.1.1. In ISS45 V7 POST Configuration 2 screen set the Port to 7 or the setting that shows in windows device manager for the 92U keyboard COM port

4.1.2. ISS45 V8 Configuration

4.1.2.1. In ISS45 V8 Post Configuration screen WinPOS H/W Tab set the Keyboard type to ICL Post KBD and Port to 7 or the setting that shows in windows device manager for the 92U keyboard COM port

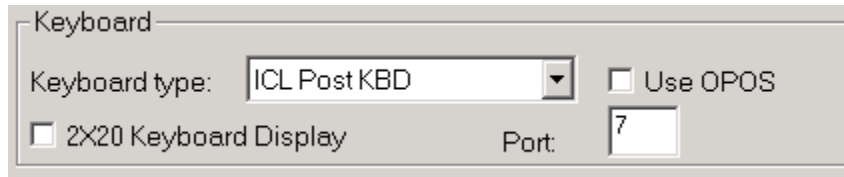

4.2. VF60 USB 2x20 Display

4.2.1. ISS45 V7 Configuration

- 4.2.1.1. In ISS45 V7 POST Configuration 1 screen leave COM 0, IRQ 0, Type None and Baud rate None

```
Customer Display:
COM.....> 0
IRQ.....> 0
Type.....> None [↓]
Baud rate...> None [↓]
```

- 4.2.1.2. In the ISS45 V7 WinPOS.ini file, add the following two lines


NOTE: The following lines are case sensitive

OposLineDisplay=Yes

DefaultLineDisplayName=VF60-1

4.2.2. ISS45 V8 Configuration

- 4.2.2.1. In ISS45 V8 Post Configuration screen WinPOS H/W Tab set Customer Display Type None, Baud Rate None, Port 0 and check Use OPOS

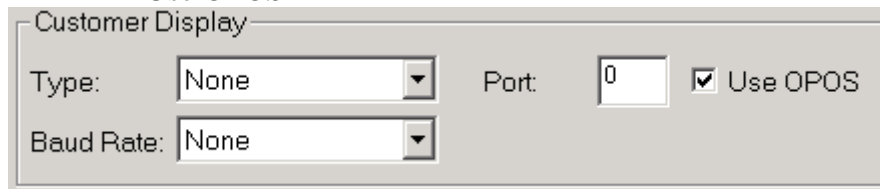

- 4.2.2.2. In ISS45 V8 Post Configuration screen E-Ticket - OPOS tab set the OPOS Line Display Driver Name to VF60-1

OPOS Line Display Driver Name: VF60-1

4.3. Epson 6000II/6000III RS232 Printer or 6000IIU/6000IIIU USB Printer, MICR and optionally connected Cash Drawer

4.3.1. ISS45 V7 Configuration (Prior to V7.1.3.0-050 release)

- 4.3.1.1. In ISS45 V7 POST Configuration 1 screen set type EPSON H6000, Port None, MICR reader in use checked if your printer has one, OPOS checked and check Enable Check Flip if your printer supports flip

```
Printer:
Type.....> EPSON H6000 [↓]
Port.....> None [↓]
MICR reader in use...> [✓] OPOS..> [✓]
Enable Check Flip.....> [ ]
```

- 4.3.1.2. This set only if the single cash drawer is connected to the printer. In ISS45 V7 POST Configuration 1 screen set Drawer in use checked and connected to printer checked

```
Drawer in use.....▶ [X]
connected to printer.▶ [X]
Dual drawer enabled..▶ [ ]
```

- 4.3.1.3. In the ISS45 V7 WinPOS.ini file, add the following lines

NOTE: The following lines are case sensitive

NOTE: If the LDN name installed above was TM-H6000II

DefaultPrinterName=TM-H6000II

OposMicr=Yes

DefaultMicrName=TM-H6000II

The following lines only if using a cash drawer connected to the printer

OposDrawer=Yes

DefaultDrawerName=TM-H6000II

NOTE: If the LDN name installed above was TM-H6000IIU

DefaultPrinterName=TM-H6000IIU

OposMicr=Yes

DefaultMicrName=TM-H6000IIU

The following lines only if using a cash drawer connected to the printer

OposDrawer=Yes

DefaultDrawerName=TM-H6000IIU

NOTE: If the LDN name installed above was TM-H6000III

DefaultPrinterName=TM-H6000III

OposMicr=Yes

DefaultMicrName=TM-H6000III

The following lines only if using a cash drawer connected to the printer

OposDrawer=Yes

DefaultDrawerName=TM-H6000III

NOTE: If the LDN name installed above was TM-H6000IIIU

DefaultPrinterName=TM-H6000IIIU

OposMicr=Yes

DefaultMicrName=TM-H6000IIIU

The following lines only if using a cash drawer connected to the printer

OposDrawer=Yes

DefaultDrawerName=TM-H6000IIIU

- 4.3.2. ISS45 V7 Configuration (V7.1.3.0-050 and above)

- 4.3.2.1. In ISS45 V7 POST Configuration 1 screen set type EPSON H6000, Port None, MICR reader in use checked if your printer has one, OPOS checked and check Enable Check Flip if your printer supports flip

```
Printer:
Type.....▶ EPSON H6000 [↓]
Port.....▶ None [↓]
MICR reader in use...▶ [✓] OPOS...▶ [✓]
Enable Check Flip....▶ [ ]
```

- 4.3.2.2. In ISS45 V7 POST Configuration 1 screen set Drawer in use checked and connected to printer checked. Dual drawer enabled checked if you are using dual cash drawers

```
Drawer in use.....▶ [✓]
connected to printer▶ [✓]
Dual drawer enabled..▶ [ ]
```

- 4.3.2.3. In the ISS45 V7 WinPOS.ini file, add the following lines

NOTE: The following lines are case sensitive

NOTE: If the LDN name installed above was TM-H6000II

DefaultPrinterName=TM-H6000II

OposMicr=Yes

DefaultMicrName=TM-H6000II

The following lines only if using a cash drawer connected to the printer

OposDrawer=Yes

DefaultDrawer1Name=TM-H6000II **if using a single CD**

DefaultDrawer1Name=Multi_A **if using a dual CD**

DefaultDrawer2Name=Multi_B **if using a dual CD**

NOTE: If the LDN name installed above was TM-H6000IIU

DefaultPrinterName=TM-H6000IIU

OposMicr=Yes

DefaultMicrName=TM-H6000IIU

The following lines only if using a cash drawer connected to the printer

OposDrawer=Yes

DefaultDrawer1Name=TM-H6000IIU **if using a single CD**

DefaultDrawer1Name=Multi_AU **if using a dual CD**

DefaultDrawer2Name=Multi_BU **if using a dual CD**

NOTE: If the LDN name installed above was TM-H6000III

DefaultPrinterName=TM-H6000III

OposMicr=Yes

DefaultMicrName=TM-H6000III

The following lines only if using a cash drawer connected to the printer

OposDrawer=Yes

DefaultDrawer1Name=TM-H6000III **if using a single CD**


DefaultDrawer1Name=Multi_A **if using a dual CD**
DefaultDrawer2Name=Multi_B **if using a dual CD**

NOTE: If the LDN name installed above was TM-H6000IIIU
DefaultPrinterName=TM-H6000IIIU
OposMicr=Yes
DefaultMicrName=TM-H6000IIIU


The following lines only if using a cash drawer connected to the printer
OposDrawer=Yes
DefaultDrawer1Name=TM-H6000IIIU **if using a single CD**
DefaultDrawer1Name=Multi_AU **if using a dual CD**
DefaultDrawer2Name=Multi_BU **if using a dual CD**

4.3.3. ISS45 V8 Configuration

- 4.3.3.1. In ISS45 V8 Post Configuration screen WinPOS H/W Tab set Printer Type EPSON H6000, Baud Rate: None, Port blank, check OPOS , check MICR if printer has one and Check flip if printer supported

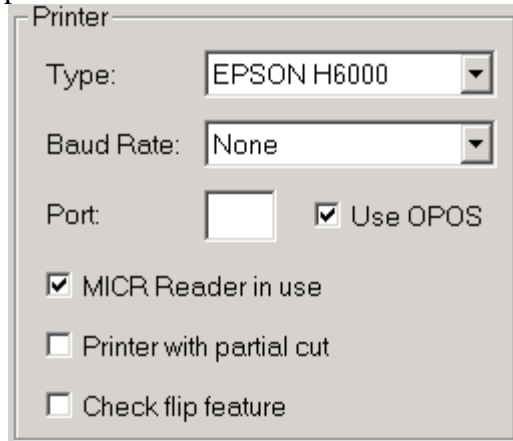

- 4.3.3.2. In ISS45 V8 Post Configuration screen E-Ticket - OPOS tab set the OPOS Printer Driver Name to TM-H6000II, TM-H6000IIU, TM-H6000III or TM-H6000IIIU based on the LDN used during Printer installation

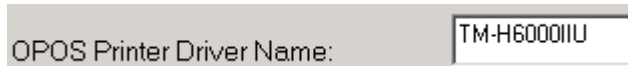

- 4.3.3.3. In ISS45 V8 Post Configuration screen E-Ticket – OPOS tab set the OPOS MICR Driver Name to TM-H6000II, TM-H6000IIU, TM-H6000III or TMH6000IIIU based on the LDN used during MICR installation



- 4.3.3.4. In ISS45 V8 Post Configuration screen WinPOS H/W Tab set Drawer type Connected to printer if you have your cash drawer connected to the printer and Use OPOS checked. (**Single Drawer**).

Drawer
 Drawer type: Use OPOS
 Dual Drawer

- 4.3.3.5. In ISS45 V8 Post Configuration screen E-Ticket – OPOS tab set the OPOS Drawer 1 Driver Name to TM-H6000II, TM-H6000IIU, TM-H6000III or TM-H6000IIIU based on the LDN used during drawer installation

OPOS Drawer 1 Driver Name:

- 4.3.3.6. In ISS45 V8 Post Configuration screen WinPOS H/W Tab set Drawer type Connected to printer if you have your cash drawers connected to the printer, Use OPOS checked.and Dual Drawer checked (**Dual Drawers**).

Drawer
 Drawer type: Use OPOS
 Dual Drawer

- 4.3.3.7. In ISS45 V8 Post Configuration screen E-Ticket – OPOS tab set the OPOS Drawer 1 Driver Name to Multi_A or Multi_AU and OPOS Drawer 2 Driver Name to Multi_B or Multi_BU based on the LDN used during drawer installation

OPOS Drawer 1 Driver Name:
 OPOS Drawer 2 Driver Name:

4.4. PSC/DataLogic 8200, 8300, 8400 , 8500or 8500XT USB Scanner and Scale configuration

4.4.1. ISS45 V7 Configuration

- 4.4.1.1. In ISS45 V7 POST Configuration 1 screen set Scanner COM 0, IRQ 0, Baud Rate None, Data Bits 0, Parity None and Handshake unchecked

```

Scanner:
COM.....> 0
IRQ.....> 0
Baud Rate...> None [↓]
Data Bits...> 0
Parity.....> None [↓]
Handshake...> [ ]
  
```

- 4.4.1.2. In ISS45 V7 POST Configuration 1 screen set Scale Type None, COM None, IRQ 0 and Baud Rate None

```

Scale :
Type.....> None           [↓]
COM.....> None           [↓]
IRQ.....> 0
Baud Rate...> None       [↓]

```

4.4.1.3. In the ISS45 V7 WinPOS.ini file, add the following lines

NOTE: The following lines are case sensitive

OposScanner=Yes

DefaultScannerName=TableScanner

OposScale=Yes

DefaultScaleName=TableScale


4.4.2. ISS45 V8 Configuration

4.4.2.1. In ISS45 V8 Post Configuration screen WinPOS H/W Tab set Scanner1 Port 0, check Use OPOS, Baud Rate None, Parity None and Data bits blank

4.4.2.2. In ISS45 V8 Post Configuration screen E-Ticket – OPOS tab set OPOS Scanner Driver Name to TableScanner

4.4.2.3. In ISS45 V8 Post Configuration screen WinPOS H/W Tab set Scale Port blank, check Use OPOS, Type blank, Baud Rate blank, Data bits blank, Parity blank and check Display constant weight

- 4.4.2.4. In ISS45 V8 Post Configuration screen E-Ticket – OPOS tab set OPOS Scale Driver Name to TableScale

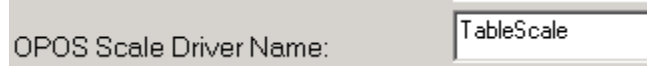

4.5. PSC 2500,6500, QD2130 Hand Held USB Scanner

4.5.1. ISS45 V7 Configuration


- 4.5.1.1. In ISS45 V7 POST Configuration 1 screen set Scanner COM 0, IRQ 0, Baud Rate None, Data Bits 0, Parity None and Handshake unchecked




- 4.5.1.2. In the ISS45 V7 WinPOS.ini file, add the following lines
NOTE: The following lines are case sensitive
 OposScanner=Yes
 DefaultScannerName=HandScanner

4.5.2. ISS45 V8 Configuration

- 4.5.2.1. In ISS45 V8 Post Configuration screen WinPOS H/W Tab set Scanner1 Port 0, check Use OPOS, Baud Rate None, Parity None and Data bits blank

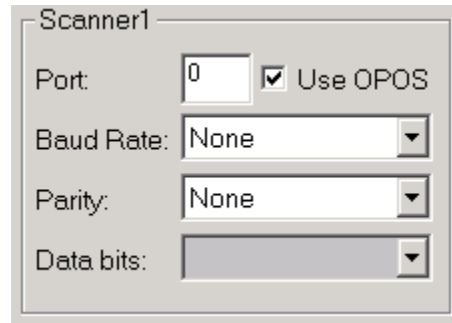

- 4.5.2.2. In ISS45 V8 Post Configuration screen E-Ticket – OPOS tab set OPOS Scanner Driver Name to HandScanner



4.6. PSC 1000i Table USB Scanner

4.6.1. ISS45 V7 Configuration

- 4.6.1.1. In ISS45 V7 POST Configuration 1 screen set Scanner COM 0, IRQ 0, Baud Rate None, Data Bits 0, Parity None and Handshake unchecked



4.6.1.2. In the ISS45 V7 WinPOS.ini file, add the following lines


NOTE: The following lines are case sensitive

OposScanner=Yes


DefaultScannerName=TableScanner

4.6.2. ISS45 V8 Configuration

4.6.2.1. In ISS45 V8 Post Configuration screen WinPOS H/W Tab set Scanner1 Port 0, check Use OPOS, Baud Rate None, Parity None and Data bits blank

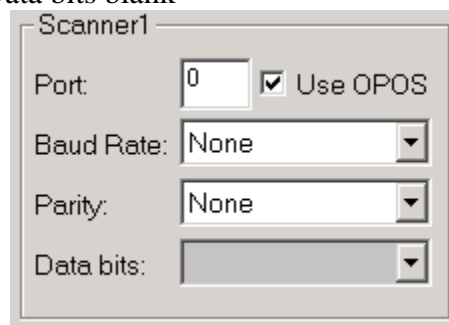

4.6.2.2. In ISS45 V8 Post Configuration screen E-Ticket – OPOS tab set OPOS Scanner Driver Name to HandScanner




4.7. Dual USB OPOS DataLogic Scanner Support (V8.1.3.2-050 and above)

4.7.1. ISS45 V8.1.3.2-050 and Above Configuration

Note: One scanner must be set as a hand scanner and the other scanner must be set as a table scanner

4.7.1.1. In ISS45 V8 Post Configuration screen WinPOS H/W Tab set Scanner1 & Scanner2 check Use OPOS

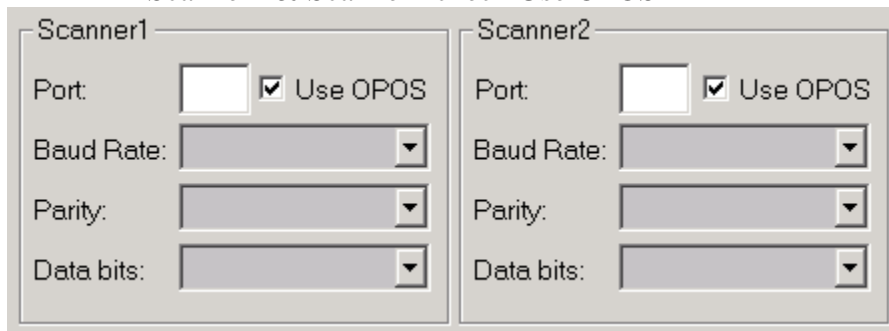

4.7.1.2. In ISS45 V8 Post Configuration screen E-Ticket – OPOS tab set OPOS Scanner 1 Driver Name to TableScanner

OPOS Scanner 2 Driver Name to HandScanner

OPOS Scanner 1 Driver Name:	TableScanner
OPOS Scanner 2 Driver Name:	HandScanner

4.8. TPG A776 or A794 USB Printer

4.8.1. ISS45 V7 Configuration (Prior to V7.1.3.0-050)

- 4.8.1.1. In ISS45 V7 POST Configuration 1 screen set Printer type OPOS Generic, Port None, MICR reader in use checked for the A776 printer and unchecked for the A794 printer, OPOS checked and Enable Check Flip unchecked

```
Printer:
Type.....> Opos Generic [↓]
Port.....> None [↓]
MICR reader in use...> [✓] OPOS...> [✓]
Enable Check Flip.....> [ ]
```

- 4.8.1.2. In ISS45 V7 POST Configuration 1 screen set check Drawer in use and check connected to printer if the cash drawer is also connected to the printer

```
Drawer in use.....> [✓]
connected to printer.> [✓]
Dual drawer enabled..> [ ]
```

- 4.8.1.3. In the ISS45 V7 WinPOS.ini file, add the following lines

NOTE: The following lines are case sensitive

NOTE: If using an A776 printer

DefaultPrinterName=A776
OposMicr=Yes
DefaultMicrName=A776

The following applies only if the cash drawer is connected to the printer

OposDrawer=Yes
DefaultDrawerName=A776-1
DrawerNegativeCheck=Yes

NOTE: If using an A794 printer

DefaultPrinterName=A794

The following applies only if the cash drawer is connected to the printer

OposDrawer=Yes
DefaultDrawerName=A794-1
DrawerNegativeCheck=Yes

4.8.2. ISS45 V7 Configuration (V7.1.3.0-050 and above)

- 4.8.2.1. In ISS45 V7 POST Configuration 1 screen set Printer type OPOS Generic, Port None, MICR reader in use checked for the A776

printer and unchecked for the A794 printer, OPOS checked and Enable Check Flip unchecked

```
Printer:
Type.....> Opos Generic [↓]
Port.....> None [↓]
MICR reader in use...> [✓] OPOS...> [✓]
Enable Check Flip.....> [ ]
```

- 4.8.2.2. In ISS45 V7 POST Configuration 1 screen set check Drawer in use and also check connected to printer if the cash drawer is connected to the printer

```
Drawer in use.....> [✓]
connected to printer.> [✓]
Dual drawer enabled..> [ ]
```

- 4.8.2.3. In the ISS45 V7 WinPOS.ini file, add the following lines

NOTE: The following lines are case sensitive

NOTE: If using an A776 printer

DefaultPrinterName=A776

OposMicr=Yes

DefaultMicrName=A776

The following applies only if the cash drawer is connected to the printer

OposDrawer=Yes

DefaultDrawer1Name=A776-1

DrawerNegativeCheck=Yes

NOTE: If using an A794 printer

DefaultPrinterName=A794

The following applies only if the cash drawer is connected to the printer


OposDrawer=Yes

DefaultDrawer1Name=A794-1

DrawerNegativeCheck=Yes

4.8.3. ISS45 V8 Configuration

- 4.8.3.1. In ISS45 V8 Post Configuration screen WinPOS H/W Tab set Printer Type OPOS Generic, Baud Rate None, Port 0, check Use OPOS and check MICR for the A776 printer and uncheck MICR for A794 printer

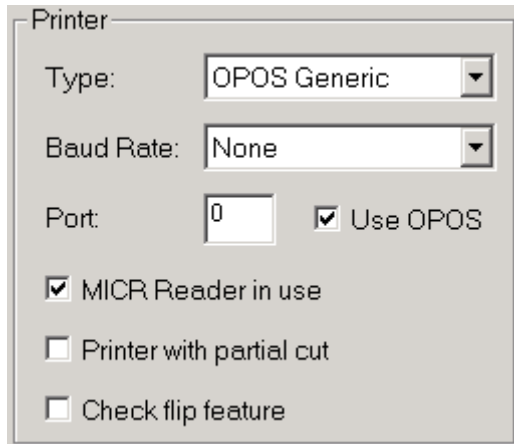

Printer

Type: OPOS Generic

Baud Rate: None


Port: 0 Use OPOS

MICR Reader in use

Printer with partial cut

Check flip feature

- 4.8.3.2. In ISS45 V8 Post Configuration screen WinPOS H/W Tab set Drawer type Connected to the printer if using a cash drawer connected to the printer and check Use OPOS

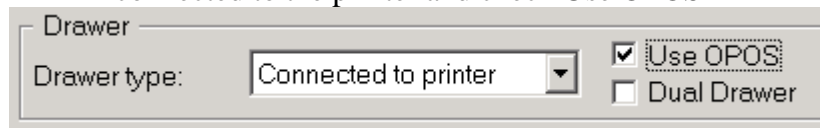


Drawer

Drawer type: Connected to printer Use OPOS

Dual Drawer


- 4.8.3.3. In ISS45 V8 Post Configuration screen E-Ticket – OPOS tab set OPOS Driver Name to A776 or A794. Note the Drawer has a -1 and the A794 does not contain a MICR

A776 example below

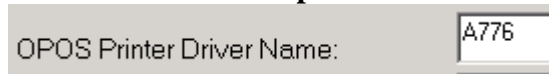

OPOS Printer Driver Name: A776

The following applies only if the cash drawer is connected to the printer

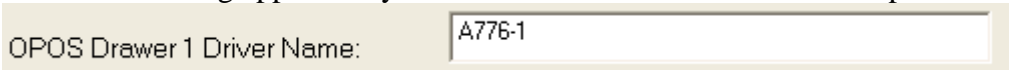


OPOS Drawer 1 Driver Name: A776-1




OPOS MICR Driver Name: A776 Use OPOS MICR

A794 example below

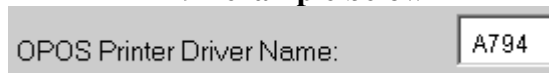

OPOS Printer Driver Name: A794

The following applies only if the cash drawer is connected to the printer

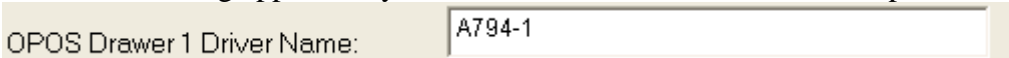

OPOS Drawer 1 Driver Name: A794-1

4.9. Fujitsu Cash Drawer Connected to TeamPoS 3000XL2

4.9.1. ISS45 V7 Configuration (Prior to V7.1.3.0-050 release)

- 4.9.1.1. In ISS45 V7 POST Configuration 1 screen check Drawer in use

```
Drawer in use.....▶ [√]
connected to printer.▶ [ ]
Dual drawer enabled..▶ [ ]
```

4.9.1.2. In the ISS45 V7 WinPOS.ini file, add the following two lines

NOTE: The following lines are case sensitive

OposDrawer=Yes

DefaultDrawerName=TP3K_CD1

4.9.2. ISS45 V7 Configuration (V7.1.3.0-050 and above single and dual drawer)

4.9.2.1. In ISS45 V7 POST Configuration 1 screen check Drawer in use

```
Drawer in use.....▶ [√]
connected to printer.▶ [ ]
Dual drawer enabled..▶ [ ]
```

4.9.2.2. In ISS45 V7 POST Configuration 1 screen check Drawer in use and check Dual drawer enabled for dual cash drawer support

```
Drawer in use.....▶ [√]
connected to printer.▶ [ ]
Dual drawer enabled..▶ [√]
```

4.9.2.3. In the ISS45 V7 WinPOS.ini file, add the following two or three lines

NOTE: The following lines are case sensitive

OposDrawer=Yes


DefaultDrawer1Name=TP3K_CD1

NOTE: Add the following line for the dual cash drawer setup


DefaultDrawer2Name=TP3K_CD2

4.9.3. ISS45 V8 Configuration (Single Drawer)

4.9.3.1. In ISS45 V8 Post Configuration screen WinPOS H/W Tab set Drawer Type Basic and check Use OPOS

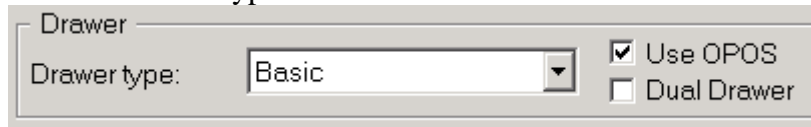


4.9.3.2. In ISS45 V8 Post Configuration screen E-Ticket - OPOS tab set the OPOS Drawer Driver Name to TP3K_CD1

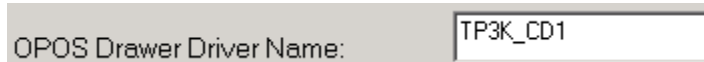

4.9.4. ISS45 V8 Configuration (Dual Drawer V8.1.2.1-050 and above only)

4.9.4.1. In ISS45 V8 Post Configuration screen WinPOS H/W Tab set Drawer Type Basic and check Use OPOS



4.9.4.2. In ISS45 V8 Post Configuration screen E-Ticket - OPOS tab set the OPOS Drawer Driver Name to TP3K_CD1

OPOS Drawer 1 Driver Name:	TP3K_CD1
OPOS Drawer 2 Driver Name:	TP3K_CD2

4.10. D22_D25 MSR and Key Lock

4.10.1. ISS45 V7 Configuration

4.10.1.1. In ISS45 V7 POST Configuration 2 screen set Keyboard port to 0 since the D22_D25 keyboard connects to the USB port



4.10.1.2. In the ISS45 V7 WinPOS.ini file, add the following lines

NOTE: The following lines are case sensitive

OposKeyBoard=Yes

DefaultKeyBoardName=

OposMsr=Yes

DefaultMsrName=D22_D25_MSR

OposKeyLock=Yes

DefaultKeyLockName=D22_D25_KLK

4.10.2. ISS45 V8 Configuration

4.10.2.1. In ISS45 V8 Post Configuration screen WinPOS H/W Tab set Keyboard type: to ICL Post KBD, check Use OPOS and Port: 0

Keyboard	
Keyboard type:	ICL Post KBD <input type="checkbox"/> Use OPOS
<input type="checkbox"/> 2X20 Keyboard Display	Port: 0

4.10.2.2. In ISS45 V8 Post Configuration screen E Ticket – OPOS tab set OPOS MSR Driver Name to D22_D25_MSR and check Use OPOS MSR

OPOS MSR Driver Name:	D22_D25_MSR	<input checked="" type="checkbox"/> Use OPOS MSR
-----------------------	-------------	--

4.10.2.3. In ISS45 V8 Post Configuration screen E Ticket – OPOS tab set OPOS KeyLock Driver Name to D22_D25_KLK and check Use OPOS KeyLock

OPOS KeyLock Driver Name:	D22_D25_KLK	<input checked="" type="checkbox"/> Use OPOS KeyLock
---------------------------	-------------	--


4.11. HyperCom 4100/4250 USB Pin Pad

NOTE: This setup is only for setting up the HyperCom 4100/4250 when using the USB connection. The RS232 setup is the same as before.

4.11.1. ISS45 V7 Configuration

4.11.1.1. In ISS45 V7 POST Configuration 1 screen, click on the Auth/APT button to bring up the POST Auth/APT Configuration screen.


4.11.1.2. Authorization Type is EFT, COM needs to be a number in the range of 1-4 to activate the USB Pin Pad. A blank or 0 value will not work. Use 2 if you are unsure.

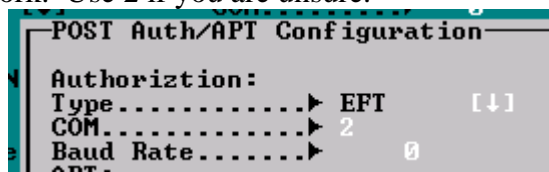

4.11.2. ISS45 V8 Configuration

4.11.2.1. In ISS45 V8 Post Configuration screen, click on the Auth – EFT –If tab at the top.


4.11.2.2. Authorization Type is EFT, COM needs to be a number in the range of Com1 – Com4 to activate the USB Pin Pad. None on the dropdown with not work.

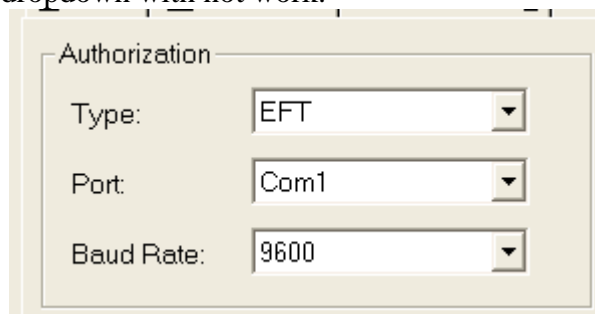

5. Further installation

5.1. Scope of this document

- 5.1.1. This document is not intended to cover past this point of the installation of the TeamPOS 3000XL2
- 5.1.2. Installation of Payment systems, etc., are handled exactly the same as they are on any other machine
- 5.1.3. As a final reminder, you need to apply one of the patches (cc, mtX, or us) to the ISS45 software load for configuration or updates

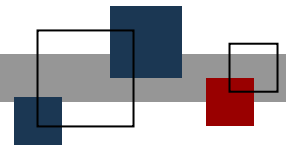

© StoreNext Retail Technologies LLC 2010

StoreNext Retail Technologies LLC endeavors to ensure that the information in this document is correct and fairly stated but does not accept liability for any error or omission.

The development of StoreNext products and services is continuous and published information may not be up to date. It is important to check the current position with StoreNext. This document is not part of a contract or license save insofar as may be expressly agreed.