

Thank you for purchasing the TeamPad 7500

This guide shows the major operator controls and their use, provides information on charging and replacing the main battery, lists some basic troubleshooting information, and offers procedures to be followed and actions to be avoided. We recommend that you keep this guide with the TeamPad 7500. Following the instructions in this guide can ensure that the TeamPad 7500 performs reliably.

Troubleshooting

Symptom	Diagnostic Procedure	Corrective Action
<i>Battery doesn't hold charge for very long</i>	1. Is the battery fully charged?	Yes: Go to step 2. No: Charge the battery fully or replace with a fully charged battery.
	2. Recharge the battery after it has been fully discharged and check how long a charge is held. Battery should be rechargeable about 500 times.	Go to step 3.
	3. Does the unit operate properly when the battery is replaced with a new fully charged battery?	Yes: do not use the removed battery. No: Probable hardware error on main circuit board
<i>System does not communicate with server</i>	1. Are the network settings correct for your server?	Yes: go to step 3. No: Go to step 2.
	2. Update network settings. Refer to users guide for network setting information.	
	3. Does the access point indicate that you are connected?	Yes: Go to step 4 No: Troubleshoot RF card or network.
	4. Is the server configured correctly?	Yes: Call for technical support. No: Troubleshoot server configuration.
<i>Battery status LED does not light while charging</i>	1. Is the charger connected correctly?	Yes: Go to step 2. No: Connect the charger correctly.
	2. Does the LED light when another charger/adaptor is used?	Yes: Probable hardware error with charger. No: Go to step 3.
	3. Does the LED go out when the charger is connected?	Yes: Battery is already fully charged. No: Possible hardware fault.

Cleaning

Clean the case and display with a damp or a fine cloth, such as those used for cleaning eyeglasses. If you use a cleaning solution use one that is oil free, wax free and non-abrasive. Do not spray a cleaning solution directly on the unit. Do not let chemicals or solutions remain on the handheld for an extended period of time.

ICL
Handheld Systems
11085 N. Torrey Pines Road
La Jolla, CA 92037
Tel: 800-228-8683
Fax: 858-457-2701
www.iclhandheld.com

Millennium House
Thames Valley Park Drive
Reading, UK RG61RB
Tel: +44 (0) 118 938 3000
Fax: +44 (0) 118 938 3020
rproducts@iclretail.icl.com

ICL Doc #
90000047
Version 1.0

TeamPad 7500 Quick Reference Guide



ICL



*Providing Lightweight,
Rugged Solutions for
Mobile Environments*



TeamPad 7500 Controls and Switches

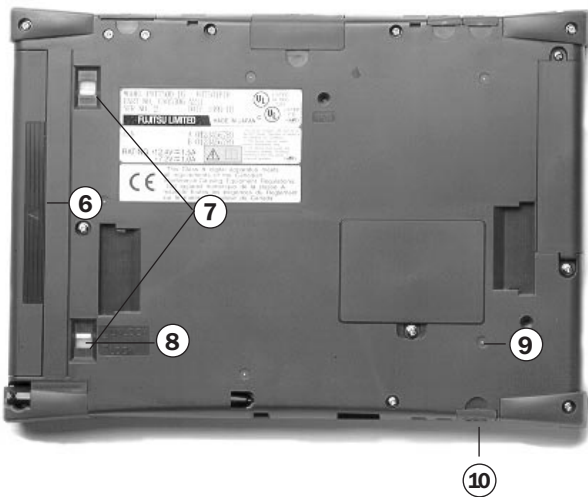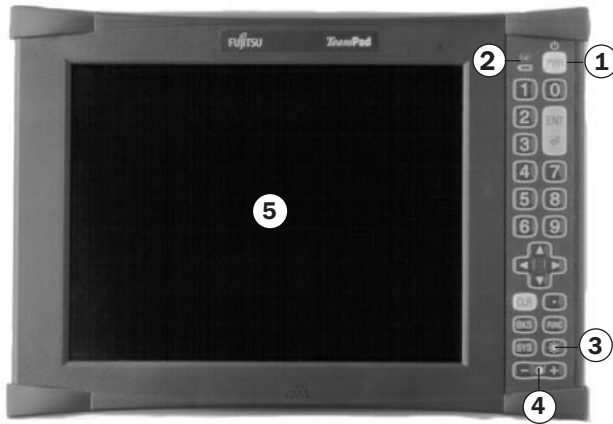

- ① Power Switch[†]
- ② Battery Status LED
- ③ Backlight
- ④ 2 Contrast Switches
- ⑤ Touch screen
- ⑥ Main Battery
- ⑦ Battery Locks
- ⑧ Charger Lock Switch
- ⑨ Reset Switch
- ⑩ Charger Connector

Operator Controls

Power Switch[†] Charge the battery before using the TeamPad 7500. Press the power switch to turn the power on. Hold the switch down for at least 2.5 seconds. The battery status LED turns green while the battery is charging. The LED is unlit when the battery is adequately charged.

Screen Contrast Press the (+) button to make the screen brighter. Press the (-) button to make the screen darker.

Backlight Press the backlight switch to adjust the brightness of the backlight. The backlight will cycle through one of four brightness levels each time the switch is pressed. Only use the backlight if needed, prolonged use of the backlight decreases battery life and causes the main battery to require recharging more often.

Battery Status LED Green indicates unit is powering off or is being charged. The LED is unlit when unit is off or when adequately charged. Flashing red indicates that the main battery needs to be charged or is defective or improperly installed.

Main Battery Charging

The main battery can be charged while power is supplied to the unit with a charger/adaptor. About 2.5 hours are required to charge completely. To charge the battery with a charger adaptor, follow these steps:

1. Terminate any active software application. Log off from the server. The unit will automatically power itself off.
2. Check that the main battery is mounted in the TeamPad 7500 and that the battery lock switch[®] is locked.
3. Plug the charger/adaptor into an AC outlet. Make sure the power requirements printed on the charger match your local power supply.
4. Plug in the charger/adaptor into the charger connector[®] on the TeamPad 7500.
5. The battery LED lights green to indicate that the battery is charging. The LED turns off when the battery is fully charged.

Main Battery Replacement

Replace the battery when the LED flashes red or when a low battery message is displayed on the screen.

1. Turn off the unit with the power switch[®]. Unlock the battery by sliding the lower battery lock switch[®] to the UNLOCKED position.
2. Hold the upper battery lock towards the top of the unit, and slide the main battery[®] out to remove it.
3. Insert the charged main battery[®] by sliding it in. Push the main battery in as far as it will go.
4. The spring-loaded upper battery lock[®] will lock the main battery[®] in place. Slide the lower battery lock switch[®] into the LOCKED position.

Do's

- Do keep dirt away from connectors. Ensure that the rubber connector covers are in place.
- Do store the unit and replacement batteries in an area free from dust, moisture, and vibration.
- Do allow about 2.5 hours for charging a main battery. More time is needed if the TeamPad 7500 is in use during charging.
- Do charge a main battery before use if it has been in storage for a long time.
- Do dispose of expended lithium ion main batteries (when they can no longer be recharged) according to local regulations.

Don'ts

- Do not use the backlight unless necessary. Using the backlight drains the battery more quickly.
- Do not press the reset switch[®] unless necessary. The reset switch clears all memory and reboots the unit.
- Do not let water or other liquids drip onto the case. If water gets inside the unit, the unit may be damaged.